

27MHz

27MHz

49MHz

SUPER PICK-UP TRUCK

R/C Cross-Country Car



Charger and Battery



Controller



A. DIRECTIONS

1. To load battery in the controller: Open the battery cover on the controller by sliding in the direction of the arrow. Load in one 9V battery in the indicated direction. Replace the battery cover.
2. To load battery in the car body: Open the battery cover underneath the car body, and correctly connect the plug of the battery pack to the socket underneath the car body (3 pin connector, 2 are square, 1 slightly rounded. make sure the pins on the battery match up to the pins on the socket. do not force together.) Replace the battery cover.
3. Turn the power switches on the car (located just above the drivers rear tire) and on the controller to the ON position. NOTE: the car will not work unless both switches are turned on. Be sure to turn both switches to the off position while not in use.
4. Pull the trigger back on the controller and the car will advance. Push the trigger forward and the car will reverse. Release the trigger and the car will stop. While the car is advancing or reversing, you can turn the dial forward (clockwise) to turn right or backwards (counter-clockwise) to turn left. If the car is in reverse, turn the dial the opposite directions to turn left or right.
5. The steering alignment lever underneath the front tires can be used to ensure the car advances or reverses along a straight line. Adjust as necessary.
6. For best results, make sure the antenna on the controller is fully extended.

B. CAUTIONS

1. This product contains small parts. KEEP AWAY FROM CHILDREN UNDER 5.
2. If there is severe wave interference in the place where you play, please try a new location.
3. If the car slows down or loses control, please replace the battery;
4. Improper use of rechargeable (sealed) battery may lead to heat damage or leakage

- (1) Charge as directed by the user's manual for the charger;
- (2) Make sure correct +/- connection is made.
- (3) Always turn the power switches on the transmitter and on the car to OFF position after use. If you plan to store the toy for a long time, please remove the battery.
- (4) Never allow short circuit connection of the battery.
- (5) Stop use whenever the battery becomes wet, as it may cause a short circuit.
5. Never throw batteries into water or fire or try to disassemble or weld the battery.
6. Do not bend or break the antenna. Failure to do so may result in bodily harm.
7. Keep battery away from extreme temperatures, flames and humidity.
8. Make sure your hair does not become entangled with the wheels.
9. Choose a safe place when you plan to play outdoors.

C. HOW TO USE CHARGER

1. Attach the rechargeable battery pack to the charger socket. both have 3 pins. 2 are square and 1 slightly rounded. make sure to attach correctly. never force.
2. Plug the charger into a 110V socket.
3. Normal charging time is 4 to 6 hours. Never charge for more than 6 hours.
4. After charging, unplug the charger and take out the battery. Please note the battery and the charger may become a little hot while charging. this is normal.
5. To prolong the useful life of the rechargeable battery, only charge when the battery is completely depleted.

D. Radio Frequencies

There are 2 different radio frequencies available. Make sure that the frequency on the controller and the car are the same.

Red car and Purple car: radio frequency 27MHz;

Yellow car: radio frequency 49MHz.

Changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.

CAUTIONS

⚠ CAUTIONS

1. Use of Charger
Never use wet hand to touch plug or socket to avoid electric shock. Always unplug the charger after charging to avoid accidental fire risk.
2. Use of Battery
<Improper use of battery may lead to heat damage or leakage.
Please abide by the following requirements.>
*Strictly follow all directions and cautions in the user's manual.
*Never throw battery into water or fire or try to disassemble battery.
*Do not use, charge, or store battery in the vicinity of fire, high temperatures or moisture.
*Do not try to charge battery that has been fully charged, as excessive charging is very dangerous.
*Make sure the battery is installed with correct +/- connection.
*Always turn off power and remove battery after use.

Warning: This product contains small parts. Not suitable for children under 5.

Never put small parts in your mouth as this is a choking hazard.
Adult guidance is recommended when children are playing with this toy.
This car is extremely fast and powerful. it should be used outdoors only.