

HY-2610A Wireless Caller (Caller)



Press the service bottom, can transmit wireless call signal.

4. Installation Preparation:

1. Caller No.: generally, the number of caller preset as 01,02,03...10, it can be reset according to actual request by software.
2. Choose a proper position to put the controller, generally put in a open place, but must be far away from the large area metal object, avoid unnecessary signal shielding or interfere.

5. Installations And Operation:

1. This system adopts complete wireless designing, it is not need connect up and simple to construct.
2. Fix controller: choose a proper position to fix controller, there should be 220V AC power or wiring board around the position. The installation way can choose to be slung or hang on the wall.
3. The caller needn't installation, it can be used when complete setting table number
4. The teleoperator can adjust the volume of prompt voice of controller. When the volume set up to 0, it is in mute states. The teleoperator can clear the messages that showed on the display of controller.
5. Press the button of caller to send calling message, the indicator lamp of caller will light at the same time. When sending is complete the indicator lamp will put out.
6. The caller uses 3 AAA 1.5V batteries.