



RAM

RAM 1500

2021 OWNER'S MANUAL

TABLE OF CONTENTS

1	INTRODUCTION	10
2	GETTING TO KNOW YOUR VEHICLE	17
3	GETTING TO KNOW YOUR INSTRUMENT PANEL	104
4	STARTING AND OPERATING	140
5	MULTIMEDIA	236
6	SAFETY	310
7	IN CASE OF EMERGENCY	373
8	SERVICING AND MAINTENANCE	395
9	TECHNICAL SPECIFICATIONS	467
10	CUSTOMER ASSISTANCE	479
11	INDEX	483

INTRODUCTION

Symbols Key	11
WARNINGS AND CAUTIONS	11
VAN CONVERSIONS/CAMPERS	11
VEHICLE MODIFICATIONS/ALTERATIONS	11
Symbol Glossary	12

GETTING TO KNOW YOUR VEHICLE

KEYS	17
Key Fob.....	17
SENTRY KEY	20
IGNITION SWITCH	21
Keyless Enter-N-Go – Ignition.....	21
REMOTE START – IF EQUIPPED (GASOLINE)	22
How To Use Remote Start	22
To Exit Remote Start Mode	23
Remote Start Front Defrost Activation – If Equipped	24
Remote Start Comfort Systems – If Equipped	24
Remote Start Windshield Wiper De-icer Activation – If Equipped	25
Remote Start Abort Message.....	25
REMOTE START – IF EQUIPPED (DIESEL)	25
How To Use Remote Start	25

VEHICLE SECURITY SYSTEM – IF EQUIPPED .. 26

To Arm The System.....	26
To Disarm The System	26
Rearming Of The System.....	27
Security System Manual Override	27

DOORS

Manual Door Locks.....	27
Power Door Locks – If Equipped	28
Power Side Steps – If Equipped	28
Keyless Enter-N-Go – Passive Entry	28
Automatic Unlock Doors On Exit – If Equipped	30
Automatic Door Locks – If Equipped	30
Child-Protection Door Lock System – Rear Doors	31

STEERING WHEEL

Tilt/Telescoping Steering Column	31
Heated Steering Wheel – If Equipped	32

DRIVER MEMORY SETTINGS – IF EQUIPPED .. 32

Programming The Memory Feature.....	33
Linking And Unlinking The Key Fob To Memory	33
Memory Position Recall.....	34

SEATS

Manual Adjustment (Front Seats) – If Equipped	34
Manual Adjustment (Rear Seats)	36

Power Adjustment (Front Seats) –

If Equipped.....	36
Heated Seats – If Equipped	38
Ventilated Seats – If Equipped.....	39
Plastic Grocery Bag Retainers	39
Head Restraints.....	40

UCONNECT VOICE RECOGNITION

Introducing Voice Recognition.....	41
Basic Voice Commands	42
Get Started.....	43
Additional Information.....	43

DRIVER ADJUSTABLE PEDALS –

IF EQUIPPED

MIRRORS

Inside Rearview Mirror	44
Outside Mirrors	46
Outside Automatic Dimming Mirrors – If Equipped	47
Power Mirrors.....	47
Power Folding Outside Mirrors For Standard And Trailer Tow – If Equipped	47
Trailer Towing Mirrors – If Equipped	48
Heated Mirrors – If Equipped	48
Tilt Side Mirrors In Reverse – If Equipped	48

UNIVERSAL GARAGE DOOR OPENER (HOMELINK®) — IF EQUIPPED	49
Before You Begin Programming	
HomeLink®	49
Erasing All The HomeLink® Channels	49
Identifying Whether You Have A Rolling	
Code Or Non-Rolling Code Device	49
Programming HomeLink® To A Garage	
Door Opener	50
Programming HomeLink® To A	
Miscellaneous Device	51
Reprogramming A Single HomeLink®	
Button	51
Canadian/Gate Operator Programming	51
EXTERIOR LIGHTS	52
Headlight Switch	52
Multifunction Lever	53
Daytime Running Lights (DRLs)	53
High/Low Beam Switch	53
Automatic High Beam Headlamp	
Control — If Equipped	53
Flash-To-Pass	54
Automatic Headlights — If Equipped	54
Parking Lights And Panel Lights	54
Automatic Headlights With Wipers	54
Headlight Delay	55
Lights-On Reminder	55
Fog Lights — If Equipped	55
Turn Signals	55
Lane Change Assist — If Equipped	55
Cargo Lights/Trailer Spotter Lights With Bed Lights — If Equipped	56
Battery Saver	57
INTERIOR LIGHTS	57
Courtesy Lights	57
Illuminated Entry	58
WINDSHIELD WIPERS AND WASHERS	58
Windshield Wiper Operation	58
Rain Sensing Wipers — If Equipped	59
CLIMATE CONTROLS	60
Automatic Climate Control Descriptions	
And Functions	60
Manual Climate Control Descriptions And	
Functions	63
Automatic Temperature Control (ATC) —	
If Equipped	65
Climate Voice Recognition	66
Operating Tips	66
INTERIOR STORAGE AND EQUIPMENT	68
Storage	68
USB/AUX Control	72
Electrical Power Outlets	74
Power Inverter — If Equipped	75
Wireless Charging Pad — If Equipped	77
WINDOWS	77
Power Windows	77
Automatic Window Features	78
Reset Auto-Up	78
Window Lockout Switch	79
Power Sliding Rear Window — If Equipped	79
Manual Sliding Rear Window —	
If Equipped	79
Wind Buffeting	80
POWER SUNROOF — IF EQUIPPED	80
Single Pane Power Sunroof —	
If Equipped	80
Dual Pane Power Sunroof —	
If Equipped	82
HOOD	84
To Open The Hood	84
To Close The Hood	85
TAILGATE	85
Opening	85
Closing	85
Locking Tailgate	85
Multifunction Tailgate — If Equipped	85
Tailgate Removal	86
Bed Step — If Equipped	89
PICKUP BOX	90
Bed Rail Tie-Down System —	
If Equipped	91
RAMBOX — IF EQUIPPED	92
Locking And Unlocking RamBox	93
RamBox Cargo Storage Bins	93
RamBox Safety Warning	94
Bed Divider — If Equipped	95

SLIDE-IN CAMPERS	97
Camper Applications	97
TRI-FOLD TONNEAU COVER — IF EQUIPPED	97
Tonneau Cover Components.....	97
Tri-Fold Tonneau Cover Folding For Driving Or Removal	98
Tri-Fold Tonneau Cover Installation.....	101
Tri-Fold Tonneau Cover Cleaning.....	103
 GETTING TO KNOW YOUR INSTRUMENT PANEL	
BASE / MIDLINE INSTRUMENT CLUSTER — GASOLINE	104
Base / Midline Instrument Cluster Descriptions — Gasoline	105
PREMIUM INSTRUMENT CLUSTER — GASOLINE	107
Premium Instrument Cluster Descriptions — Gasoline	108
BASE / MIDLINE INSTRUMENT CLUSTER — DIESEL.....	109
Base / Midline Instrument Cluster Descriptions — Diesel	110
PREMIUM INSTRUMENT CLUSTER — DIESEL.....	112
Premium Instrument Cluster Descriptions — Diesel	113

INSTRUMENT CLUSTER DISPLAY.....	114
Instrument Cluster Display Controls.....	114
Oil Life Reset.....	115
Display Menu Items.....	116
Diesel Particulate Filter (DPF) Messages	121
Displays.....	123
Diesel Exhaust Fluid (DEF) Warning Messages	123
Diesel Exhaust Fluid (DEF) Fault Warning Messages	124
Battery Saver On/Battery Saver Mode Message — Electrical Load Reduction Actions — If Equipped	125
WARNING LIGHTS AND MESSAGES	126
Red Warning Lights	126
Yellow Warning Lights	129
Yellow Indicator Lights	133
Green Indicator Lights	135
White Indicator Lights	136
Blue Indicator Lights.....	137
ONBOARD DIAGNOSTIC SYSTEM — OBD II.....	137
Onboard Diagnostic System (OBD II) Cybersecurity	138
EMISSIONS INSPECTION AND MAINTENANCE PROGRAMS	138

 STARTING AND OPERATING	
STARTING THE ENGINE.....	140
Automatic Transmission.....	141
AutoPark.....	141
Tip Start Feature	143
Keyless Enter-N-Go — Ignition.....	143
Normal Starting Using ENGINE START/STOP Button — Gasoline Engine	143
Normal Starting Using ENGINE START/STOP Button — Diesel Engine	144
Cold Weather Operation (Below -22°F Or -30°C)	146
After Starting.....	146
Starting Fluids — Diesel Engine Only	146
NORMAL OPERATION — DIESEL ENGINE	146
Cold Weather Precautions	146
Engine Idling	148
Stopping The Engine	148
ENGINE BLOCK HEATER — IF EQUIPPED	150
ENGINE BREAK-IN RECOMMENDATIONS —	
GASOLINE ENGINE	150
ENGINE BREAK-IN RECOMMENDATIONS —	
DIESEL ENGINE	151
PARKING BRAKE	151
Electric Park Brake (EPB).....	151

AUTOMATIC TRANSMISSION	154	
Ignition Park Interlock	155	
Brake/Transmission Shift Interlock System	155	
Eight-Speed Automatic Transmission.....	156	
FOUR-WHEEL DRIVE OPERATION — IF EQUIPPED	161	
Four-Position Electronically Shifted Transfer Case — If Equipped	161	
Five-Position Electronically Shifted Transfer Case — If Equipped	163	
ACTIVE-LEVEL FOUR CORNER AIR SUSPENSION SYSTEM — IF EQUIPPED	165	
Description	165	
Air Suspension Modes.....	167	
Instrument Cluster Display Messages....	168	
Operation.....	168	
ACTIVE-LEVEL FOUR CORNER AIR SUSPENSION SYSTEM (REBEL MODELS ONLY) — IF EQUIPPED	169	
Description	169	
Air Suspension Modes.....	171	
Instrument Cluster Display Messages....	171	
Operation.....	172	
AXLE LOCK SYSTEM — IF EQUIPPED	173	
LIMITED-SLIP DIFFERENTIAL — IF EQUIPPED	174	
POWER STEERING.....	174	
Electric Power Steering	174	
FUEL SAVER TECHNOLOGY 5.7L ENGINES ONLY — IF EQUIPPED.....	175	
STOP/START SYSTEM — IF EQUIPPED	175	
Autostop Mode.....	175	
Possible Reasons The Engine Does Not Autostop	175	
To Start The Engine While In Autostop Mode.....	176	
To Manually Turn Off The Stop Start System	176	
To Manually Turn On The Stop Start System	177	
System Malfunction.....	177	
CRUISE CONTROL SYSTEMS — IF EQUIPPED	177	
Cruise Control — If Equipped.....	177	
Adaptive Cruise Control (ACC) — If Equipped	179	
PARKSENSE FRONT/REAR PARK ASSIST SYSTEM — IF EQUIPPED	189	
ParkSense Sensors	190	
ParkSense Warning Display.....	190	
ParkSense Display.....	190	
Enabling And Disabling Front And/Or Rear ParkSense	193	
Service The ParkSense Park Assist System	193	
Cleaning The ParkSense System.....	194	
ParkSense System Usage Precautions	194	
PARKSENSE ACTIVE PARK ASSIST SYSTEM — IF EQUIPPED	195	
Enabling And Disabling The ParkSense Active Park Assist System	196	
Parallel/Perpendicular Parking Space Assistance Operation	197	
LANESENSE — IF EQUIPPED	199	
LaneSense Operation.....	199	
Turning LaneSense On Or Off	200	
LaneSense Warning Message	200	
Changing LaneSense Status.....	202	
PARKVIEW REAR BACK UP CAMERA	202	
AUX Camera — If Equipped	204	
SURROUND VIEW CAMERA SYSTEM — IF EQUIPPED	204	
AUX Camera — If Equipped	208	
REFUELING THE VEHICLE — GASOLINE ENGINE.....	208	
REFUELING THE VEHICLE — DIESEL ENGINE	210	
Avoid Using Contaminated Fuel	210	
Bulk Fuel Storage — Diesel Fuel.....	210	
Diesel Exhaust Fluid.....	211	
Diesel Exhaust Fluid Storage.....	211	
Adding Diesel Exhaust Fluid	211	