

Wireless Laser Presenter VI

Model No: LR6

User Manual

Copyright Information

Copyright © QUARTON, 2007. All rights reserved.
Disclaimer: QUARTON shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.
QUARTON reserves the right to change product specifications without notice. Information in this document may change without notice.
No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from QUARTON.

Preface

Congratulations on your purchase of LR6. It is a versatile presentation laser pointer, wireless USB controller, and combined flash drive.

About This User's Guide

This manual is designed to guide you through setup and operation of LR6. The introduction details quick setup and operation. The OSD chapter details how to use LR6 menu, and the final chapter explains additional functions available.

Syntax Convention

- Buttons with captions, and menu options begin with capital letters
- Buttons without captions are referenced by their graphical representation

Table of Contents

Introducing LR6	1	Additional Information	12
Features	1	Frequency Search	12
Package Contents	2	Power-saving Mode	13
LR6 Components	3	OS Supported	13
Specifications	4	Installing the Battery	6
Installing the Battery	6	Installing the MICRO SD	7
Getting Started	8	Powering LR6	8
Powering LR6	8		
LR6 Menu Display	9		
Introducing the Display	9		
On - LED Display (OLD) Modes	10		
KEYBOARD (K/B)	10		
MOUSE	11		
MEDIA Player	11		

CHAPTER 1 Introducing LR6

This chapter details the uses, features, and installation of LR6


1.1 Features

- RF wireless Remote-Advanced Pro
- 2.4G frequency, no more interference happened
- 1 Green laser presenters;
- 2 Wireless USB Transceiver;
- 3 Remote Keyboard and mouse
- 4 Remote Multimedia
- 5 Operation distance up to 10 meters;
- 6 Power-saving Mode: the LR6 will automatically turn off after 30-minutes standby;
- 7 A MICRO SD can be installed in the receiver.

LR6 User Manual Chapter 1 Introducing LR6


1.2 Package Contents

Please check the package contains the following items.

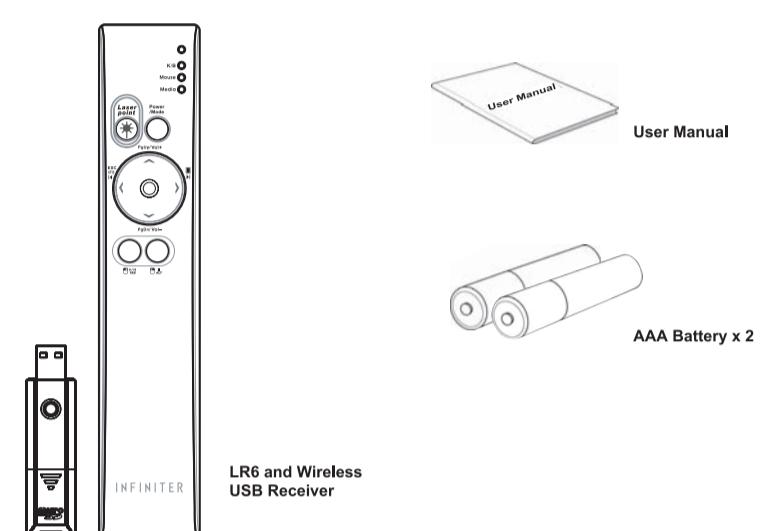

LR6 User Manual Chapter 1 Introducing LR6

1.3 LR6 Components

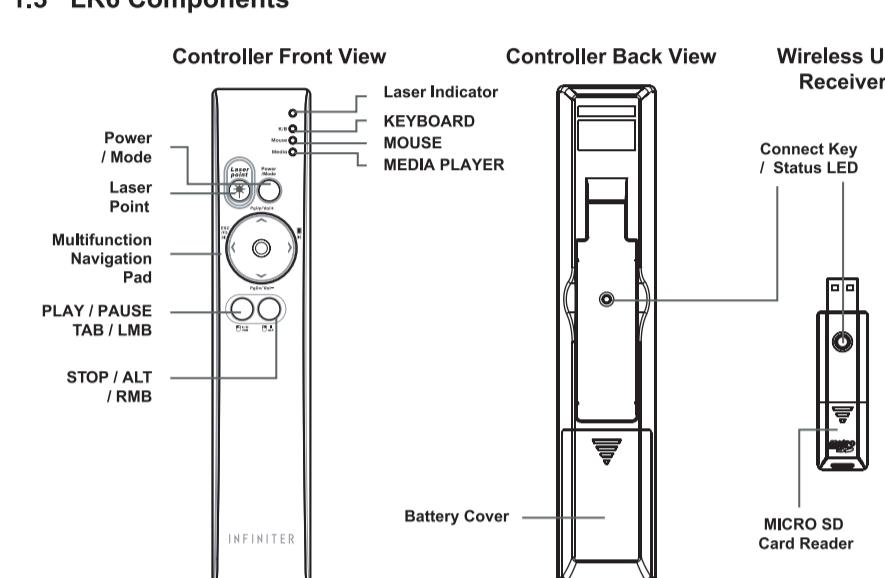

LR6 User Manual Chapter 1 Introducing LR6

1.4 Specifications

Dimensions	16.5(L) x 2.4 (W) x 1.1 (T) cm
Weight	90g (including battery)
Transmission Distance	33 feet (10 meters)
RF Frequency	2.4G
Interface	USB 2.0
OS Supported	Windows 2000 / XP / Mac OS 9.0 or later
Laser Wavelength	532nm
Output Power	CL IIIa, <5mW ; CL II, <1mW
Power	2 x AAA 1.5V battery
Battery Burn Time	6 ~ 70 hours

Warning : Laser radiation is harmful to the eyes. Do not stare directly into the beam.

Caution : Use of controls, adjustments or procedures other than those specified in this manual could result in hazardous exposure to laser radiation.

LR6 User Manual Chapter 1 Introducing LR6

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



LR6 User Manual Chapter 1 Introducing LR6

1.5 Installing the Battery

For first use, or should the battery indicator on the LCD show empty. Please use the following guidelines to install a new battery.

- Push the battery cover down and away from the controller.
- Then align the AAA battery according to the (+) and (-) markings on the battery compartment.
- Replace the battery cover sliding back until it clicks into place.



Caution:

- Only use the specified AAA battery.
- Insert battery according to (+) and (-) markings. Inserting the battery incorrectly may result in cracking or leakage, which may pose a risk of fire or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations. Please turn in your batteries at the responsible collecting point, or place of purchase.
- When the controller is not used for extended periods, please remove the battery.


Warning: Never dispose of batteries in fire, as they could explode.

Note: For the use & disposal of batteries, see the details on Page 14.

LR6 User Manual Chapter 1 Introducing LR6

1.6 Installing the MICRO SD


- Push the MICRO SD card cover down ;
- Open the socket case and plug the MICRO SD card into it;
- Replace the MICRO SD card cover sliding it back until it clicks into place .

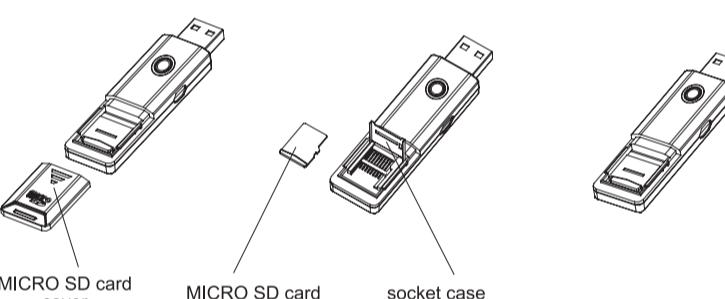

LR6 User Manual Chapter 1 LR6 Menu Display

1.7 Getting Started

- Push and slide out the wireless USB receiver;
- Plug the receiver directly into an available USB port of our notebook or computer.
- For first use, after installation, the USB receiver does not respond to the controller, please see "**Frequency Search**" on Page 12 for how to match the frequency between controller and receiver.

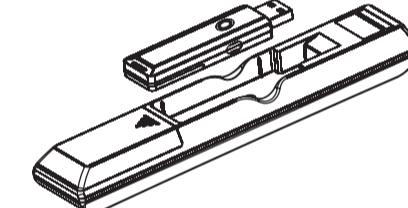

1.8 Powering LR6


- To switch LR6 on, press and hold the Power/Mode button for two seconds, then the K/B LED illuminates.
- To switch LR6 off, press and hold the Power/Mode button for two seconds.

LR6 User Manual Chapter 1 LR6 Menu Display

CHAPTER 2 LR6 Menu Display

This chapter explains how to use the OLD menus


2.1 Introducing the Display

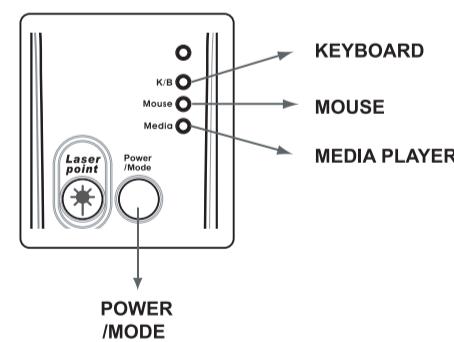

LR6 User Manual Chapter 2 LR6 Menu Display


2.2 On-LED Display (OLD) Modes

LR6 has three modes of operations. Press the Power/Mode button to cycle through the different methods of using the controller.

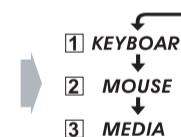

2.2.1 KEYBOARD (K/B)

Press the Power/Mode button until K/B is highlighted on the OLD.

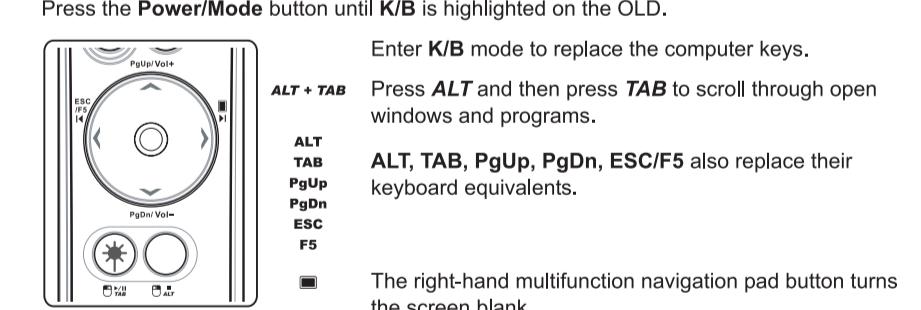

Enter K/B mode to replace the computer keys.

Press ALT and then press TAB to scroll through open windows and programs.

ALT, TAB, PgUp, PgDn, ESC/F5 also replace their keyboard equivalents.

The right-hand multifunction navigation pad turns the screen blank.

LR6 User Manual Chapter 2 LR6 Menu Display

2.2.2 MOUSE

Press the Power/Mode button until MOUSE is highlighted on the OLD.

Enter MOUSE mode to replace the computer's mouse.

ALT ALT replaces the right mouse button.

TAB TAB replaces the left mouse button.

▲ The multifunction navigation pad moves the mouse pointer.

LR6 User Manual Chapter 2 LR6 Menu Display

2.2.3 MEDIA Player

Press the Power/Mode button until MEDIA is highlighted on the OLD.

Enter MEDIA mode to play your media with the controller.

▶/■ Enter MEDIA mode to play your media with the controller.

▶/■ Remotely play, pause, stop, skip tracks or adjust the volume.

LR6 User Manual Chapter 2 LR6 Menu Display

CHAPTER 3 Additional Information

This chapter details additional functions of LR6

3.2 Power-saving Mode

The LR6 will automatically turn off after 30-minutes standby.

3.3 OS Supported

Plug the receiver directly into an available USB port of your notebook or computer.

Windows 2000/XP/Mac OS 9.0 operating systems and later, the driver is automatically recognized and installed.

If after installation, the USB receiver does not respond to the controller, please see "**Frequency Search**" on Page 12 for how to match the frequency between controller and receiver.

3.4 The Use of the Battery

- Only use the specified AAA battery.
- Insert battery according to (+) and (-) markings. Inserting the battery incorrectly may result in cracking or leakage, which may pose a risk of fire or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations. Please turn in your batteries at the responsible collecting point, or place of purchase.
- When the controller is not used for extended periods, please remove the battery.

Note: For additional information, please visit www.infiniter.com.

LR6 User Manual Chapter 3 Z LR6 Menu Display

13

14

LR6 User Manual Chapter 3 LR6 Menu Display