

TM

## Minimo M2 User Guide

revision 1.0 – November 2005.

## FOR YOUR SAFETY

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.



**SWITCH ON SAFELY** Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.



**ROAD SAFETY COMES FIRST** Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



**INTERFERENCE** All wireless devices may be susceptible to interference, which could affect performance.



**SWITCH OFF IN HOSPITALS** Follow any restrictions. Switch the device off near medical equipment.



**SWITCH OFF IN AIRCRAFT** Follow any restrictions. Wireless devices can cause interference in aircraft.



**SWITCH OFF WHEN REFUELING** Do not use the device at a refueling point. Do not use near fuel or chemicals.



**SWITCH OFF NEAR BLASTING** Follow any restrictions. Do not use the device where blasting is in progress.



**USE SENSIBLY** Use only in the normal position as explained in the product documentation. Do not use in movie theaters during the projection or in restaurants, trains or buses where it may disturb other passengers. Do not place in mouth.



**QUALIFIED SERVICE** Only qualified personnel may install or repair this product. Contact your nearest operator service point or your dealer.



**ENHANCEMENTS AND BATTERIES** Use only approved enhancements and batteries. Do not connect incompatible products.



**WATER-RESISTANCE** Your device is not water-resistant or dust resistant. Keep it dry, away from dust and away from direct sun exposure.



**BACK-UP COPIES** Remember to make back-up copies or keep a written record of all important information.



**CONNECTING TO OTHER DEVICES** When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



**EMERGENCY CALLS** Ensure the phone function of the device is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the call key. Give your location. Do not end the call until given permission to do so.

## **ABOUT YOUR DEVICE**

The wireless device described in this guide is approved for use on the EGSM 900/1800/1900 networks. Contact your service provider for more information about networks. When using the features in this device, obey all laws, and respect privacy and legitimate rights of others. When taking and using images or video clips, obey all laws, and respect local customs as well as privacy and legitimate rights of others.

## **NETWORK SERVICES**

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function.

These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Contact your service provider for more information.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor.

## **ENHANCEMENTS, BATTERIES, AND CHARGERS**

Always switch the device off, and disconnect the charger before removing the battery. Check the model number of any charger before use with this device. This device is intended for use when supplied with power from a Minimo USB charger using the provided USB charge cable.

The battery intended for use with this device is Minimo Model BP21.

## **WARNING:**

Use only batteries, chargers, and enhancements approved by Minimo for use with this particular model. The use of any other types may invalidate any approval or warranty and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

## **SAR INFORMATION:**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Minimo M2 (FCC ID: UOY-CTL-M2NA1) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 1.542 W/kg and when properly worn on the body is 0.251 W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.5cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, an

## INTRODUCTION

This manual is a quick guide to using your Minimo M2™.

You are encouraged to register at our website:

<http://www.minimoworld.com>

After registering, you can access downloadable materials such as background images and homescreens, organizer and applications as well as games.

You will also find a Frequently Asked Question section with the most common questions and answers as well as a technical support request form to request technical support via email (this is only available to registered users).

You may also purchase accessories for your Minimo from our online store.

We thank you for choosing our product and hope that you will enjoy using your new Minimo M2™.

## USING YOUR MINIMO M2™


### **INSERTING THE SIM CARD:**

1 Remove the battery pack > 2 insert the SIM card in the slot behind the phone (figure 1), push the SIM card in the slot (figure 2) all the way until the SIM card is in position (figure 3).

### **INSERTING THE BATTERY:**

1 Place the battery at the bottom of the phone as in figure 1 > 2 slide the battery towards the top until the battery locks into place as in figure 2.

## CONNECTIONS DIAGRAM:

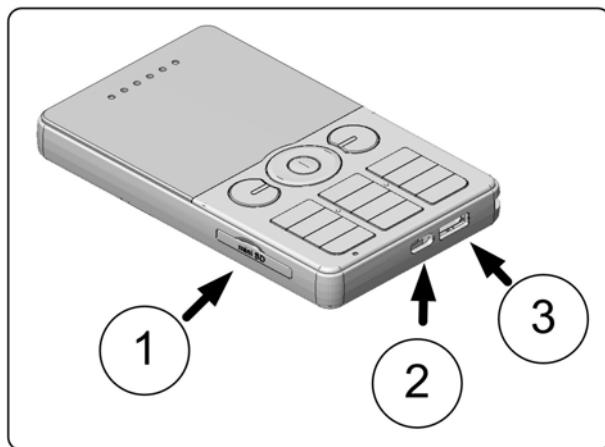

1 is Mini SD memory card

2 is headset plug

3 is USB charge/data cable plug

## TO INSERT / REMOVE MINI SD CARD:

Open the door cover (item 1 above). Push card inside

completely. The card will lock in place. To remove, push card slightly and it will come out automatically.


### **TO CHARGE THE PHONE:**

Connect the USB/charge cable to the USB charger > Plug the USB charger in any 110/240V power outlet > Connect the mini USD plug into the USB/charge port at the bottom of the phone (port 3 above) .

### **TO CONNECT PHONE TO PERSONAL COMPUTER:**

Connect the USB/charge cable to the USB/charge port at the bottom of the phone (item 3 above) > Connect the standard USB plug on the other end of the cable into any USB plug on your computer. Go to Main Menu > select menu USB > select Drive Mode. The MiniSD card in your phone will appear as a mass storage device/external drive.

## TO CONNECT HEADSET:

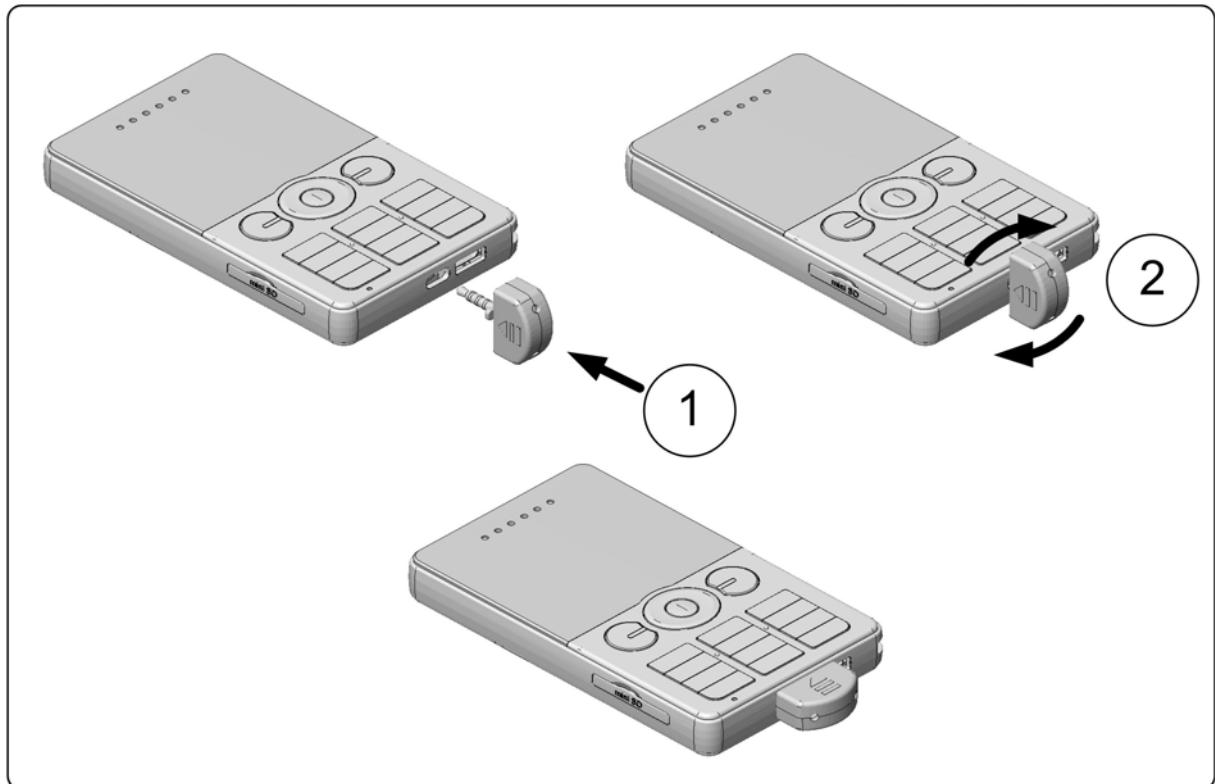

Insert Headset plug at 90 degree angle as figure above. Rotate the headset plug 90 degree to the right to lock the headset in the phone. To remove the headset, turn the headset plug left 90 degree then pull the headset out.

## KEYS LAYOUT:

## NAVIGATION KEYS:



The ▲▼ navigation keys are used to move up or down in a list on the screen or in a menu list. When playing a song or video or

during a phone call ▲▼ can be used to adjust the volume (same as the side volume keys).

The ◀▶ navigation keys are used to move from one pane screen to the next (whenever the menu on top has ◀▶ icons). In the Media Player, ◀ moves to previous song and ▶ to next song.

In a text field, you can move the cursor using the 4 navigation keys.

### **SELECT KEY:**

The center key • is used to Select an item in a list or a menu. In the Media player it is used for Play/Pause.

### **MENU KEYS:**

The left menu and right menu keys are used to select menu functions. When an arrow is displayed, press the menu key to display the menu list. Use ▲▼ to navigate the menu and • key to select a menu item. Use the menu key again to hide the menu.

### **HANG UP/GO BACK/ON-OFF KEY:**

This key has 3 functions:

#### **On / Off function:**

Press for 3 seconds to turn the phone function or device On or Off or switch between Phone On and Media Player mode. A menu appears so that you can select:

**Phone On:** this turns on the phone modem and the device. All functions are available.

**Media Player Mode:** Your Minimo M2™ phone modem is off so you cannot make or receive calls or messages. You can use the Music/Video Player and Camera functions and access all your phone book and messages and applications.

**Turn the Device On/Off:** this power Off/On your Minimo M2™.

Terminate Call function:

Press to terminate a phone call.

Go Back function:

Press to go back to previous screen or to the Home screen.

### **CALL / CLEAR KEY:**

After you type a number or select a name in the phonebook, press this key to make phone call.

This key is also used for deleting letters/numbers on the screen in a text string.

### **KEYPAD KEYS:**

Press keys to dial a number from the home screen. To use the keypad to enter text, please see later in this section.

### **ENTERING TEXT WITH YOUR MINIMO M2™:**

By default, the predictive text entry function is used for all text entry (except number fields).

Predictive entry allows you to press the key corresponding to each letter only once. The iTap text entry function will try to guess your word and will display most likely words based on your entry.

As soon as you see the correct word in the bottom list, use **◀▶** to navigate to the word and press **•** to accept the word. Use **▲▼** to see other possible words

If an arrow up appears near an incomplete word, you can use **▲** and then select the word without having to complete the typing of the word.

To delete a letter, press **©**. To erase the whole text, press **©** continuously. To move within your text, use navigation keys.

To switch between alphabetic and numeric entry and various language entry methods, use the right menu and select the desired entry method:

**English** is the predictive entry of english words.

**12345** is the numeric entry

**Aabbcc** is text entry with iTap function turned off. This allows you to enter uncommon words/names which cannot be guessed by iTap function. To enter a character, press the key repeatedly until your character appears.

**Pin Yin** is Chinese simplified Pin Yin entry method

**Bi Hua** is Chinese entry method.

**SHORTCUT:** you can use the bottom right key to switch between entry methods.

## **ADJUSTING VOLUME:**

To adjust volume during a call or when playing a song or video, use **▲▼**. A volume level will display on the right side of the screen. You can also use the side volume keys at any time.

## MAIN SCREENS

### HOME SCREEN:

The Home screen shows different icons and menus:

Top Status bar indicators (from left to right):

The signal strength indicator:

displays from 1 to 5 bars depending on the strength of the phone signal in your area. 1 bar is weakest and 5 bar is best.

The Alarm indicator:

indicates that at least one alarm is on.

The headset indicator:

indicate that the headset is connected. Sound is head in the headset only.

The GPRS indicator:

indicates that GPRS service is available.

The battery charge indicator:

displays from 1 to 5 bars, corresponding to the state of charge of your battery. During charge, the indicator will be animated to confirm that charging is in progress.

Bottom Menu Bar (from left to right):

Contacts: go to the Phonebook

Menu: go to the main menu (see next paragraph).

**Media:** go directly to the Music Player application.

### **MAIN MENU SCREEN:**

(From the Home Screen, Press the Select key).

Displays 9 icons for the 9 main applications. Use  $\blacktriangleleft\blacktriangleright\blacktriangleup\blacktriangledown$  to move from icon to icon (application name appears on to status bar).

The applications are:

Contacts	File Manager	Media Player
Camera	Messaging	Applications/Organizer
Settings	Games	Wap/Internet

### **MENUS IN MAIN SCREEN:**

**Profiles:** display and edit profile settings for ringing behavior

**VoiceMail:** call voicemail (number is set in Settings>Call)

**USB mode:** set USB connection to Drive Mode (display your memory card as an external drive (usually drive E: or F:)).

## PHONE APPLICATION

From Home Screen, press Contacts or Menu then select Contacts.

Displays the list of contacts in your phone book. To navigate the list of contacts use **▲ ▼** to navigate the list one by one.

**SHORTCUT:** Press the first letter of the name you are looking for (press again for the next character on the key). For example press 1ABC once for A, twice for B and 3 times for C. The list jumps to the first name starting with your letter.

### TO MAKE CALL:

Move to the desired contact name. The phone number for the contact appears below. If there are multiple numbers for the contact name, use **◀▶** to move to the next or previous phone number for the selected contact. When the desired number is displayed, press **•** or **© Call** key.

Menus available:

**Call List:** Takes you to the list of calls (see below).

**IP Call:** uses the IP call prefix to use IP call service from service provider (operator dependent).

**Edit Before Call:** displays the number in an entry field. To edit the number, move the cursor using **◀▶**, delete numbers using **C** and enter new numbers.

**SMS:** to send a message to this contact.

**Edit:** to edit name and numbers and information for this contact.

**Delete:** delete the contact from phone book

**New:** to create new contact.

**Copy:** to copy from SIM card memory to phone memory or from Phone memory to SIM card memory.

**Copy All:** to copy all contacts from SIM card memory to phone memory or from Phone memory to SIM card memory.

**Space Left:** displays number of entries used/available in your SIM card and your phone memories.

**More:** displays a choice menu where you can Select to display only the contacts on your SIM card memory, on your phone memory, or both.

## **CALL LIST SCREEN:**

**Contacts>Call List**

this screen displays the list of all calls incoming, outgoing or missed. Use **◀▶** to move between lists:

**ALL◀▶INCOMING◀▶OUTGOING◀▶MISSED**

In the list, move to the desired entry and use menu to:

**Contacts:** goes back to phone book above

**IP Call:** uses the IP call prefix to use IP call service from service provider (operator dependent).

**Edit Before Call:** displays the number in an entry field. To edit the number, move the cursor using **◀▶**, delete numbers using C and enter new numbers.

**SMS:** to send a message to this contact.

**Add to Phonebook:** to save the number into your phonebook.

**Clear Entry:** to remove entry from list

**Clear All Entries:** to remove all entries from list.

**Details:** to show details about call in list.

## **MEDIA PLAYER**

From Home Screen, Press **Media** or **Menu>Media Player**

This application displays the lists of Songs, Playlists, Artists, (music) Files and Video Files on your MiniSD memory card.

Use **◀▶** to navigate between the lists:

**SONGS◀▶PLAYLISTS◀▶ARTISTS◀▶FILES◀▶VIDEOS**

In All Lists, Press **Refresh** bottom menu to refresh the list (if you changed memory card or added files with your computer).

Press **●** to play a song/video. The song displays and you can use these keys to control the media player:

- ◀ to go to previous song
- ▶ to go to next song
- to Pause/Play song
- ▲ ▼ to adjust the volume (volume level displays on the right of the screen).

### **SONGS SCREEN:**

**Play All:** Play all songs starting with the selected song

**Random Play:** Play songs randomly (shuffle function)

**Add to Playlist:** Add song to a playlist – displays list of playlists so that you can choose the playlist to which song is added.

## **PLAYLISTS SCREEN:**

**Play Playlist:** play the selected playlist. Same as pressing •

**Display Songs:** display songs from selected playlist.

**New:** create new playlist

**Delete:** delete playlist

## **ARTISTS SCREEN:**

Press • on an artist name to expand the list and see all songs from the artist. Click again (or click another name) to collapse list (and expand next artist's list). Press • to play a song in the list.

## **FILES SCREEN:**

displays all music files (.mp3 and .m4a files) present on your Mini SD memory Card.

## **VIDEOS SCREEN:**

displays all video files (.3gp and .mp4 files) present on your Mini SD memory Card. Videos should be in the Video Folder.

## MESSAGING APPLICATION

From Home Screen, Press **Menu>Messaging**

Use **◀▶** to navigate between the lists:

**INBOX◀▶COMPOSE◀▶OUTBOX◀▶DRAFTBOX◀▶TEMP PLATES**

Menus in all lists:

**Inbox:** takes you to Inbox list

**Settings:** to enter settings for each messaging system (SMS< MMS, Email). Please check with Operator for details.

**Space Left:** display space available for SMS on your SIM card.

### INBOX SCREEN:

Select SMS, MMS or Email to see list of messages. Press Select to display message.

### MENUS AVAILABLE IN ALL SCREENS:

**Reply:** reply to the sender of message.

**Forward:** forward message to another contact > Enter phone number or press • then select contact in phone book.

**Delete:** delete message from list.

**Delete All:** delete all messages in list.

**Save to Card:** save message in Message folder on memory card.

## **COMPOSE SCREEN:**

Select SMS, MMS, Email to compose a new message. Enter message text and use left menu to:

**Send:** send message > Enter number to send message to or press • and select contact in address book.

**Send to Many:** send message to multiple numbers > enter numbers or press Select and select contact in address book.

**Send and Store:** send message and save to memory card.

**Save:** save unsent message to draftbox

**Insert info:** insert a number from the contact list or the list of calls.

## **DRAFTBOX SCREEN:**

Select SMS, MMS, Email to use an existing draft to make a new message. Enter message text and use left menu to:

**Forward:** Opens the selected draft message as a new message. You can edit the text and then use all menus as with a new message (see above)

**Delete:** delete the draft message from memory.

## FILE MANAGER APPLICATION

From Home Screen, Press **Menu>File Manager**

the File manager displays all folders and files on your Mini SD memory card. All folders appear first then all files in alphabetic order. To simplify navigation, you can use **◀▶** to move between all folders on your memory card (all folders at root level).

### MENUS IN ALL LISTS:

**Mobile/Card:** display all files in phone user memory. No folders are used in this memory. Its main use is to allow you to copy a file from your memory card, then insert a new card and copy or move the file from the phone to the new memory card. This is similar to a clipboard on your personal computer. Because memory is limited it is better to move files to the new card (copy the file and then remove it from the phone memory to release space).

**Details:** file details

**Copy to Phone/Card:** copy the file to the phone or card memory

**Move to Card:** when in the phone memory, this moves the files to the memory card (and free the phone memory space).

**Move to Folder:** when in memory card, this moves file to a folder > Select folder.

**Rename:** rename file > enter new name for file.

**New Folder:** create folder in memory card (folder at root level or subfolder in an existing folder) > Enter name for folder.

**Set Wallpaper:** used only in image/background/wallpaper folders, to set the selected image as wallpaper on the main screen of your Minimo M2™. The selected image is resized and placed as wallpaper. You can select a picture made with your camera or any picture you downloaded from your Operator website or our website. The image selected must be in .jpeg or windows .bmp format. Wallpaper image size is 176 x 210 pixels.

**Set Background:** used only in image/background/wallpaper folders, to set the selected image as background on most screens of applications of your Minimo M2™. The selected image is resized and placed as background. To make for better viewing, we recommend that you use only dark/colored images as background. Please download backgrounds from your Operator website or our website for best results. The image selected must be in .jpeg or windows .bmp format. Background image size is 136x210 pixels.

## CAMERA APPLICATION

From Home Screen, Press **Menu>Camera**

The camera application starts your camera sensor and display the viewer screen.

The Right side of the screen has icons representing:

- (1) Mode (Camera or Video)
- (2) Image Size: 3 icons for small, medium and large size
- (3) Flash: When the flash is On, the icon is displayed.
- (4) Night Mode: When Night mode is On, the icon is displayed.

The Right menu (5) is for Settings.

The Left Menu(6) is used for switching between camera and video modes.

## ZOOM AND LUMINOSITY:

Use **◀▶** to modify luminosity and **▲▼** to zoom in/out. Zoom or luminosity display on the right side (7)

## TO TAKE A PICTURE:

**Capture:** press **●** to take picture. The picture is displayed and you can **Save** (Right menu) or **Discard** (left menu) it:

**Save:** saves the picture on memory card in images folder > Enter name for picture > Press **●** to confirm.

**Discard:** if the picture is not satisfactory, press **discard** to return to viewer screen and take the picture again.

## SETTINGS MENU:

**Night Mode:** select to use night mode which increases luminosity. The viewer is slower to display because the night mode filter takes more time to process the image from sensor and display it in the viewer. Deselect to return to normal mode.

**Flash:** select to turn flash ON. Deselect to turn OFF

**Resolution:** select image or video size.

**Quality:** for Video mode only. Select between Low, Medium and High quality. This changes the bit rate and size of the video file.

**Switch to Video:** switch to video mode

## SETTINGS APPLICATION

From Home Screen, Press **Menu>Settings**

This application can adjust options for different functions of your phone.

Select from the List of menu or use **◀▶** to navigate between the lists:

**GENERAL** **◀▶** **TONES** **◀▶** **DISPLAY** **◀▶** **CALLS** **◀▶**  
**SECURITY** **◀▶** **NETWORK**

### **GENERAL SETTINGS:**

**Profiles:** Profiles are used to define ringing behavior of the phone. You can click on a profile to activate it (other profiles become inactive). Use **Edit** to open each profile and modify the ringing behavior.

**Time Date:** Enter time and date. Also can choose display format and choose to display date and time on Homescreen.

**Language:** Choose language in the list.

**Backlight:** the backlight turns off to save power. Choose Short (after 5 seconds), Normal (10 seconds) or Long (15 seconds).

**Keylock Automatically:** the keypad can lock automatically so that if you press a key by accident it is ignored (if phone is in your pocket or your bag). When keypad is locked, pressing a key brings up message asking you to press **Unlock** then **\***.

**Auto On:** the phone can be turned On automatically at a given

time (Enter time after selecting Auto On).

**Auto Off:** the phone can be turned Off automatically at a given time (Enter time after selecting Auto Off).

**Owner No:** You can store 2 different phone numbers for yourself with a label (for example mobile, home).

**Speed Dials:** Assign a contact/phone number to each key from 2 to 9. key 1 is the Voicemail number by default. When you assign a number to a speed dial, press and hold this number from the Home screen to call the assigned contact/phone number directly.

**Master Reset:** Resets all options to factory settings. You will lose all your settings.

## **TONE SETTINGS:**

**Incoming Call tone:** Choose in the Ringtone Folder on your Memory card the ringtone to use for incoming calls.

**Message Tone:** Choose in the Ringtone Folder on your Memory card the ringtone to use for incoming messages.

## **DISPLAY SETTINGS:**

**Menu Bar Display Format:** You can display menus in the bottom menu bar as text or icon.

**Theme:** choose a color for the top and bottom menu bar.

To change the wallpaper or the background image, please go to image folder and use the **Set Wallpaper** menu or the **Set**

## **Background Menu.**

### **CALLS SETTINGS:**

**IP Call:** Enter code used by your operator for IP call. This prefix is used when you use IP Call function in your phone application.

**Divert:** Turn On or Off the call divert function for different situations: If No Signal, If No reply, If Busy, All Calls. Cancel All allows to cancel all call divert.

**Call Waiting:** Operator feature. Turn On or Off.

**Call Barring:** Allows to bar calls on the phone for different cases

**> All Calls Out**

**> All Intl Calls** (start with 00 or +)

**> All Calls out except Home** (Owner Number)

**> All Calls In**

**> Roam Abroad.**

To use this feature, you need to first set a call barring password in the menu **Password Change** (Enter Old Password, Enter New password twice, press **Confirm**). To turn On or Off each Call Barring option, select **Activate** or **Cancel** then enter call barring password.

**Call Volume:** display number of calls???

**Time and Cost:** to display total call duration and costs.

**> Call Duration:** display duration. To reset counter, press

**Clear** menu.

**> Call Cost:**

**> Total Cost:** display cost.

**> Maximum Cost:** display cost.

**> Unit Price:** to reprogram variables:

**> Reset Counters**

**> Set Max Units**

**> Set Currency**

**> Set Unit Price**

Note: These functions require PIN2 to be modified. Ask Operator for details.

**Black and White Lists:** Contact can be assigned to Black (block) or White (Allow) lists in phone book. In this option you can Turn On Black List (block all calls from black list), Turn On White List (Allow only calls from White List), or Turn Off both (all calls allowed).

**VoiceMail Number:** set your voicemail number. Use speed dial 1 to call voicemail from the Home Screen.

## **SECURITY SETTINGS:**

See below for explanation of each code

**Enable PIN1:** to activate or deactivate the SIM card PIN1. When activated, the phone asks for SIM password each time you turn phone On.

**Change PIN1:** change the PIN1 settings. Enter your old PIN1 > Enter new PIN1 > Confirm new PIN1.

**Change PIN2:** change the PIN2 settings. Enter your old PIN2 > Enter new PIN2 > Confirm new PIN2.

**Enable Phone Code:** this function asks for a phone code each time you power on the phone. Can be used to protect your phonebook information for example. To Enter the phone Code, Use **Edit** menu. Enter your old Phone Code > Enter new Phone Code > Confirm new Phone Code.

**Enable FDN:** Fixed Dial Numbers restricts outgoing calls to 5 numbers maximum.

**Edit FDN List:** Click to open the list of allowed FDN numbers. Click on a number to display and use **Edit** to edit the FDN record.

## **GLOSSARY OF PIN AND LOCK CODES**

If you forget any of these codes, contact your service provider.

**Personal identification number (PIN) code:** This code protects your SIM card against unauthorized use. The PIN code (4 to 8 digits) is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the PIN code is blocked, and you need to unblock it before you can use the SIM card again. See the information about the PUK code in this section.

**PIN2 code:** This code (4 to 8 digits) is supplied with some SIM cards, and is required to access some functions in your device.

Phone code (also known as security code): This code (5 digits) can be used to lock the device to avoid unauthorized use. The factory setting for the lock code is 12345. To avoid unauthorized use of your device, change the lock code. Keep the new code secret and in a safe place separate from your device.

Personal unblocking key (PUK) code and PUK2 code: These codes (8 digits) are required to change a blocked PIN code or PIN2 code, respectively. If the codes are not supplied with the SIM card, contact the operator whose SIM card is in your device.

## **NETWORK SETTINGS:**

**Identification:** to allow or not allow the display of your phone number to the receiving party when you make a call.

**Network Selection:** To select the network to use. You can set the search mode (auto or Manual), start a new search, and use Sequence to create a list of preferred networks.

**Search Mode:** automatic will select a network automatically. Manual will list all available networks and you can then select your preferred network.

**Search New:** start a new search (auto or manual according to Search Mode)

**Sequence:** create list of preferred networks. Use Append, Delete or Remove All to manage the list.



## **ORGANIZER APPLICATION**

This application lists mini applications which you can use on your phone. Applications include:

### **ALARM:**

There are 4 alarms which you can Select and Deselect to activate. Use Activate to activate alarm, Cancel to disable alarm and Modify to edit the time of the alarm.

### **CALENDAR:**

Display the month. Use  $\blacktriangleleft\blacktriangleright$  and  $\blacktriangle\blacktriangledown$  to change the date. Press  $\bullet$  to select the day and the list of appointments for the day. You can Add a new appointment, Edit and Delete an existing appointment.

### **TASKS:**

Displays all tasks. You can Add, Edit and Delete a task or Set Done to mark it as completed.

### **NOTES:**

List of notes you can save. Use New or Edit or Delete menus

### **CALCULATOR:**

Display a calculator with a keymap on top. Use keys for operations and keypad for entering numbers

## **WORLD CLOCK:**

Display time in different time zones and major cities. Use **◀▶** to move from city to city.

## **EXCHANGE:**

List currency exchange rates. Each exchange rate allows to convert from one currency to another. You can **Add**, **Edit** and **Delete** a rate.

Press **•** or **Calculate** to show a screen for the exchange rate to convert an amount from the first currency to the second.

## **SIM TOOLKIT:**

This is an operator dependent feature. It lists all SMS applications available from your network operator. Please check with Operator for details.

## **GAMES APPLICATION**

This application lists all games installed on your phone. You can use Install or Remove menu to install or remove games from your phone. Games are saved in the Games folder of your memory card.

## WAP BROWSER

The wap browser requires GPRS service and allows to view webpages and pages sent by your operator.

**Homepage:** to open your homepage

**Favorites:** to see your favorites pages

**Enter Address:** to enter a URL and go to that URL. You can save the URL as a favorite so that you can go back to that page later using Favorites menu.

**PushBox:** lists all pages sent by your operator (see operator for details)

**Settings:**

**Browser Settings:**

You can enter your **Homepage** and select **Load Image** to display images

**Connection Settings:**

List all settings available. Normally, settings are automatically downloaded by your operator. Please ask your operator for assistance in setting connections.