

User Manual

1. Plug the outer adapter (DC 9V) to the DC pole, then the horn will make a sound.
2. Press the code button, a long alarm shows the machine is ready to set. Trigger the detector to be coded, the horn will make a short sound followed with a long one to show coding successful. If it fails or no order in 3 minutes, it will exit automatically.
3. Under code-checking status, press the button code again, the horn will sound twice shortly to show exit.
4. Under any status, keep pressing the button code more than 2 seconds, the horn will sound a short sound followed with a long one, which means all the coded information has been deleted, and the system turns into the status of resetting the code.
5. When meeting urgent situation the system makes horn hoot for 3 minutes to frighten intruder. At the same time, the in-built caution light keeps flashing.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.