


### FCC REGULATION

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.** OPERATION IS SUBJECT TO THE FOLLOWING CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

## 1 Description and use

The remote control TEL007-M is design to command MG International fall detector at a distance of about 15 feet.

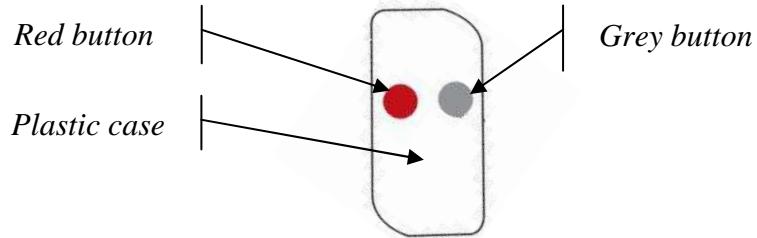

- The grey button is dedicated to the activation of the fall detector.
  - To switch from OFF mode to DISARMED mode
  - To switch from DISARMED mode to ARMED mode

It is also used to stop the siren triggered after it sets off.

For all these actions, press one time the grey button


- The red button is designed to be used in combination with the grey button to deactivate the fall detector:

Press the red button continuously and then press the grey button


## 2 Replacing the battery

When the battery charge is too low, the remote control signals it with:

- Either quick blinks of the red light during 3 seconds
- Either the red light does not switch on when you press the grey button

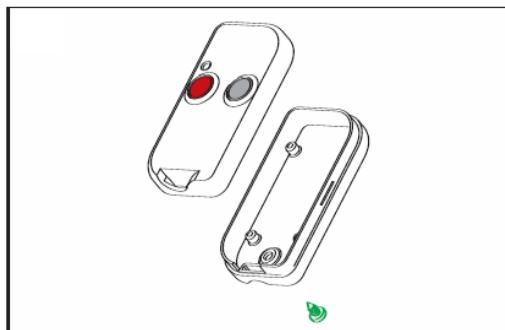

Unscrew the screw behind the case

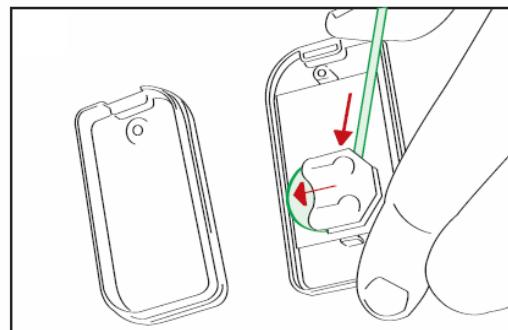

Carefully remove the used battery thanks to a screwdriver and replace it with a new one (3V DL2032)

Designed, manufactured in France by:  
MG International - ZI Athélia II 13600 La Ciotat - France  
siren 441 743 002