

SINGLE AXIX PAN-TILT STABILIZER [Cloud Shadow 3]



Quick Start Guide

5. Non-pan-tilt mode

When the pan-tilt is shut down or out of power, the rotation will screw tight to the locking direction, the rotation function of the pan-tilt disappears, and it will become an ordinary tripod selfie stick. (When the rotation is reset to the holder end, the pan-tilt mode will be restored.)



Yuntai Rotary Locking button

 
6. Use the tripod

Open the bottom tripod, uplift the pull rod and put tripod on horizontal plane.




Bluetooth connection

Power on after long pressing the power button for 3 seconds, then turn on the phone bluetooth to enter search condition, and click "Dispho" in the searched equipment. The blue light will be on after the success of the connection.



Usage method

1. Remote control functions

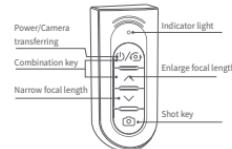

Charging

1. Holder charging mode

Connect the Micro USB interface of the pan-tilt holder for charging, and the red light will be on for a long time during the process of charging; the red lamp will be off automatically after charging is finished.



2. Charging Mode of Remote Controller

Connect the Micro USB interface charging, and the red light will be on for a long time during the process of charging; the red lamp will be off automatically after charging is finished.



Powering off

Remote controller: Long press photograph key for 3 s, blue lamp will flicker for 3 times and then be off, which means machine is shut down.

 
Pan-tilt holder: Long press the "on" button for 3 seconds, and the green light will be off, indicating it is power off.

1. Power on or power off by long pressing "power key/front and rear camera switching" for three seconds; switch the front and rear camera by short press;
2. Short press or long press the zoom key to take a picture closer.
3. Short press or long press the narrow key to take a picture further.

4. Push the shot key to shot (photo mode)

5.1 If you are unable to take photos / switch camera / adjust after connecting mobile phone Focus, press the combination switch key (1st press the on key, then quickly press the zoom key, the blue light ashes twice, the switch is successful) and then try again. (Switch camera and adjust focus function only compatible with some mobile phones)

2. Mount your phone onto the selfie stick



3. Extend the monopod



4. Usage mode of pan-tilt holder



After clamping the mobile phone and keeping the phone in natural position, then long press the power button for 3 seconds to turn on the mobile phone.



Rotation adjustable bracket tightness
After starting up, it will enter the stable mode, move the holder, and the mobile phone will always maintain a constant direction.



Clicking the power button of the pan-tilt holder, and it will rotate 90 degrees counterclockwise.

Warnings

1. Watch your hands during use.
2. The product is not designed for children under 14 years old. Do not swallow it.
3. Do not dismantle or modify the product.
4. Do not store the product in a humid environment.
5. Keep the product away from heat sources.
6. Do not expose the product to water or other liquids in case of damage.

Silicon rubber case for avoiding empty keys

When using the mobile phone in horizontal screen status, please use this accessory when the product cannot work normally due to touching the keys of the mobile phone.



Tips

1. When the equipment clamps the platform bracket, try to keep the equipment in the center, if not in the center, it is recommended to use the vertical screen mode.
2. Selfie stick will enter sleep mode automatically if it is idle for 5 min after Bluetooth connection; press photograph key to recover connection.
3. When using the Remote control , when the battery is low, the Remote control will have a flashing red light for reminder. Charge the selfie stick promptly.
4. If the battery is running low, the indicator on the selfie stick will flash red. Charge the selfie stick promptly.
5. For any imbalance of the Product after startup due to sharp change of temperature or humidity, please handle it as follows: Turn off the tripod head holder and dismantle it, and then place it on desktop horizontally as shown in diagram of  and turn it on; after this, keep pressing the power key for 5 times, and the holder will give out 3 short beep sounds followed by 1 long beep sound; then it will turn off automatically and then start again; by now, the tripod head is recovered to normal status.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement, The device can be used in

portable exposure condition without restriction

Federal Communication Commission (FCC) Radiation Exposure Statement

Power is so low that no RF exposure calculation is needed.