


CRISP WIND

Quick guide

Usage method


Connect Bluetooth

Remove the remote control, Long press the shutter/power button for 3s to turn on the remote control, then the indicator light flashes green, and then turn on mobile phone Bluetooth to enter the search state, select "SELRUMI" from the list of available devices and the green light will be change from flashing green to steady green after the connection succeeds.

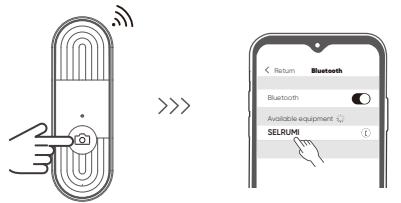


Install mobile phone

The mobile phone is smoothly installed in the mobile phone bracket, and the bracket part can be used horizontally and vertically.

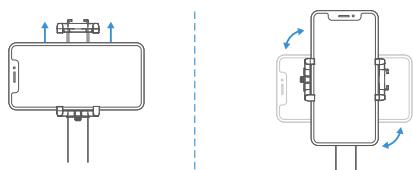


Use a tripod

After opening the support, ① hold the support with one hand and press the bottom triangle button with one hand, the three legs of the tripod will automatically open, pull the tripod, the tripod is completely open, and the ② tripod is used on a smooth horizontal surface.

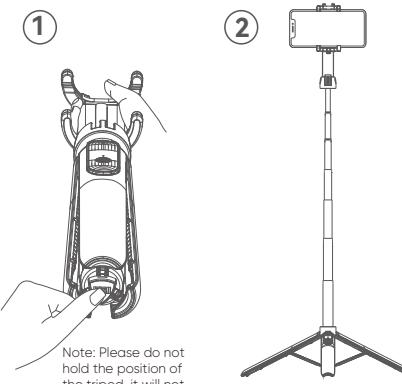


Universal cold boot and 1/4 screw (optional)

Both ends of the support are provided with a general cold boot port and 1/4 screw, which can be compatible with the market with cold boot fill light, 1/4 nut interface and other products, according to the requirements of the appropriate accessories.

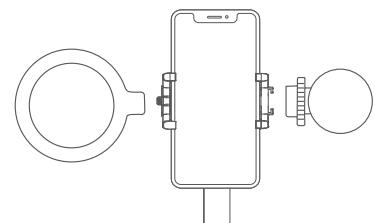

Charge description

- Insert the Type-C cable into the charging port of the remote control to charge it when the battery capacity of the remote control is insufficient.
- Low battery prompt: Please charge it as soon as possible when the red light starts to flicker
- Dormant State: After the remote control is turned on, it will enter the dormant state and the flicker light will be off, if it is not connected to Bluetooth within 10 minutes. Also the remote will enter the dormant state, if it is connected to Bluetooth successfully but not be operated within 10 minutes, and then it will automatically turn off if not be operated within 30 minutes.
- Awakening from the dormant state: In the dormant state, the camera indicator light will be on once by short pressing the shutter button, and then enter the pairing flicker state.

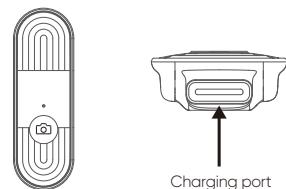

Warnings

- Watch your hands during use.
- To protect your equipment, keep the tripod in a stable state and prevent other external forces from tipping the tripod over.
- The product is not designed for children under 14 years old. Do not swallow it.
- Do not dismantle or modify the product.
- Do not store the product in a humid environment.
- Keep the product away from heat sources.
- Do not expose the product to water or other liquids in case of damage.

FCC ID:UR9WS-23003

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

尺寸: 70*105mm
材质: 80g书纸