

## Remote Control

Use the Remote Control to control the Remote Control Sprinkler, and the remote distance is Max 20M far away the Remote Control Sprinkler.

### I. How to use the Remote Control

- A. Press “ L” enter sprinkle mode, and the water automatic sprinkling around the middle to left 45°
- B. Press “ R” enter sprinkle mode, and the water automatic sprinkling around the middle to right 45° .
- C. Press “ W” enter sprinkle mode, and the water automatic sprinkling around full angle 90° .
- D. Press “ D” the Remote Control Sprinkler will stop sprinkling.

## Remote Control



### FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment