


- Reorient or relocate the receiving antenna ☐
- Increase the separation between the equipment and receiver ☐
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected ☐
- Consult the dealer or an experienced radio / TV technician for help ☐

(2) This device must accept any interference received, including interference that may cause undesired operation ☐

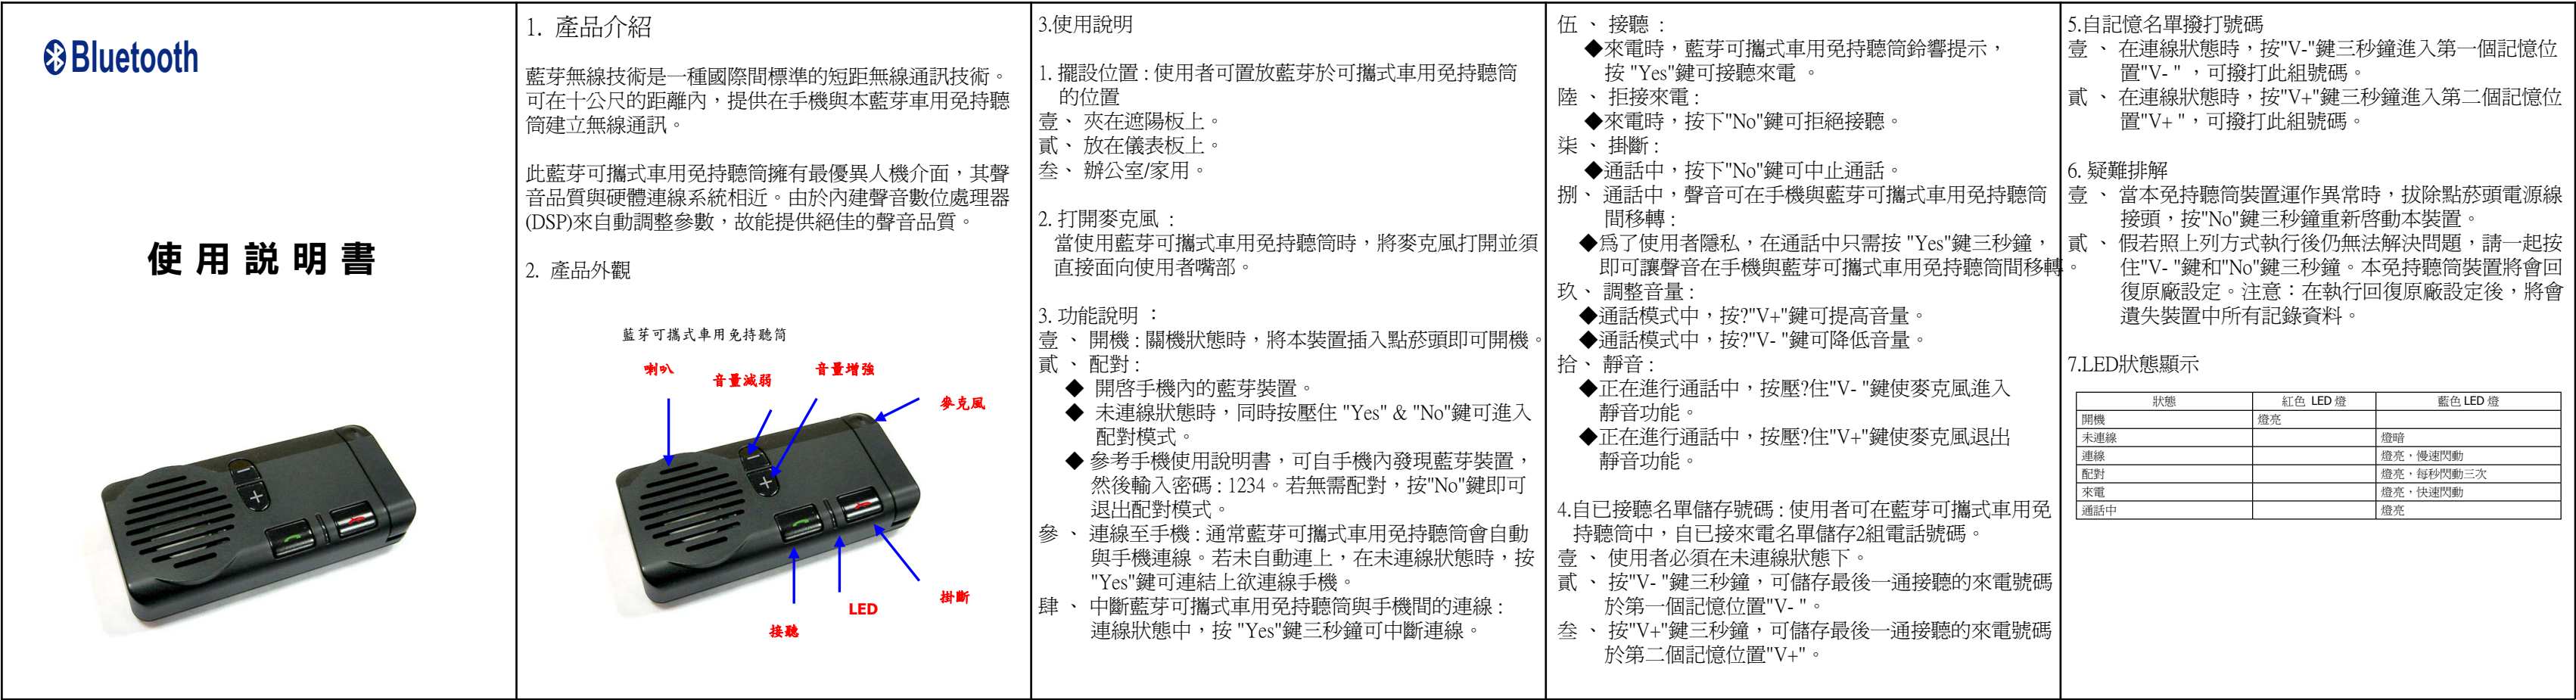

於第一個記憶位置"V-"。

叁、按"V+"鍵三秒鐘，可儲存最後一通接聽的來電號碼於第二個記憶位置"V+"。

6. 疑難排解

壹、當本免持聽筒裝置運作異常時，拔除點菸頭電源線接頭，按“No”鍵三秒鐘重新啟動本裝置。

貳、假如照上列方式執行後仍無法解決問題，請一起按住“V-”鍵和“No”鍵三秒鐘。本免持聽筒裝置將會回復原廠設定。注意：在執行回復原廠設定後，將會遺失裝置中所有記錄資料。

狀態	紅色 LED 燈	藍色 LED 燈
開機	燈亮	
未連線		燈暗
連線		燈亮，慢速閃動
配對		燈亮，每秒閃動三次
來電		燈亮，快速閃動
通話中		燈亮