


ENCEINTE SANS-FIL AVEC MICRO WIRELESS SPEAKER WITH MICROPHONES

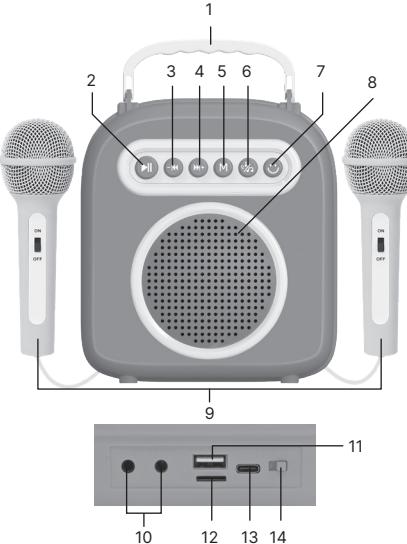

Mode d'emploi
Instruction manual
Manual de instrucciones
Manual de instrucciones
Manuale di istruzioni
Bedienungsanleitung
Gebruikershandleiding
Brugsanvisning
Návod k použití
Instrukcia obsluhy
Használati útmutató

LEXIBOOK®
BTC050_10series

- Install the unit in accordance with the manufacturer's instructions.
- Place the unit where there is good ventilation. Place the system on a flat, hard and stable surface. Do not expose to temperatures above 40°C. Allow at least 10 cm clearance from the rear and the top of the unit and 5 cm from each side.
- Press the player's buttons gently. Pressing them too hard can damage the player.
- Dispose of used batteries in an environmental-responsible manner.
- Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with dry cloth only.
- Turn off the product during lightning, storms or when it will not be used for long periods of time.
- This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing. Take the product to the electronics repair shop of your choice for inspection and repair.
- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.
- Don't mount this product on a wall or ceiling.
- Do not place the unit near TVs, speakers and other objects that generate strong magnetic fields.
- Do not leave the unit unattended when it is in use.
- Keep minimum distances around the apparatus for sufficient ventilation.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- The use of apparatus in tropical and/or moderate climates.
- Batteries should be disposed of properly. Take them to the collection container in order to protect the environment.

WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded.

POWER SOURCES

The Wireless speaker with microphones operates with the USB-C charging cable (included) or with a USB type adaptor (not included) 5.0V $\frac{1}{2}$ 0.5A. Input: 100-240V~50/60Hz

Power supply

- Check that the unit is switched off.
- Insert the small end of the USB-C cable (included) into the USB-C charging port on the side of the unit.
- Connect the other end of the USB-C cable into the USB port of your powered computer or USB type power adaptor and connect it to a wall socket. The LED in the front of the unit lights up in red when the device is charging.
- Once loading is complete the LED light will turn off.

Note: Please note that the USB-C cable can be used for battery charging only and not for data transfer.
The USB-C cable can be used for charging during playback.

WARNING:

- Danger of explosion if battery is incorrectly replaced. Please only replace it with the same or equivalent battery. (For service instructions only; battery is not intended to be replaced by the user).
- The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.
- Significant electromagnetic interference or electrostatic discharges may cause the device to malfunction or lose data. If the device is not functioning correctly, switch it off and then on again, or unplug the USB cable. In case the function could not resume, please use the product in other location.

LOCATION OF CONTROLS

1. Handle	8. Speaker
2. PLAY/PAUSE button	9. Microphones
3. Backward button/VOL -	10. AUX IN / MIC Jack
4. Forward button/VOL +	11. USB-C port for audio playback
5. MODE button	12. TF card slot
6. Button to activate the karaoke function	13. Charging USB port
7. Button to activate the magic sound function	14. On/Off button

FUNCTIONS & MODES

MODES

Your Wireless speaker with microphones includes 4 modes: Wireless, USB, TF and Aux-in.
For the **USB** and **TF card modes**, power on the unit and insert a USB Flash Drive or a TF card (not included) into the port. The player will automatically start playing music.
In **Aux-in mode**, the PLAY/PAUSE, PREVIOUS and NEXT buttons on the speaker are disabled. Please use the control buttons on your music player to get the best control experience of the music

FUNCTIONS

- Press on the button 5 to select the desired mode.
- In Wireless, USB and TF modes, press **▶** for playback or pause the music.
- In Wireless, USB and TF modes, press **◀** or **▶** to go to the previous or next track.
- In all modes, long press **◀** or **▶** to decrease / increase the volume.
- Karaoke : Press the button 6 to activate the karaoke function, turn down the singer's voice, and sing like a real star. To deactivate the karaoke function, press again the same button
- With your Wireless speaker with microphones you can sing the songs by connecting one or two microphones (included) to the unit under wireless, USB or TF card mode

CAUTION : Too high volume can damage your hearing. For this reason, please turn the volume down.

SPECIFICATIONS

Input power	USB DC 5.0V $\frac{1}{2}$ 0.5A
Battery	Lithium battery 3.7V $\frac{1}{2}$ 1200mAh
Frequency range	2402-2480MHz
Transmission power	-1.78dBm

The Maximum transmitted power is less than 20mW.

SIMPLIFIED EU DECLARATION OF CONFORMITY

We, Lexibook® S.A.
Bât 11, 6 avenue des Andes
91940 Les Ulis - France

Lexibook UK
PO Box 423, UMBERLEIGH
EX32 2JW, United Kingdom

Kind of product: Wireless speaker with microphones
Type designation: BTC050_10series

Hereby, Lexibook Limited declares that the radio equipment type BTC050_10 is in compliance with Directive 2014/53/EU and Radio Equipment Regulations 2017.
The full text of the EU declaration of conformity is available at the following internet address:
http://www.lexibook.com/doc/btc050/btc050_1.pdf


Yiu Wai Man

Product Development Manager
Hong Kong



MAINTENANCE & WARRANTY

To prevent fire or shock hazard, disconnect your unit from the power source when cleaning. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit.
NOTE: Please keep this instruction manual, it contains important information.

Reference: BTC050_10series
Designed and developed in Europe – Made in China

©Lexibook®

Lexibook S.A.
6 avenue des Andes
Bâtiment 11
91940 Les Ulis
France
Lexibook UK
PO Box 423
BUMBERLEIGH
EX32 2JW
United Kingdom



This product is not a toy.

United Kingdom & Ireland
For after-sales service, please contact us at savcomfr@lexibook.com.
www.lexibook.com

Environmental Protection
Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

Correct disposal of batteries in this product
(Applicable in countries with separate collection systems). This symbol means that the batteries contained in this product must not be disposed of with normal household waste. All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the local authority. Please do not dispose of batteries in fires as this may cause an explosion hazard. We strongly advise you to take your product to an official collection point or service center for the correct disposal of batteries. Incorrect disposal of batteries may be dangerous for the environment, animal and human health. Please follow local rules and never dispose of the product and rechargeable batteries with normal household waste.

Follow local rules and never dispose of the product and rechargeable batteries with normal household waste.
For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.
For the complete and full instruction manual, please refer to our website www.lexibook.com

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.

ENGLISH

SAFETY INSTRUCTIONS

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your unit.

- Read this Instruction Manual before you attempt to connect or operate the appliance.
- Keep these instructions in good condition. Read all warnings. Follow all instructions.
- Save this Instruction Manual for future reference.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- No naked flame source, such as candles, should be placed on the product.
- Ventilation should not be impeded by covering the ventilation openings.
- Only use accessories, which are specified by the manufacturer.
- Use replacement parts, which are specified by the manufacturer.