


TUNEWAVE FM

User Manual



Thank you for buying TUNEWAVE FM

Now you can enjoy playing your iPod's music on an FM radio in your car or in your home. Here are some tips to help you get started.

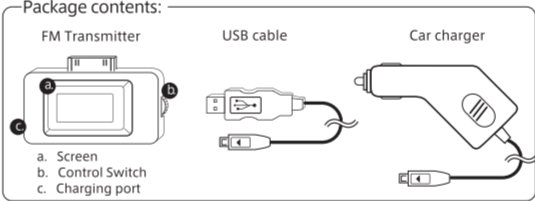

Instructions for using TUNEWAVE FM

- Step 1- Turn on your radio and tune it to an empty FM station which is playing only static noise.
- Step 2 - Plug TUNEWAVE FM into the dock connector on your iPod. TUNEWAVE FM will power up and the FM frequency light will turn on.
- Step 3 - Tune the FM frequency on TUNEWAVE FM using the control switch to match the FM frequency number on your radio.
- Step 4 - Turn on your iPod and select your music. Play and enjoy!

Instructions for using the car charger cable

Connect the car charger to a 12V power socket in your car. Connect the cable to the charging port located on the side of TUNEWAVE FM. The charging sign will appear on the iPod's screen.

Instructions for using the USB cable to connect to a computer

Connect one end of the USB cable to your computer. Connect the other end to the charging port located on the side of TUNEWAVE FM. You can now sync your iPod to your computer and charge your iPod using the USB cable.

Specifications

- FM Transmitter
 - Modulation: FM stereo
 - Frequency: 88.1 - 107.9 MHz
 - Antenna: Built-in antenna
 - Power: Powered by iPod
 - Size : About 62.5mm X 31.5mm X 13mm (Excluding Dock)
 - Weight: About 20g
- Car Charger Cable specifications
 - Input: 12V DC
 - Cable length: About 135cm
- USB Cable specifications
 - Cable length: About 45cm

Support

Please visit our website at www.tunewear.com <<http://www.tunewear.com>>

FCC statement :

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes and modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

