Each part name and button explanation



1. LED (Power check)	Check of power input status	
2. Number buttons (0 ~ 9)	Selection of song numbers	
3. Mode/High	Transferring mode, Controlling all values highly, Moving one step high on list	
4. Menu/▶ PMENU	Next page, Microphone1, Microphone2, Volume, Melody, Echo, Score display	
5. Cancel CANCEL	Cancel of the reserved song, Hiding of all menus	
6. Start/Stop	Stop or start of song	
7. List /Low	Display of the song list, Controlling all values lowly, Moving one step low on list	
8. Tempo/Tone ◀ TONE TONE	Previous page, Tone, Tempo control, Special play	
9. Reserve/REC	Song reservation, REC start, REC stop	
10. Power POWER	Turning on/off of microphone	
11. Power(box karaoke)	Turning on/off of box karaoke	
12. Cable connection pa	ırt	
13. Adaptor, Cigar jack of	connection part	

14. USB download cable connection part



Main functions-Menu explanations

1. Basic adjustment

When pressing the button, menu items are displayed. Selection of menu item is selected by the button, and each value of menu item is controlled by buttons. If you end the main functions, please press button. If you don't press any button for 5 seconds, menu function is ended automatically.

2. Specific details

Menu	Functions	Playing status	Standby status
Microphone 1	Controlling the microphone volume	0	0
Microphone 2	Controlling volume of duet microphone	0	0
Volume	Controlling volume of microphone accompaniment	0	0
Play	Controlling accompaniment volume	0	Х
Melody	Controlling melody	0	Х
Tone change	OFF Robot 12345 Mickey Mouse 123456 Light Doubler Medium Doubler Strong Doubler Octave Doubler	0	0
Echo	Controlling echo	0	0
Score display	Selecting ON/OFF of score display on TV	0	0
Key sound	Selecting ON/OFF of key sound	Х	0
Language	Selecting a language of each message	Х	0
EQ	Pop/ Rock/ Jazz/ Classic / Original	0	0

※ How to convert PAL / NTSC

- ① According to the connection method of page 11, connect them and turn on the power of box karaoke and microphone.
- 2 Press button -> press 4 button four times.
- ③ In case of PAL, it is converted to NTSC, and in case of NTSC, it is converted to PAL.

Main functions-Karaoke mode

When music is played in karaoke mode, a user can sing a song. The playing music and the user's song can be recorded with high quality.

• There are the letters of "Select a song" on the screen in karaoke mode.

1. Start/Stop

After selecting a song, pressing the button, the play is started. During the play, pressing the button, it is stopped

2. Select a song

- Number button (♠ ~♠)
 Select a wanted song by pressing number buttons.
- In case the multinational songs over two languages are saved internally the song numbers could be the same. If you press buttons, you can find a paticular language song you want.
 - 2) List button (LST)

When it is not playing in karaoke mode, and pressing button, song lists are displayed by 7 song unit.

buttons are to move above/below by one step,

buttons are to move by one page.
If you want to end the song list, please press was button.

When a song is playing, if you press we buttons, you can select the previous/next song of the present selected song.

3. Reservation

- After selecting a song, if you press button, the selected song is reserved. (Maximum 32 songs) The reserved song number is displayed on top of the TV screen.
- 2) If the playing song is ended, the reserved songs are played by order.
- In case you change another mode from karaoke mode, all the reserved songs are canceled

4. Reservation cancel

After pressing the same number as the reserved song, pressing was button, the reservation is canceled.

5. Tempo control

- 1) Tempo can be controlled during the play only.
- 2) If you want the tempo control, after pressing once, please control by very buttons.
- 3) If you end the tempo control, please press CANCE button.





Main functions-Karaoke mode

6. Tone control

- 1) Tone only can be controlled during the play.
- 2) If you want the tone control, after pressing twice, please control with , wo buttons.
- 3) If you end the tone control, please press button.

7. Recording

In karaoke mode, if you press button,
REC icon start blinking, and after that, all inputting
voices are recorded. During the play, playing music is also
recorded at the same time. If the playing song is ended,
recording is stopped automatically, and during the recording
if you press button the recording is stopped.

- In case there are not song numbers and song titles in the left top side of screen, if pressing button, the song is recorded.
- In case there are song numbers and song titles in the left top side of screen, if pressing Button, the song is reserved.

8. Special mode play

When it is not played, you can select special play items by pressing button.

- Special mode play has 4 items as below.
 - Continuous play →→
 Song numbers are played by order from the played song.
 - 2. Repeat play

 The played song is played repeatedly.
 - 3. Random play
 - A song is randomly selected and played.
 - Exit: Press button.
 It ends the special mode play.
- 💥 If you want to end the special play mode, please press 🍔 button.



Main function-Recording play mode (REC

In recording play mode, the recorded music can be played, saved, and deleted.

1. The recorded song play before save

After recording a song in karaoke mode status, button -> button -> button button button -> button button -> button button button once, and pressing button to listen to the recorded song whether it is proper to save or not, the song is played.

2. Save and delete of the recorded file

1) Save

After recording a song in karaoke mode status, we button->

After recording a song in karaoke mode status, pressing button, and pressing button, selection of memory is displayed.

After selecting the saving memory, and save it.

(0. Internal, 1~6. Additional pack)

Recording is available up to 32songs, according to the rest of memory capability, quantity of recording songs can be different.

2) Play of the saved file

In karaoke mode status,

button-> button-> button-> for move-> to button

In karaoke mode status, if pressing the button, and the button, recording file list and selection of items are displayed.

After selecting a recording file you want by using you, wo buttons, you can play it by totton.

3) Delete

In karaoke mode status, 🚧 -> LS/, -> LS/, , LOGE for move -> LS/, Delete: B button Cancel: OWOR button

In karaoke mode status, if pressing the we button, and the button, recording file list and selection of items are displayed.

After selecting a recording file you wanted by using buttons, you press button. The question screen is showed whether you will delete the file or not, if you want to delete the file, press button, and if you want to cancel the file to delete, press button.





Main function-MP3 mode MP3

In MP3 mode, MP3 music downloaded can be played.

After downloading MP3, you can play it as follows.

In karaoke mode status, wo button (Press it twice) -> us button

After selecting a wanted song by LITE, NOTE buttons,

"Download"-to install the program, to use the program.

if pressing the button, the MP3 song downloaded is played.

After downloading MP3, please follow the instructions.

* After logging in the homepage(www.conncom.com), please refer to



Caution

MP3 file is available to use until 44.1KHz Sampling Rate, 128Kbps, 6MB.

Main function-User mode USB

In user mode, there are selection functions of background screen and memory usage. If pressing the number key, it is moved to selection of each background image file and function of memory usage view.

1. Selection of background image file

After saving the wanted background image, you can change the background image as followings. In karaoke mode status, after pressing button three times, and pressing button, the file list is displayed to be selected as the background screen. After selecting the wanted image group, and if pressing button or button the file is selected. The selected image file is changed to screen after 20 seconds.

** After opening the homepage(www.conncom.com), please refer to "Download"—to install the program, to use the program.

2. Memory usage view.

In karaoke mode status, after pressing button three times, and pressing button, you can check the memory usage.

Present usage memory, and available memory are displayed.

If pressing on button, it is changed as user mode status





How to use accessories

1. Additional pack

1) Insert
Insert an additional pack as the arrow direction



Caution

Please insert, remove the additional pack after the power turns off. While operating, it causes the data damage.

2. Duet microphone



1) Duet MIC1



2) Duet MIC2

- Duet MIC1
 The duet MIC which does not have the function buttons.
- Duet MIC2
 The duet MIC which has the function buttons.

* It is not available to use two duet microphones at the same time.

Trouble shooting

Even though you operate as manual, if it doesn't work properly, Please check it again with reference to the following table.

Symptom	Cause	Measure	Applied device
The unit does not power ON	- Power plug is disconnected	- Connect power plug to the outlet	Box karaoke
	Batteries are inserted incorrectlyBatteries are discharged	- Check the inserting of batteries - Exchange if batteries are discharged	Microphone
Power is off while singing	- Cable, adaptor, connection of batteries are not correct	- Check cable, adaptor, connection of batteries	Box karaoke Microphone
Power turns on, but there is no video output	Cable connection is not correct TV channel is not correct	- Connect cables correctly (Yellow-image, Red & White-Voice) - Adjust TV channel as External input	Box karaoke TV
Audio output is unstable	- Volume control is too high	- Adjust volume control properly	Microphone
Microphone sound is little	- TV volume is low - Microphone volume is low	Adjust TV volume properly Adjust microphone volume properly	Microphone TV
Product functions are strange	 microphone sound and screen are strange needed to initialize the program 	- Initialize by pressing button + Number button four times	Microphone

For other cases, please contact RMA charger. After the warranty period, we charge you the RMA fee, so please refer to the quality warranty.

MUNIN

Product Maintenauce and Repair

Please clean the product outward by dry cloth.
Do not disassemble the product or use chemical fluids such as alcohol, benzene for cleaning.
There must be no maintenance and repair or cleaning by your own way. If you have any other questions, please contact RMA center.

1. When it is polluted by dust, chemistry, or oil type

Clean outward by dry cloth not to be damaged. In case pollution is too serious to use in a general way, please contact RMA center.



2. When it is polluted by carbonated drinks or liquor type

In case the outward is polluted only, please clean it up with dry cloth soaked with water, which the water cloes not come out.





In case pollution degree is not clear, please stop using it, and contact RMA center.

3. Handling of outward damage

In case a microphone outward is damaged while using it, please stop using it, and contact RMA center.



4. Storing the product

In case storing the product in a moist or heating place, it can be damaged.
Please store it in shade of good ventilation.
In case of storing for a long time, assemble each accessory, and store them in the case.





Product specification [MR-9100]

· Usage power: DC 7V, 400mA

· Sound source: highly efficient digital sound source

Consumption voltage: 1.5W

• External size: Box karaoke 160X130X40(mm)

Microphone 247XΦ44(mm)

· Weight: Box karaoke 230g

Microphone 174g (Except batteries)

• Image pixel: 65,000 Color high resolution image

• Image method: NTSC / PAL

Battery: 1.5V (AA x2)

Internal memory: 64Mbyte

Additional pack: Maximum 128Mbyte x 6pieces available

Download method: USB method

• Temperature movement: -10°C ~+50°C

Voice frequency range: 200~ 15,000Hz (-68dB)

