

### 3. Turn off

After using, turn off the transmitter and receiver. Take out the batteries and disconnect the cables when not use for a long time.

### Main technical parameters

#### A: Transmitter

Compatible with VCD, DVD, CD, and any other audio devices.

Transmission frequency: 49.86MHz

Modulation Mode: FM

Transmission distance without obstacle: 30 meters.

Power: DC 4.5V, static current is less than 20mA.

3× AAA batteries (NOT INCLUDED) or 5V/150mA AC adapter.

#### B: Receiver

Receiving frequency range: 49.86MHz.

Receiving Mode: FM

Power: DC 3V, static current is less than 20mA.

2× AAA batteries (NOT INCLUDED).

**Notes:** Please extend the audio cable and antenna to improve the performance.

### Problems and the solutions:

Phenomena	Causes	Eliminating Means
The audio signal can't be received	The power of the transmitter is not turned on.	Turn on the transmitter.
	The transmitter isn't connected with the audio set properly.	Connect the transmitter and audio set properly.
	The distance of receiver is beyond the transmission range.	Receive the signal in the transmission range.
Noise	The power of batteries in the receiver/transmitter is too low.	Replace the old batteries with new ones.
	The audio signal from your audio set is too strong or too weak.	Adjust the volume of your audio set properly.
Difficult to receive the audio signal	The power of batteries in the receiver/transmitter is too low.	Replace the old batteries with new ones.
	The receiver is moved too quickly.	Slow down or stop moving the receiver.

# VHF Wireless Headphone



### Operation Manual

JH-808D31

JH-308D31 wireless headphone is designed for PC and other audio/video devices users who would like to enjoy the listening silently without disturbing others

 
## Functions:

Wireless Listening Function:

The audio signal can go through walls, ceilings and other obstacle. The audio signal is wireless transmitted. The product get access to TV/VCD/DVD and other audio devices.

## Component Part Instruction



### 1. Transmitter



### 2. Receiver



### 3. Accessories

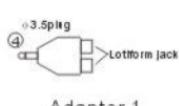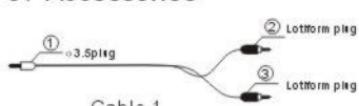

## User's manual:

### 1. Wireless Listening Function

#### ■ Transmitter adjustment

For the transmitter, mount 3× AAA batteries according to the engraved polarities in the battery case, or use AC adapter 5V/150mA.


Switch on the transmitter, the power indicator LED will be on. When you listen to TV, put the plug ② and ③ in the audio-out jack of TV, put plug ① to transmitter and set the volume in proper statue. When you listen to DVD or other audio devices, Connect cable 1 and adapter 1, then put plug ① to transmitter and plug ④ to earphone jack or audio out jack, and operate the volume of audio devices properly.

#### ■ Receiver adjustment

For the receiver, mount 2×AAA batteries as polarities instruction engraved in the battery case.

A: Switch on the receiver, adjust the volume properly.


B: Press the RESET button and hold on one second, then press the SCAN button, and hold for one second, if the connection between the transmitter and the audio device is correct, you can receive the signal sent out from the transmitter. You can repeat pressing the RESET and SCAN buttons again or more to get the perfect effect.

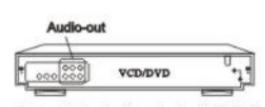

Connect to the Audio-out jack of VCD/DVD



Connect to the earphone jack of CD

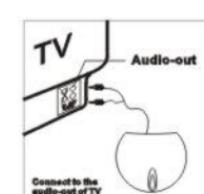

Connect to the audio-out of TV

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.