
WIRELESS MOUSE WITH HIDDEN RECIEVER WHR

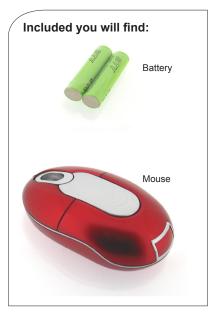

WARNINGS: Mouse will NOT work if there is more than 5 ft. between the mouse and receiver. Mouse will NOT work well on glass or reflective surfaces, or 3-D mouse pads. Please remove batteries if the mouse will not be used for extended periods of time. For optimal performance, recommend use with PREMIUM batteries.

Important Information Required By the FCC The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equiment.

Turn over your mouse and press (with a pointed instrument - i.e. pen) the rubber button to the left of the optical mirror. If the mouse is not active repeat steps #4 and #5.

including interference that may cause undesired operation.

Make sure your computer is on and that the pointer icon is active on your computer (by way of your existing mouse)



To insert batteries, push the top half of the button in the center of the mouse (indicated below) to release cover and pull back bottom cover. Insert the batteries according to the appropriate polarity marks (+,-). Push battery cover forward. When you hear a "click", the cover is locked.



To remove the remote receiver, push the lower half of the button in center of the mouse (indicated below). push down here activation button

