

## Function Introduction

1. Output module and input module set up communication code by pressing keys. Code will be processed by CPU chip and transmitted to IC. 24C08. CPU chip will enter into stand-by mode.
2. After output module received data from input module, data will be processed by CPU, CPU will drive relevant loading according to actual information.
3. After input module received data from output module, data will be processed by CPU, CPU will drive relevant loading according to actual information.