

COR IBR600LPE (Integrated Broadband Router)



# QUICK START GUIDE

## SETTING UP THE ROUTER


1) Purchase a data plan. Then insert the SIM if model requires.



2) Plug the power supply into an electrical outlet.

3) Connect WiFi (2.4) and modem antennas (finger tight only). Purchase and connect active GPS antenna for -PWD models.

4) Connect the power supply to the IBR600. Ensure power is switched on. O = OFF I = ON

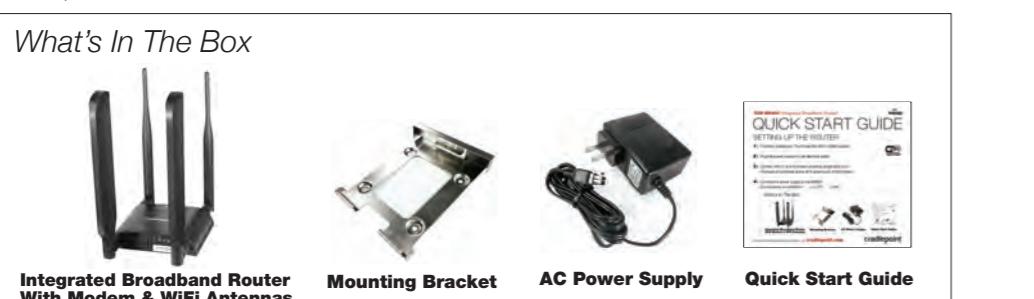for more information about your product, visit: [cradlepoint.com](http://cradlepoint.com)

## UPDATING FIRMWARE

CradlePoint regularly creates new firmware packages. You may need to update firmware to use the IBR600 with new modems and to access our latest features.

### HOW TO UPDATE FIRMWARE

- 1) Log into the administration pages (see page 3). You may have changed the **ADMINISTRATOR PASSWORD** when you used the **FIRST TIME SETUP WIZARD**.
- 2) Select **SYSTEM SETTINGS** on the top navigation bar, then **SYSTEM SOFTWARE** in the dropdown menu.
- 3) Find the **FIRMWARE UPGRADE** section. This displays the current firmware version that is installed and indicates if updated firmware is available.
- 4) Click **AUTOMATIC (Internet)** if new firmware is available. The IBR600 will download and install the firmware and automatically reboot itself. A status monitor will appear and indicate when this process is complete. This process may take several minutes depending on your Internet connection speed.

If your device does not have an active Internet connection, you need to download the latest firmware from [cradlepoint.com/firmware](http://cradlepoint.com/firmware) to your desktop. Then use the **MANUAL FIRMWARE UPLOAD** option.



NOTE: Access to firmware upgrades requires a CradleCare Support Agreement or Enterprise Cloud Manager.

## CRADLEPOINT ENTERPRISE CLOUD MANAGER

### NEXT GENERATION NETWORK MANAGEMENT AND APPLICATION PLATFORM

Rapidly deploy and dynamically manage networks at geographically distributed stores and branch locations with Enterprise Cloud Manager, CradlePoint's next generation application platform that will improve productivity, increase reliability, reduce costs, and enhance the intelligence of your network and business operations. Subscription required. See [cradlepoint.com/ecm](http://cradlepoint.com/ecm) for details.

## PORTS & SWITCHES

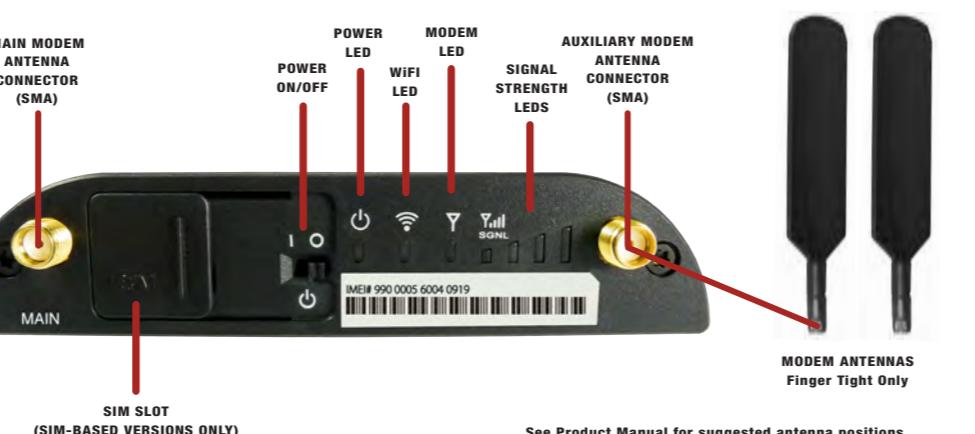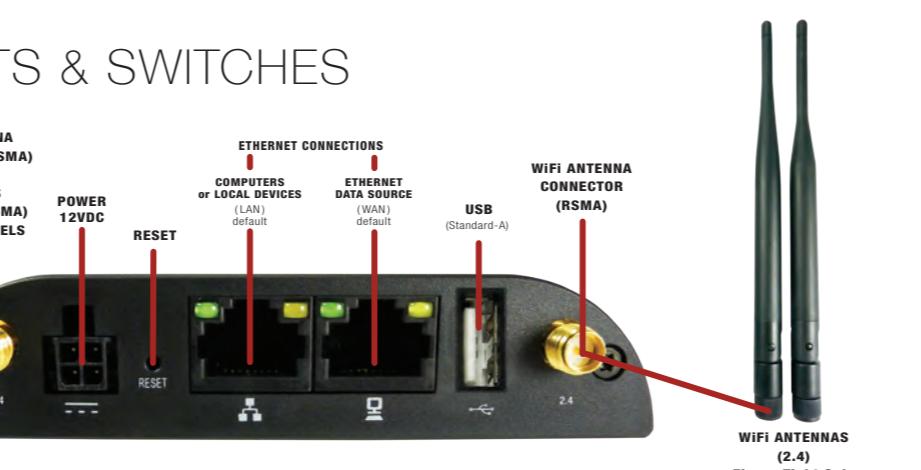

## ACCESSING THE ADMINISTRATION PAGES

To make configuration changes to your router, open the IBR600's GUI-based administration pages.

- 1) Connect via Ethernet or WiFi. For WiFi, the default SSID is **IBR600-xxx** (last 3 characters of the MAC address).
- 2) Open a browser window and type "**cp**" or "**192.168.0.1**" in the address bar. Press **ENTER/RETURN**.
- 3) When prompted for your password, type the **eight character DEFAULT PASSWORD** found on the product label.

## THE FIRST TIME SETUP WIZARD

When you log in for the first time, you are automatically directed to the **FIRST TIME SETUP WIZARD**, which will help you customize your COR IBR600. Change any of the following:

Administrator password  
Time zone  
WiFi network name, security mode, and password  
Access Point Name (APN) for SIM-based modems  
WAN failure check mode

If you are currently using the IBR600 WiFi network, you will need to reconnect your devices to the network using the newly established wireless network name and password.

NOTE: To return to the First Time Setup Wizard after your initial login, select **GETTING STARTED** on the top navigation bar and **FIRST TIME SETUP** in the dropdown menu.

**RESET:** To restore the COR IBR600 to its factory default settings, press and hold the **RESET** button on the side of the device for ten seconds. Reset returns the login password to the **DEFAULT PASSWORD** and resets all configuration changes.

3

Due to the nature of wireless communications, transmission and reception of data by the IBR600 device can never be guaranteed, and it is possible that data communicated wirelessly may be delayed, corrupted (i.e., contain errors), or totally lost. The IBR600 device is not intended for, and CradlePoint recommends the device not be used in any critical applications where failure to transmit or receive data could result in property damage or loss or personal injury of any kind (including death) to the user or to any other party. CradlePoint expressly disclaims liability for damages of any kind resulting from: (a) delays, errors, or losses of any data transmitted or received using the device; or (b) any failure of the device to transmit or receive such data.

For proper and safe vehicle installations, the GPIO accessory cable must be connected to a fused circuit in the vehicle. This fused circuit requires a 1.5A fuse. If the supply connection is made directly to the battery, the fuse should be installed in the positive lead. For North America, a UL Listed fuse is to be used.

Warning: This product is only to be installed by qualified personnel!

For product available in the USA/Canada market, only channel 1-11 can be operated. Selection of other channels is not possible. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

### Industry Canada Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

For product available in the USA/Canada market, only channel 1-11 can be operated. Selection of other channels is not possible. Pour les produits disponibles aux États-Unis / Canada du marché, seul le canal 1 à 11 peuvent être exploités. Sélection d'autres canaux n'est pas possible.

### IMPORTANT NOTE:

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &amp; your body. Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

### IMPORTANT NOTE:

#### IC Radiation Exposure Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator &amp; your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

## ACTIVATE YOUR MODEM

A wireless broadband data plan must be added to your IBR600. Wireless broadband data plans are available from wireless carriers such as Sprint, Verizon, AT&T, EE, Vodafone, and Clearwire. Mobile broadband, M2M, and router pricing plans are available. To add or transfer a line of service you will need to provide a unique identifier such as ESN for 3G EVDO modems or IMEI/MEID for LTE or HSPA+ modems. LTE and HSPA+ plans require a SIM. SIM provisioning for LTE and HSPA+ models is done the same way as for USB modems. Once provisioned insert the SIM into the router until it clicks into place, close the SIM door, and turn on the power switch. After adding a data plan to the Verizon 3G EVDO model the modem may need to be activated. Log into the IBR600 administration pages (see page 3) and select **Internet** from the top navigation bar and then **Connection Manager** from the dropdown menu. Find and select the CradlePoint "EVDO Modem" and click **Control** and then click **Activate**. When modem activation is complete, confirm the modem LED is solid green on the router.

For more information on activation see [cradlepoint.com/activation](http://cradlepoint.com/activation).

The NM (no module) units do not have an integrated modem. An attached USB modem may require activation.

## SPECIAL FEATURES

IPSec VPN End-Point Support  
GRE Tunneling  
Data Usage Management & Alerts  
GPIO Interface  
GPS (if supported by modem)  
Failover/Failback  
WiFi Hotspot Services (Captive Portal)  
IP Passthrough  
WiFi as WAN & Dual SSIDs  
VLAN Support  
CradlePoint Enterprise Cloud Manager  
USB to Serial Console Passthrough Support  
LAN/WAN Affinity  
BGP/OSPF/RIP  
VRRP

## ACTIVE GPS: -PWD MODELS

The **IBR600XX-XX-PWD** now come with an active GPS connection at 3.3V and 100mA max.

For full functionality you will need to purchase an active GPS antenna separately. The -PWD models include only one WiFi antenna for operation in 1x1 WiFi mode.

To learn more about features, visit [cradlepoint.com/IBR600](http://cradlepoint.com/IBR600)

Ce dispositif a été conçu pour fonctionner avec une antenne WiFi ayant un gain maximal de 5 dBi. Une antenne à gain plus élevé est strictement interdite par les règlements d'Industrie Canada. L'impédance d'antenne requise est de 50 ohms.

INFORMATION FOR EUROPE, DECLARATION OF COMPLIANCE CradlePoint, Inc declares that the IBR600 is in compliance with the essential requirements of the R&amp;TTE Directive 1999/5/EC, Energy Related Products Directive 2009/125/EC, Electromagnetic Compatibility Directive 2004/108/EC, Low Voltage Directive 2006/95/EC, and RoHS2 Directive 2011/65/EC.

A copy of the original European DoC may be obtained from [cradlepoint.com/product-certifications](http://cradlepoint.com/product-certifications).

AT BE BG CZ DK EE FI FR DE GR HU IE LV LT LU MT NL PL PT RO SK SI ES SE GB IS LI NO CH TR

Operation of the device in the 5150-5250 MHz frequency band is restricted to indoor use only. To comply with RF Exposure requirements,

the product must be installed and operated with a minimum separation distance of 25 cm between the antennas and nearby persons.

RECYCLING AND ENVIRONMENTAL INFORMATION To find information on CradlePoint's commitment to our environment and how to responsibly recycle CradlePoint products, please visit [cradlepoint.com/recycle](http://cradlepoint.com/recycle).OPEN SOURCE SOFTWARE This product contains software distributed under one or more of the following open source licenses: GNU General Public License Version 2, BSD License, Net-SNMP License, and PSF License Agreement for Python 3.3. For more information on this software, including licensing terms and your rights to access source code, contact CradlePoint at [www.cradlepoint.com/opensource](http://www.cradlepoint.com/opensource).

WARRANTY INFORMATION CradlePoint, Inc. warrants this product against defects in materials and workmanship to the original purchaser (or the first purchaser in the case of resale by an authorized distributor) for a period of one (1) year from the date of shipment. This warranty is limited to a repair or replacement of the product, at CradlePoint's discretion as purchaser's sole and exclusive remedy. CradlePoint does not warrant that the operation of the device will meet your requirements or be error free. Within thirty (30) days of receipt should the product fail for any reason other than damage due to customer negligence, purchaser may return the product to the point of purchase for a full refund of the purchase price. If the purchaser wishes to upgrade or convert to another CradlePoint, Inc. product within the thirty (30) day period, purchaser may return the product and apply the full purchase price toward the purchase of another CradlePoint product. Any other return will be subject to CradlePoint, Inc.'s existing return policy.

LIMITATION OF CRADLEPOINT LIABILITY The information contained in this Quick Start Guide is subject to change without notice and does not represent any commitment on the part of CradlePoint or its affiliates. CRADLEPOINT AND ITS AFFILIATES HEREBY SPECIFICALLY DISCLAIM LIABILITY FOR ANY AND ALL: (A) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE, OR EXEMPLARY DAMAGES, INCLUDING WITHOUT LIMITATION FOR LOSS OF PROFITS OR REVENUE OR OF ANTICIPATED PROFITS OR REVENUE ARISING OUT OF THE USE OR INABILITY TO USE THE DEVICE, EVEN IF CRADLEPOINT AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND EVEN IF SUCH DAMAGES ARE FORESEEABLE; OR (B) CLAIMS BY ANY THIRD PARTY. Notwithstanding the foregoing, in no event shall the aggregate liability of CradlePoint and/or its affiliates arising under or in connection with the device, regardless of the number of events, occurrences, or claims giving rise to liability, exceed the price paid by the original purchaser of the device.

PRIVACY CradlePoint collects general data pertaining to the use of CradlePoint products via the Internet including, by way of example, IP address, device ID, operating system, browser type and version number, etc. To review CradlePoint's privacy policy, please visit: <http://cradlepoint.com/privacy>.OTHER BINDING DOCUMENTS, TRADEMARKS, COPYRIGHT By activating or using your IBR600 device, you agree to be bound by CradlePoint's Terms of Use, User License and other Legal Policies, all as posted at [cradlepoint.com/legal](http://cradlepoint.com/legal). Please read these documents carefully.

© 2014 CradlePoint, Inc. All rights reserved. CradlePoint is not responsible for omissions or errors in typography or photography. CradlePoint, IBR600, WiPiPe™, the WiPiPe logo, and the CradlePoint logo are trademarks of CradlePoint, Inc. in the US and other countries. Other trademarks are property of their respective owners.