







SKU13















2. Photograph of Accessory


Brand Name: ZEBRA / Model Name: MC3401

Specification of Accessories			
Adapter USB Wall Charger	Brand Name	Zebra	Model Number PWR-WUA5V12W0US
Battery 1 Standard Battery (7000mAh)	Brand Name	Zebra	Model Number BT-000375
			Manufacturer TWS
Battery 2 Standard Battery (7000mAh)	Brand Name	Zebra	Model Number BT-000375
			Manufacturer Inventus
Battery 3 BLE Battery (7000mAh)	Brand Name	Zebra	Model Number BT-000444
Type C USB Cable	Brand Name	Zebra	Model Number CBL-TC5X-USBC2A-01
USB Cable Cup	Brand Name	Zebra	Model Number CBL-MC33-USBCCHG-01
USB-C PTT Headset	Brand Name	Zebra	Model Number HDST-USBC-PTT1-01
USB-C to 3.5mm adapter	Brand Name	Zebra	Model Number ADP-USBC-35MM1-01
3.5mm To Quick Disconnect (QD) Adapter Cable	Brand Name	Zebra	Model Number ADP-35M-QDCBL1-01
3.5mm PTT Headset	Brand Name	Zebra	Model Number HDST-35MM-PTT1-01
3.5mm PTT HS2100 Headset	Brand Name	Zebra	Model Number HS2100
Quick Disconnect (QD) Cable	Brand Name	Zebra	Model Number CBL-HS2100-QDC1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.

Adapter
USB Wall Charger




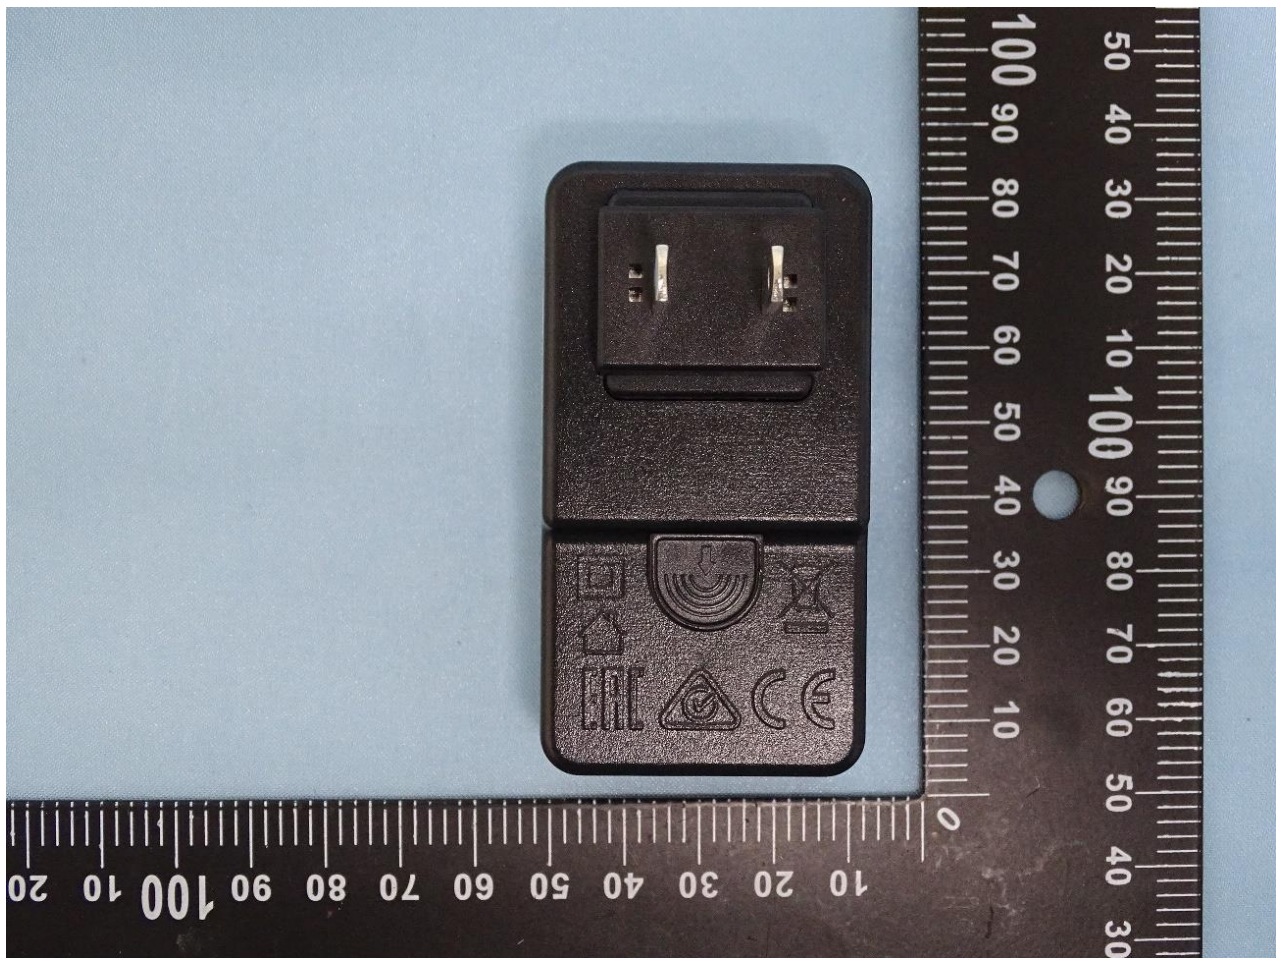



Battery 1

Standard Battery (7000mAh)

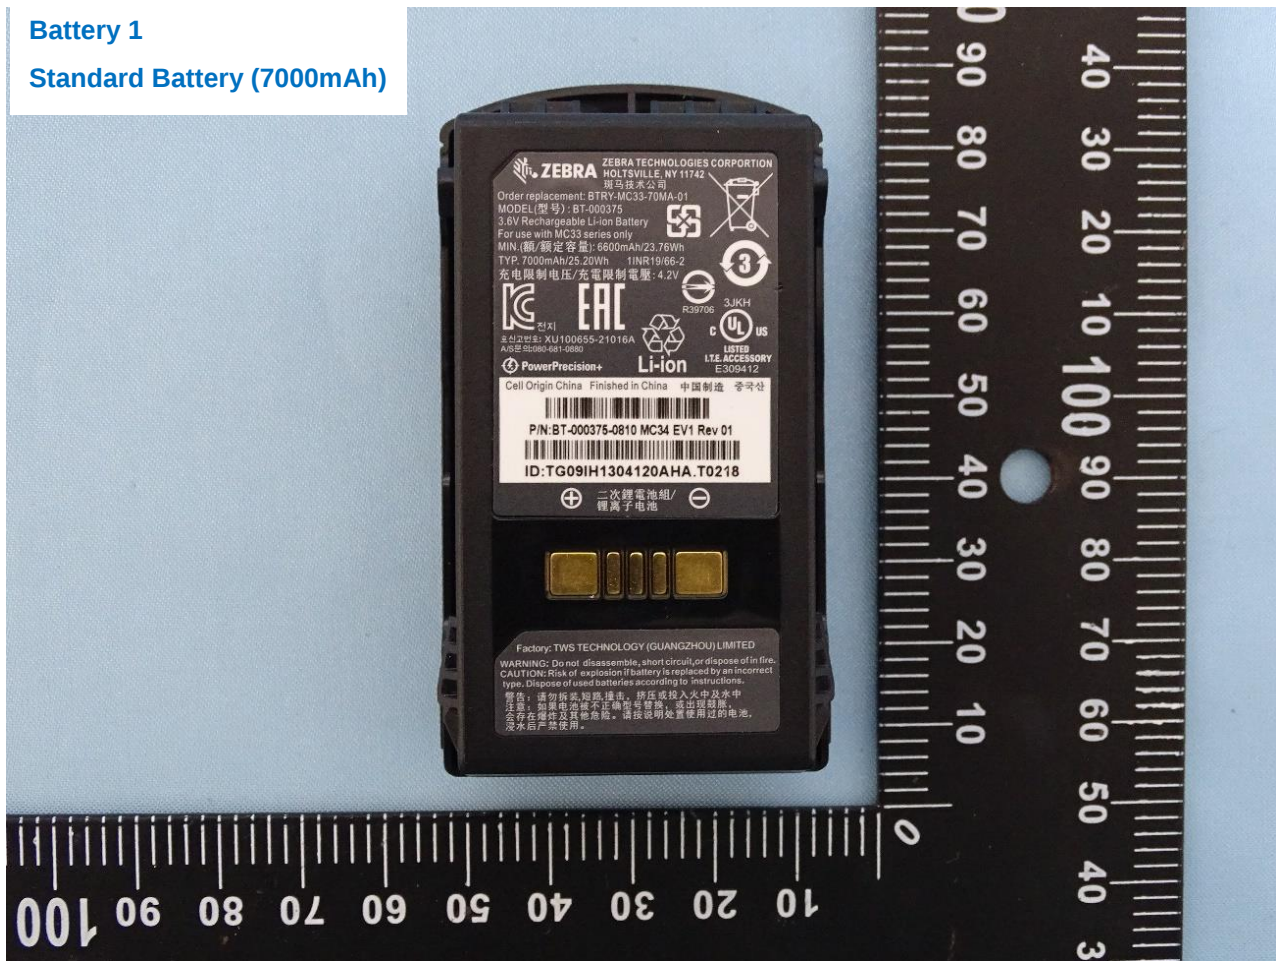





Battery 2

Standard Battery (7000mAh)



Battery 3

BLE Battery (7000mAh)



Type C USB Cable



USB Cable Cup






USB-C PTT Headset



USB-C to 3.5mm adapter



3.5mm To Quick Disconnect (QD) Adapter Cable

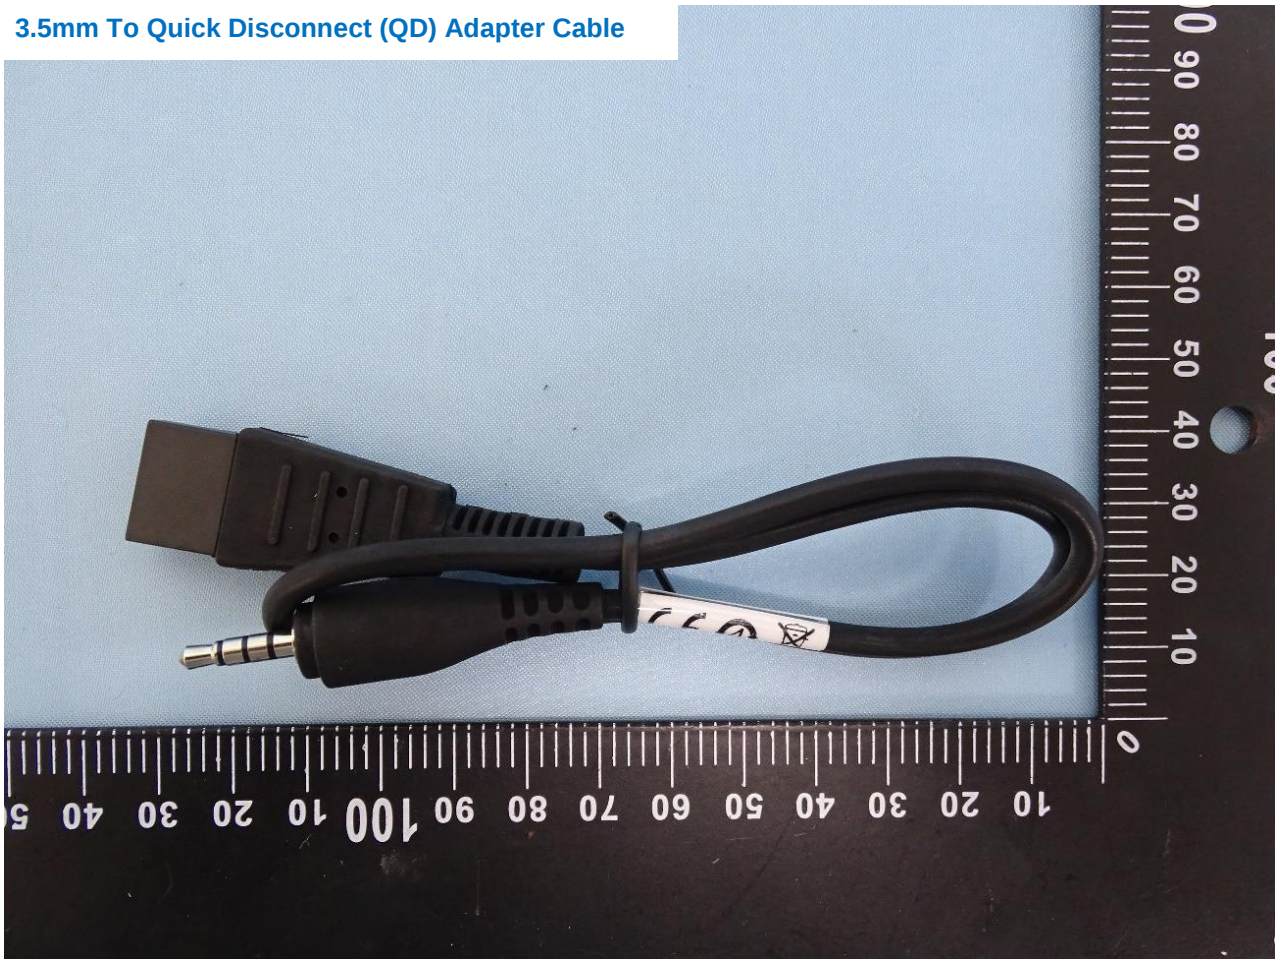

3.5mm PTT Headset



3.5mm PTT HS2100 Headset





Quick Disconnect (QD) Cable

