





2. Photograph of Accessory


Brand Name: ZEBRA / Model Name: MC345B

Specification of Accessories				
Adapter 1 USB Wall Charger	Brand Name	Zebra	Model Number	PWR-WUA5V12W0US
Battery 1 Standard Battery (7000mAh)	Brand Name	Zebra	Model Number	BT-000375
			Manufacturer	TWS
Battery 2 Standard Battery (7000mAh)	Brand Name	Zebra	Model Number	BT-000375
			Manufacturer	Inventus
Battery 3 BLE Battery (7000mAh)	Brand Name	Zebra	Model Number	BT-000444
Battery 4 BLE Battery (7000mAh)	Brand Name	Zebra	Model Number	BT-000375B
Type C USB Cable	Brand Name	Zebra	Model Number	CBL-TC5X-USBC2A-01
USB Cable Cup	Brand Name	Zebra	Model Number	CBL-MC33-USBCHG-01
Soft Holster for Gun Type	Brand Name	Zebra	Model Number	SG-MC3021212-01R
Soft Holster for Brick Type	Brand Name	Zebra	Model Number	SG-MC3X-SHLSTB-01
USB-C PTT Headset	Brand Name	Zebra	Model Number	HDST-USBC-PTT1-01
USB-C to 3.5mm adapter	Brand Name	Zebra	Model Number	ADP-USBC-35MM1-01
3.5mm To Quick Disconnect (QD) Adapter Cable	Brand Name	Zebra	Model Number	ADP-35M-QDCBL1-01
3.5mm PTT Headset	Brand Name	Zebra	Model Number	HDST-35MM-PTT1-01
3.5mm PTT HS2100 Headset	Brand Name	Zebra	Model Number	HS2100
Quick Disconnect (QD) Cable	Brand Name	Zebra	Model Number	CBL-HS2100-QDC1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.


Adapter 1 USB Wall Charger



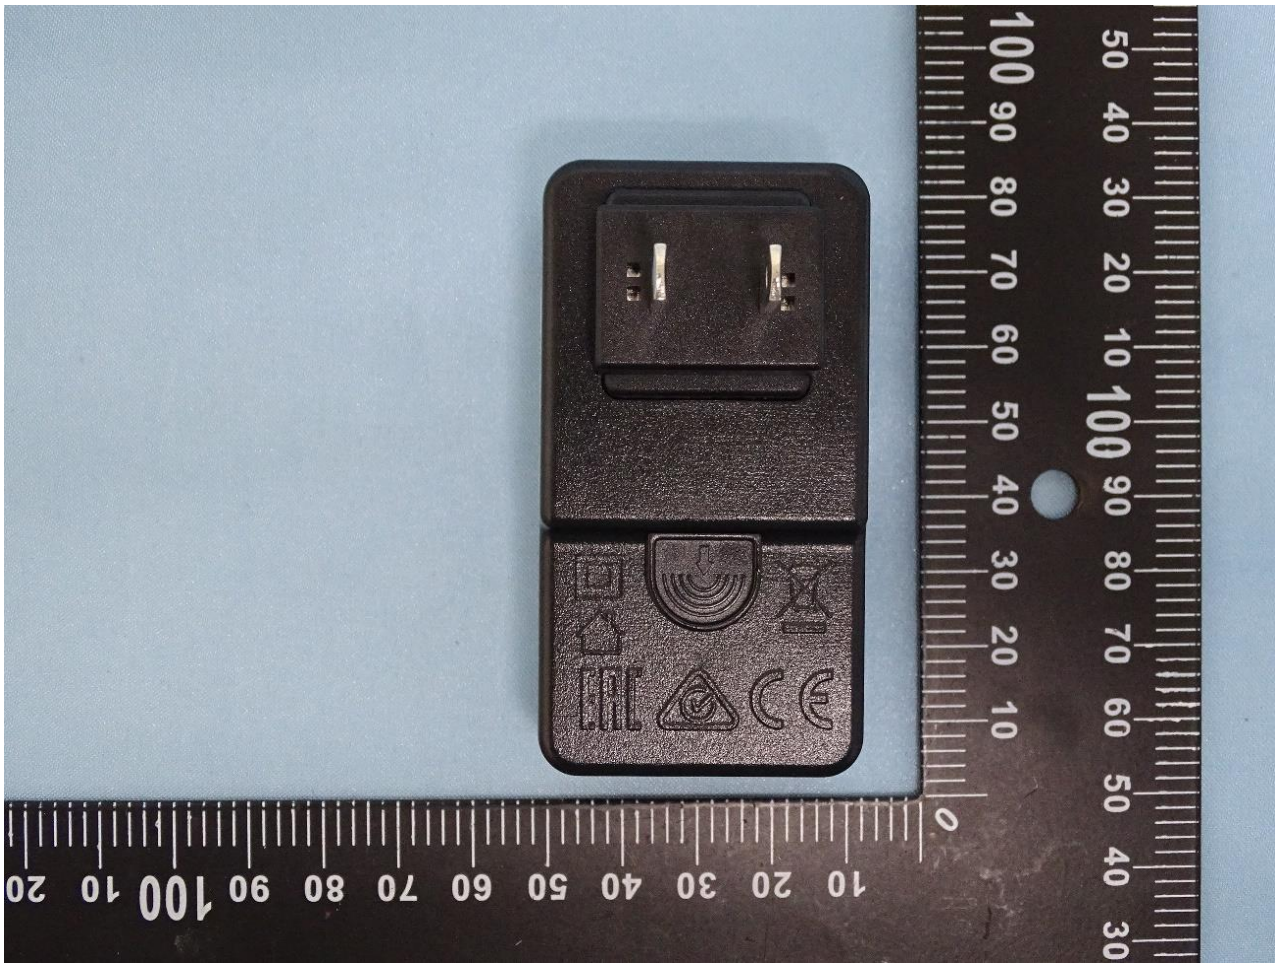



Battery 1 Standard Battery (7000mAh)

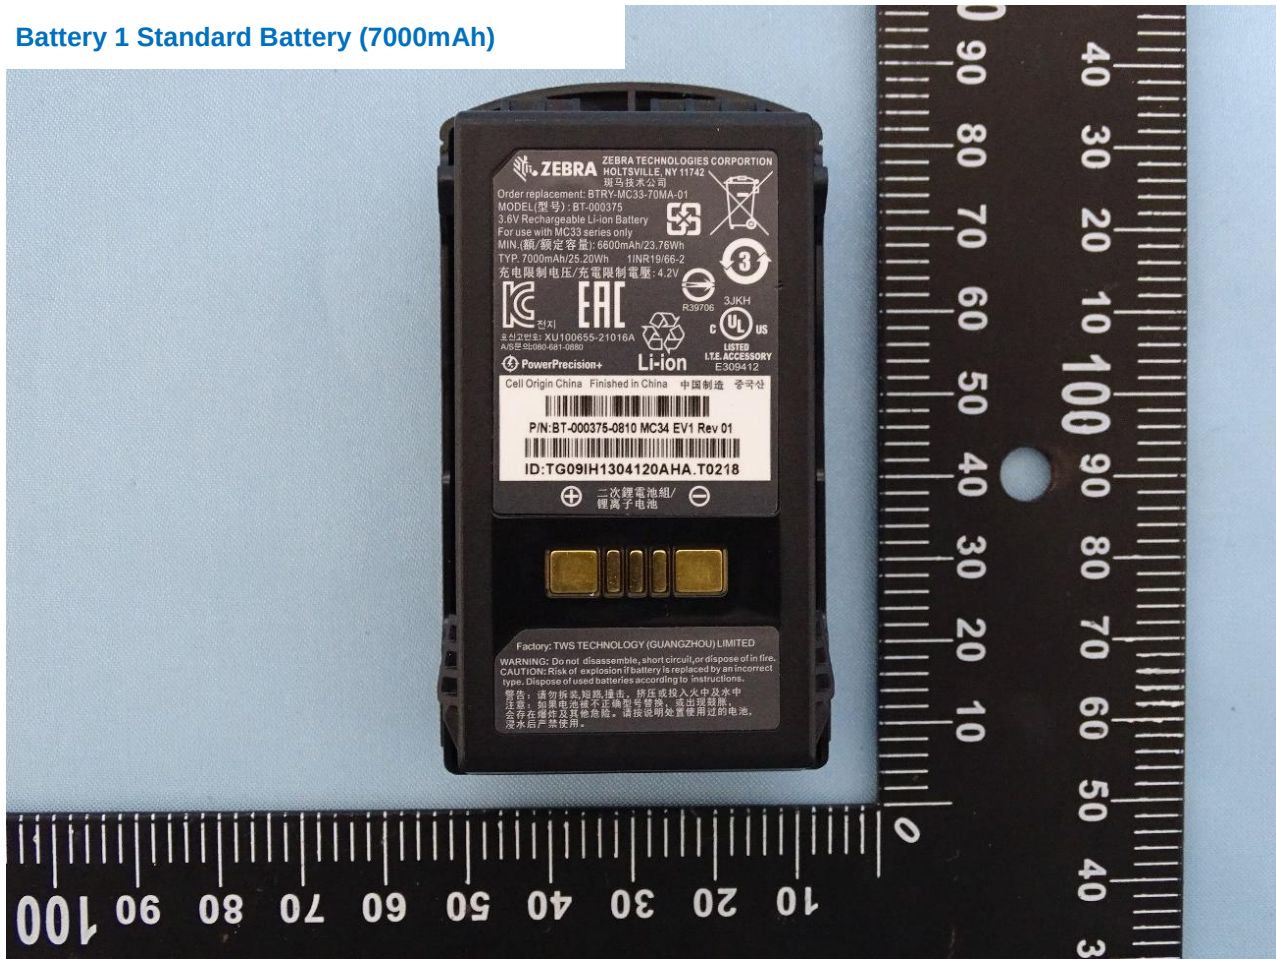





Battery 2 Standard Battery (7000mAh)



Battery 3 BLE Battery (7000mAh)



Battery 4 BLE Battery (7000mAh)







Type C USB Cable



USB Cable Cup






USB-C PTT Headset



USB-C to 3.5mm adapter



3.5mm To Quick Disconnect (QD) Adapter Cable

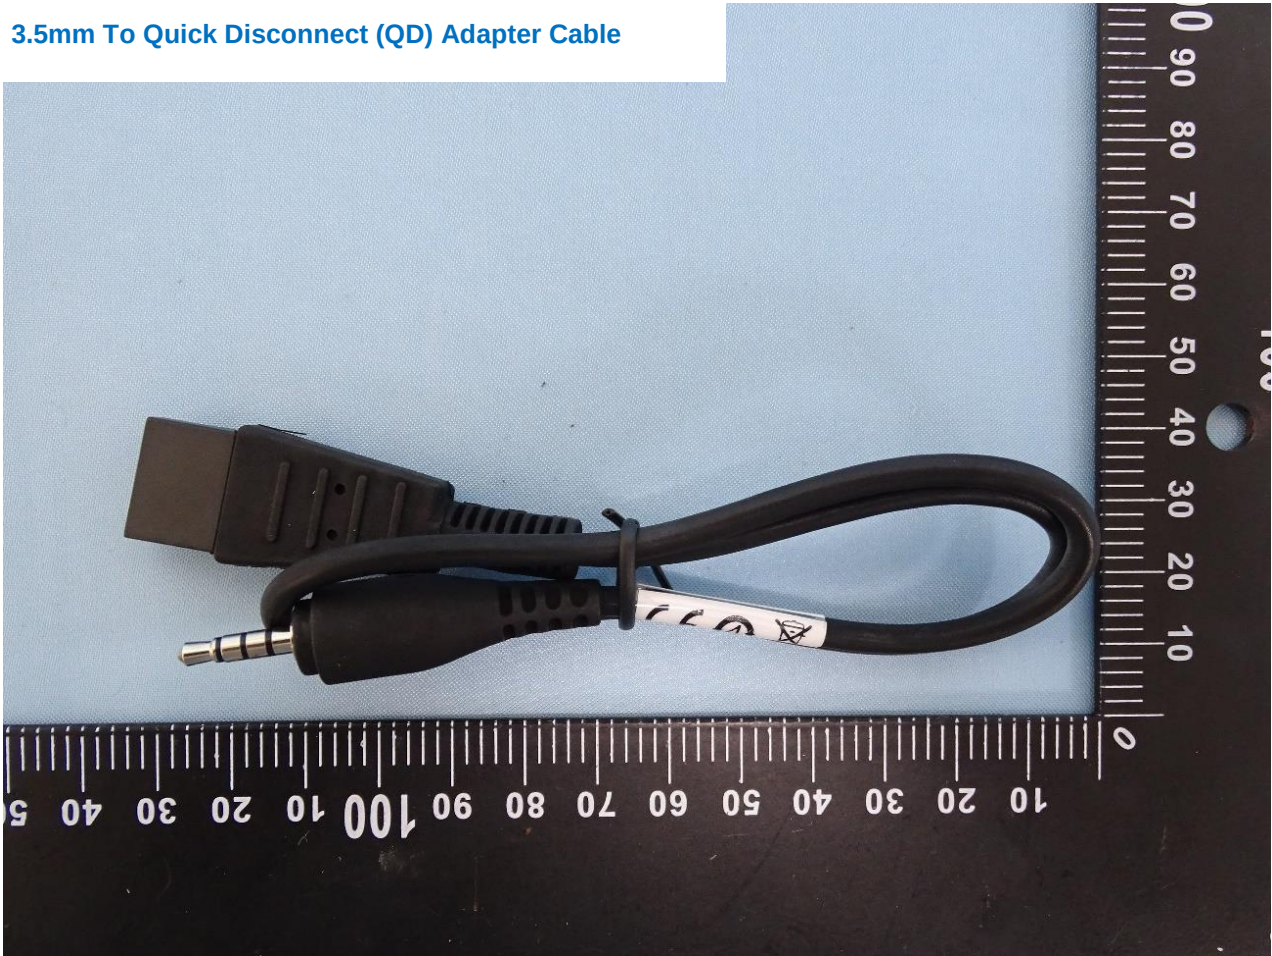

3.5mm PTT Headset



3.5mm PTT HS2100 Headset





Quick Disconnect (QD) Cable

