




1. External Photograph of EUT

Brand Name: Zebra / Model Name: RSBT5


Sample 1



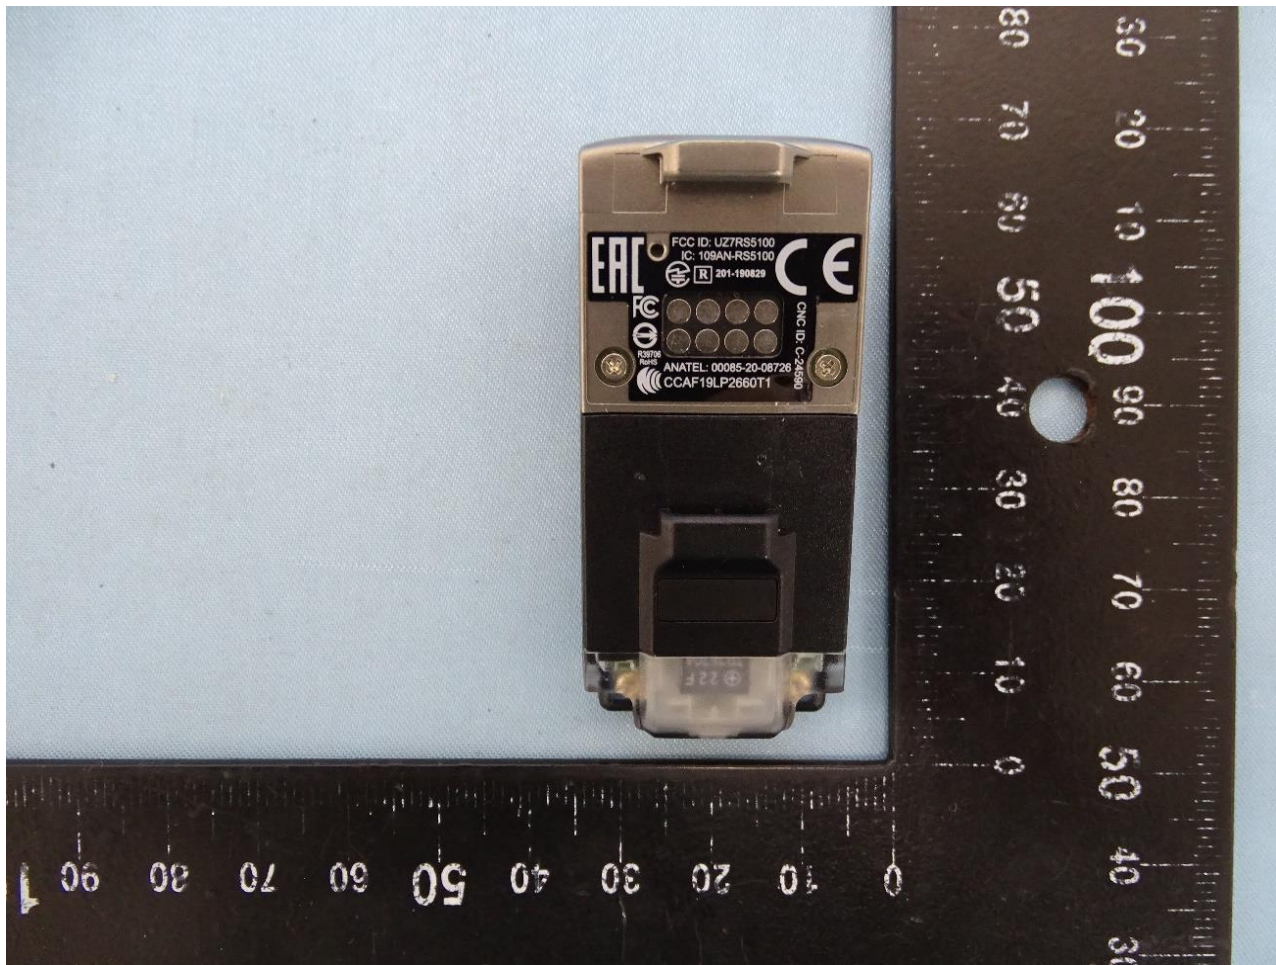







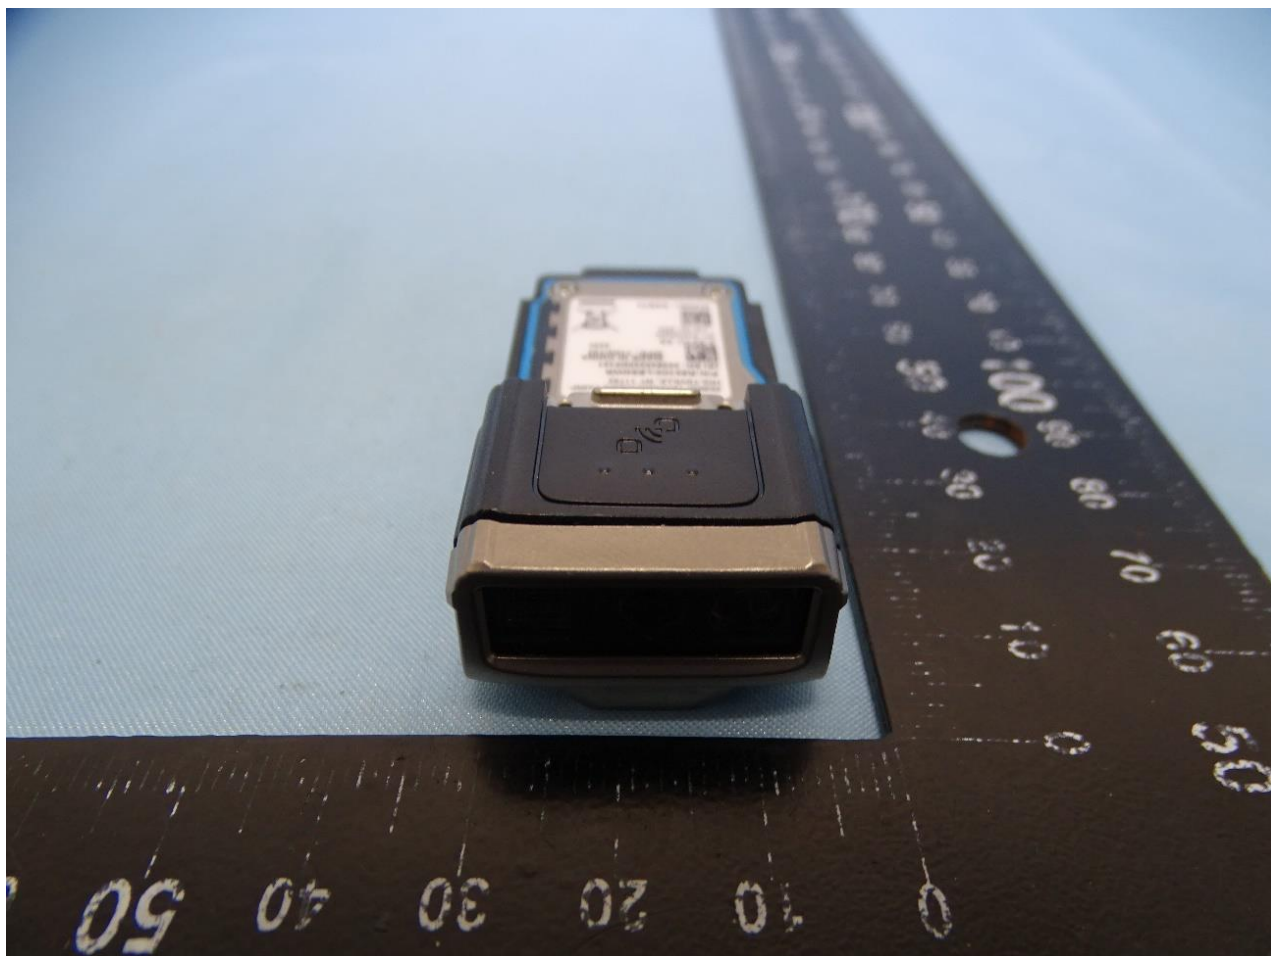




Sample 2

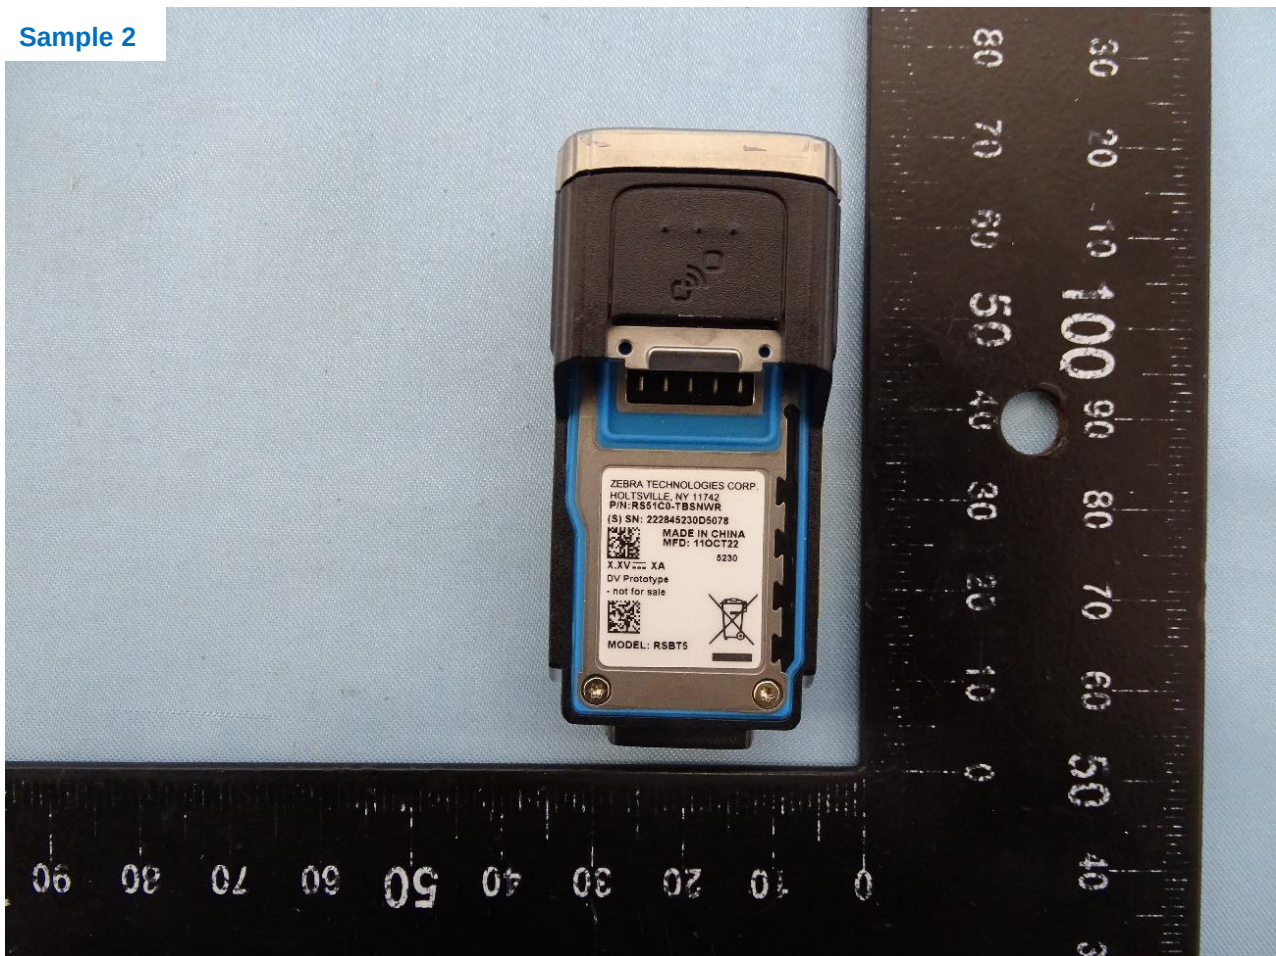


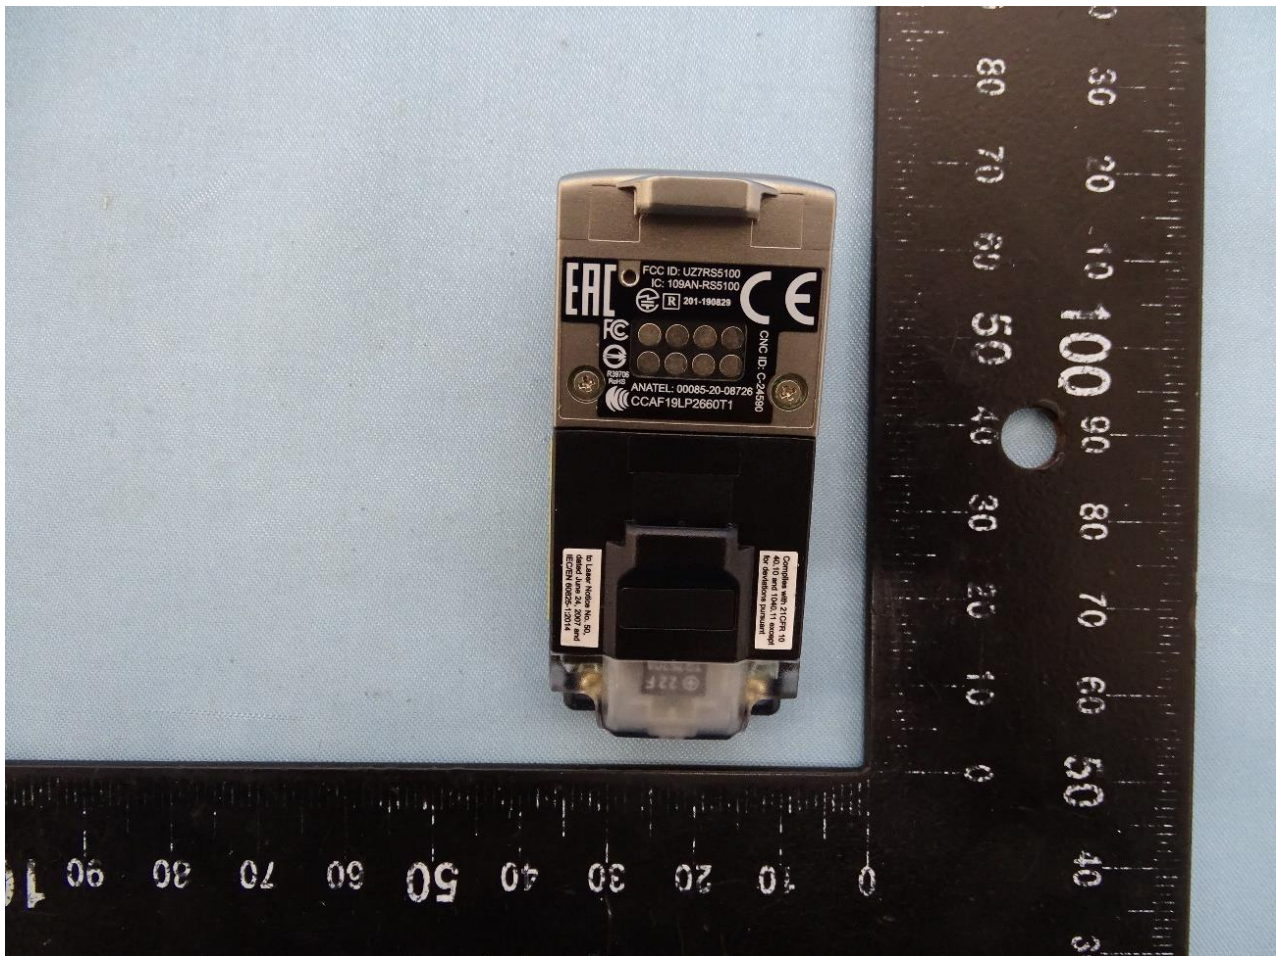



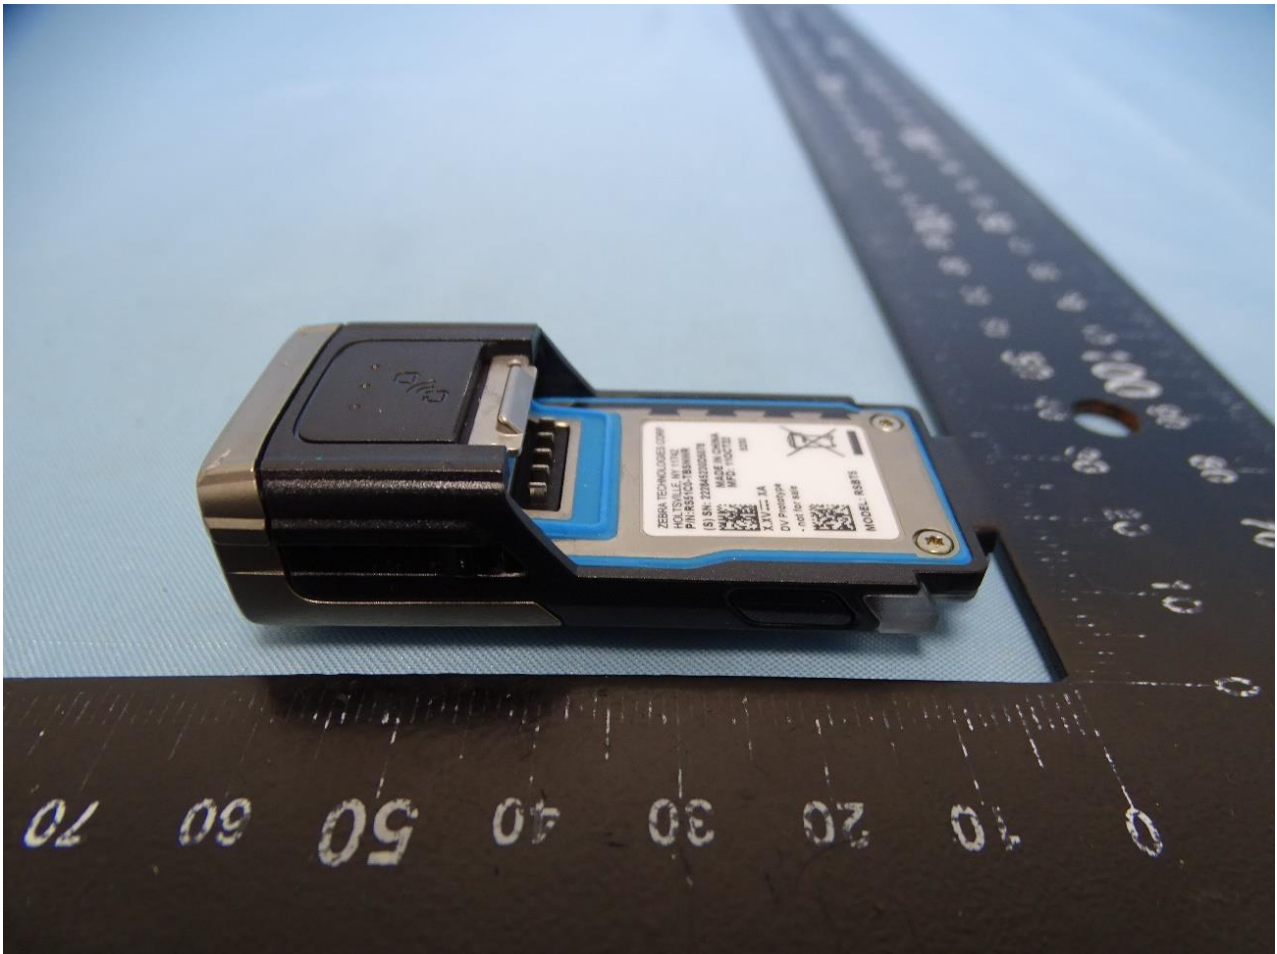



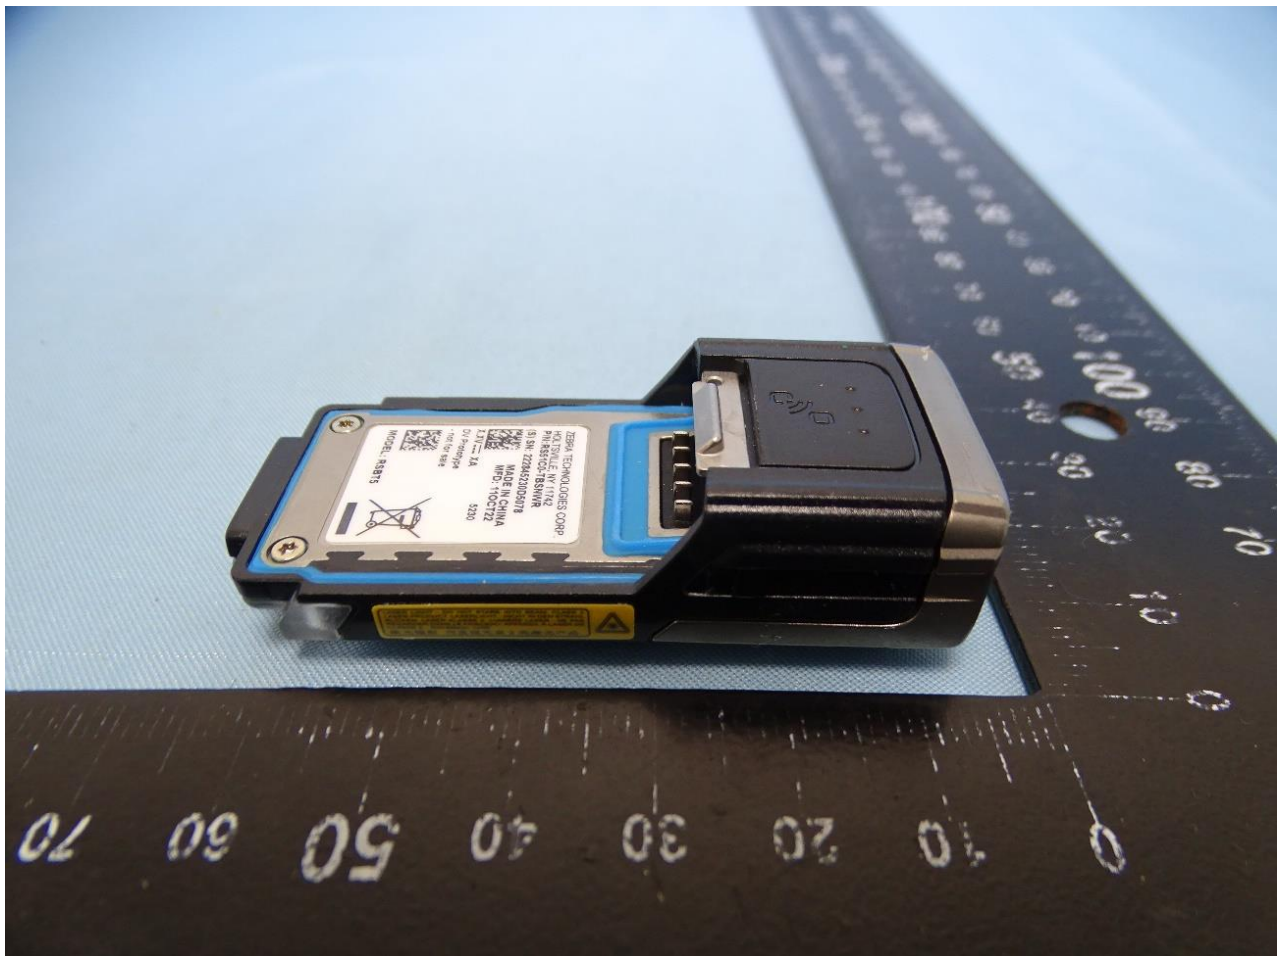



2. Photograph of Accessory

Brand Name: Zebra / Model Name: RSBT5

Specification of Accessory		
Battery 1	Brand Name	Zebra
	Model Name	BT-000397
Battery 2	Brand Name	Zebra
	Model Name	BT-000398
Power supply (50W)	Brand Name	Zebra
	Part Number	PWR-BGA12V50W0WW
DC Line Cable (50W)	Brand Name	Zebra
	Model Name	CBL-DC-388A1-01
Single Trigger	Brand Name	Zebra
	Part Number	SG-RS51-TRGSS-01
Double Trigger	Brand Name	Zebra
	Part Number	SG-RS51-TRGDU-01
Lanyard	Brand Name	Zebra
	Part Number	SG-RS5X6-LNYD-01
Double Side Trigger with Vibrator	Brand Name	Zebra
	Part Number	SG-RS51-TRGDV-01
Double Side Trigger (USBC with charge pad)	Brand Name	Zebra
	Part Number	SG-RS51-TRGDU-01
Double Side Trigger (USBC without charge pad)	Brand Name	Zebra
	Part Number	SG-RS51-TRGDU-CN
Back of the hand mount	Brand Name	Zebra
	Part Number	SG-RS5X6-BHMT-01


Remark: For accessories equipped with this EUT, please refer to the following photos.



Power supply (50W)



Battery 1

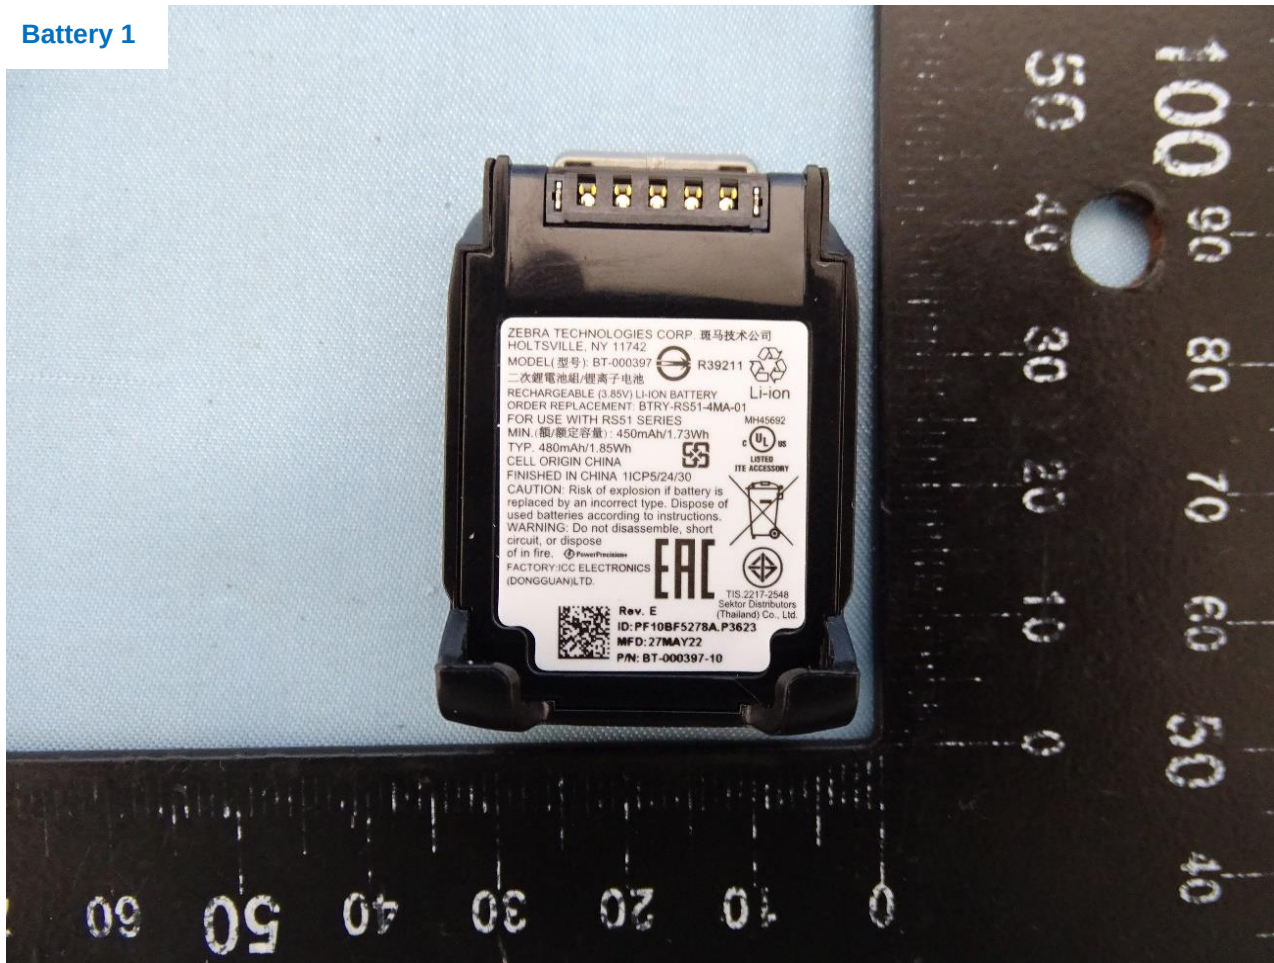





Battery 2 (Extended)








Single Trigger







Double Trigger

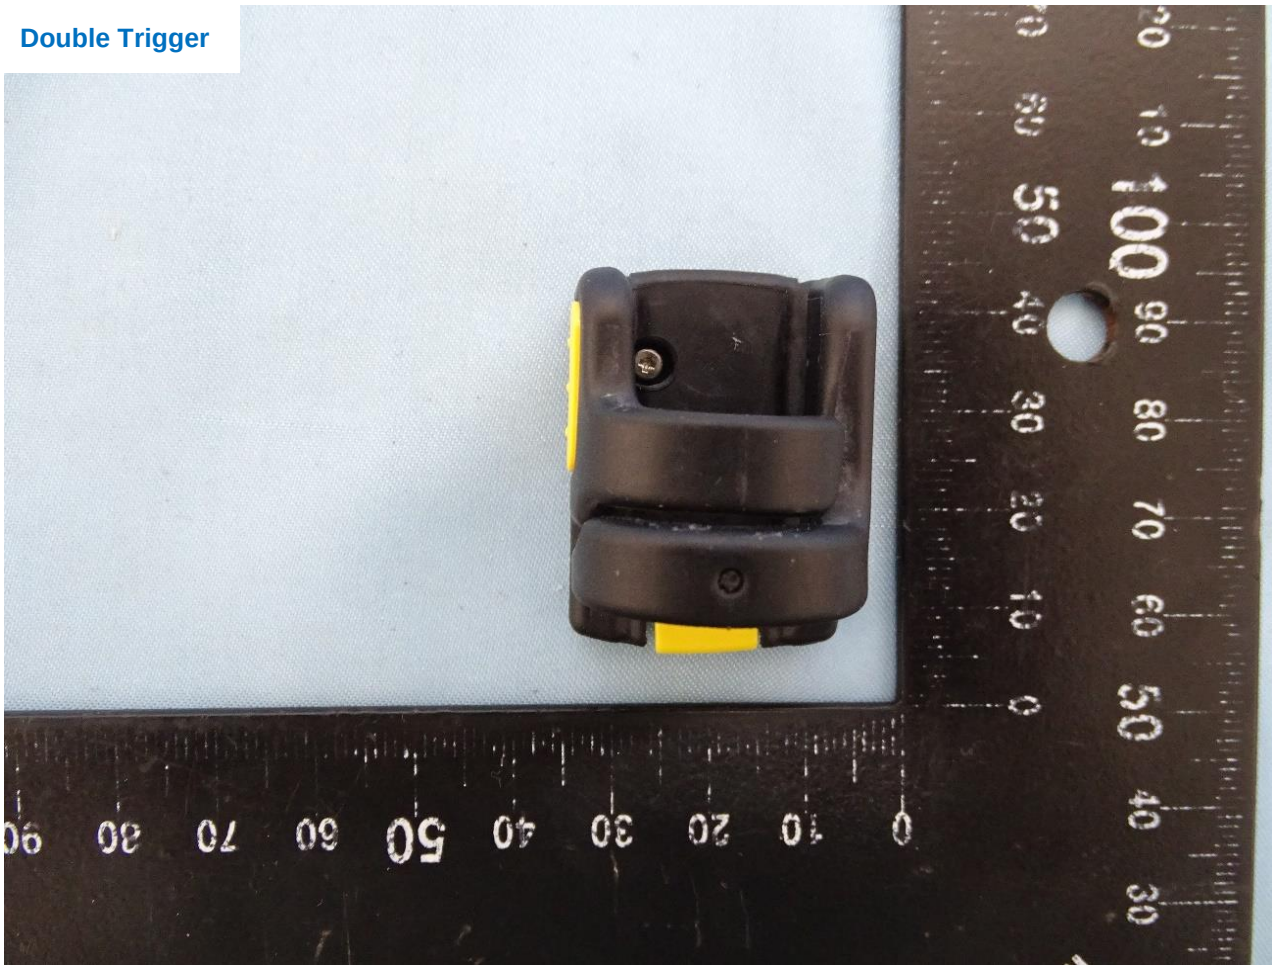



Lanyard

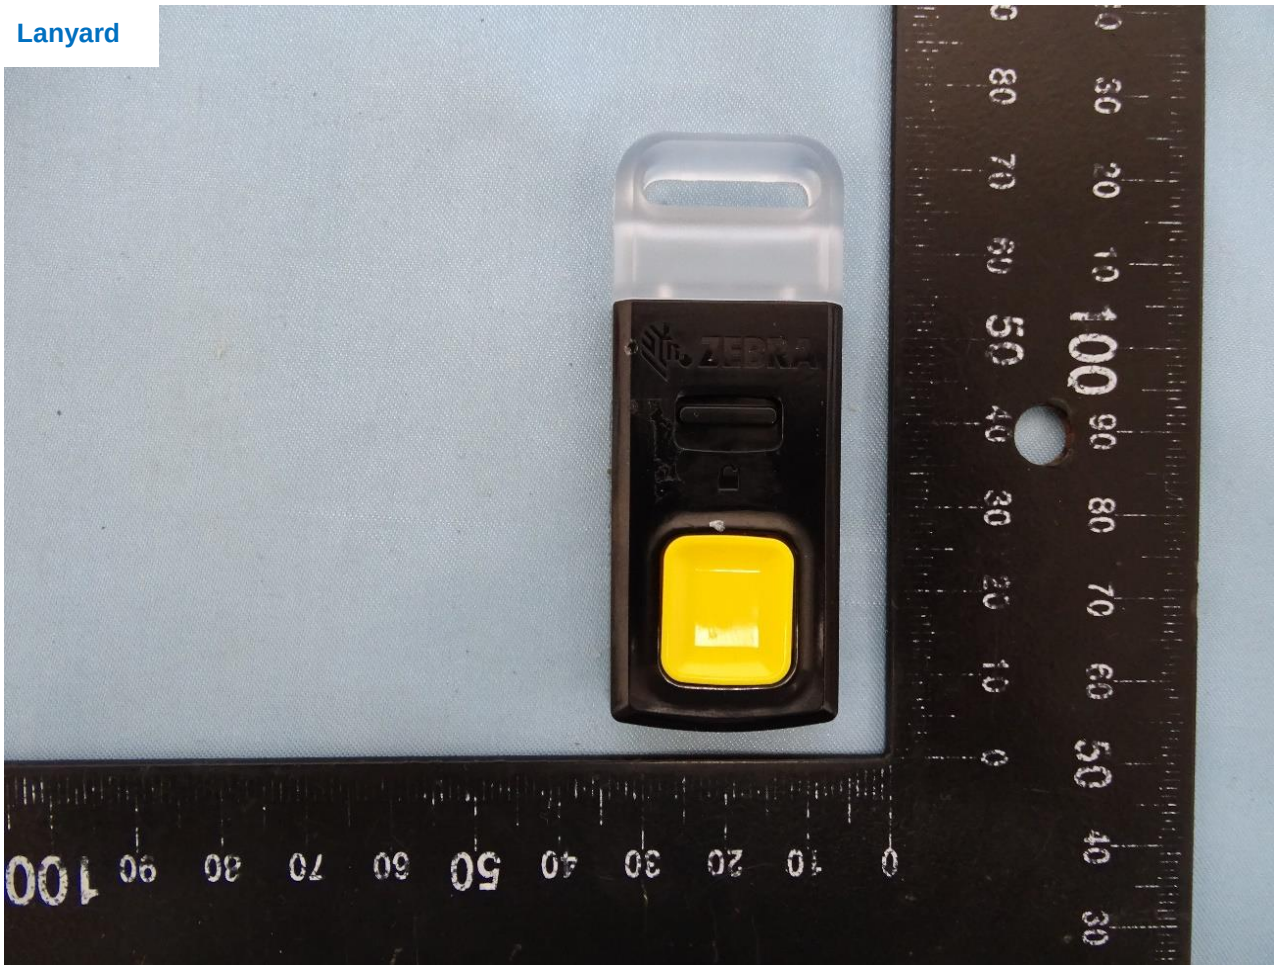

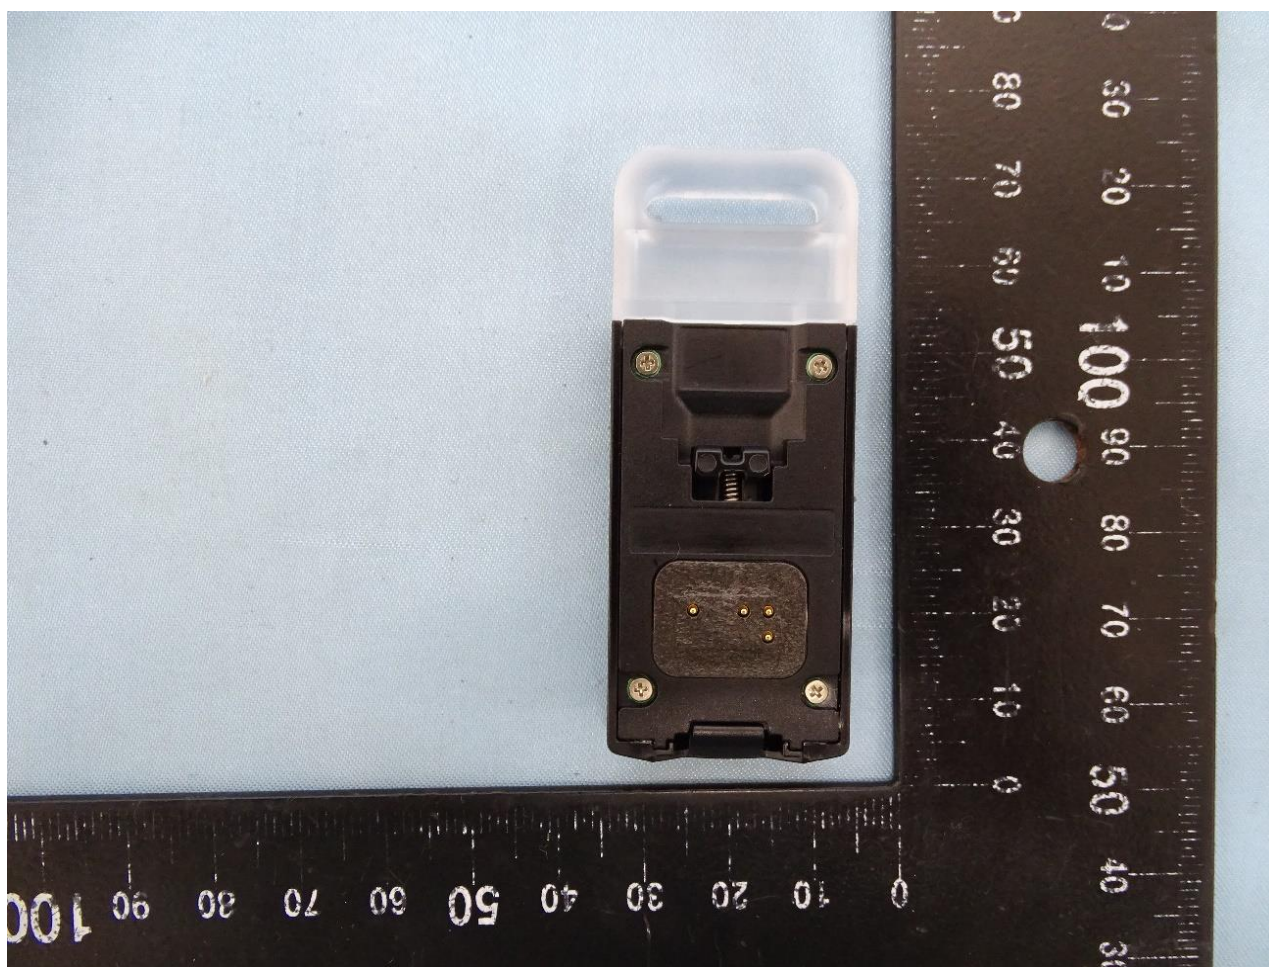


Double Side Trigger with Vibrator





Double Side Trigger (USBC with charge pad)



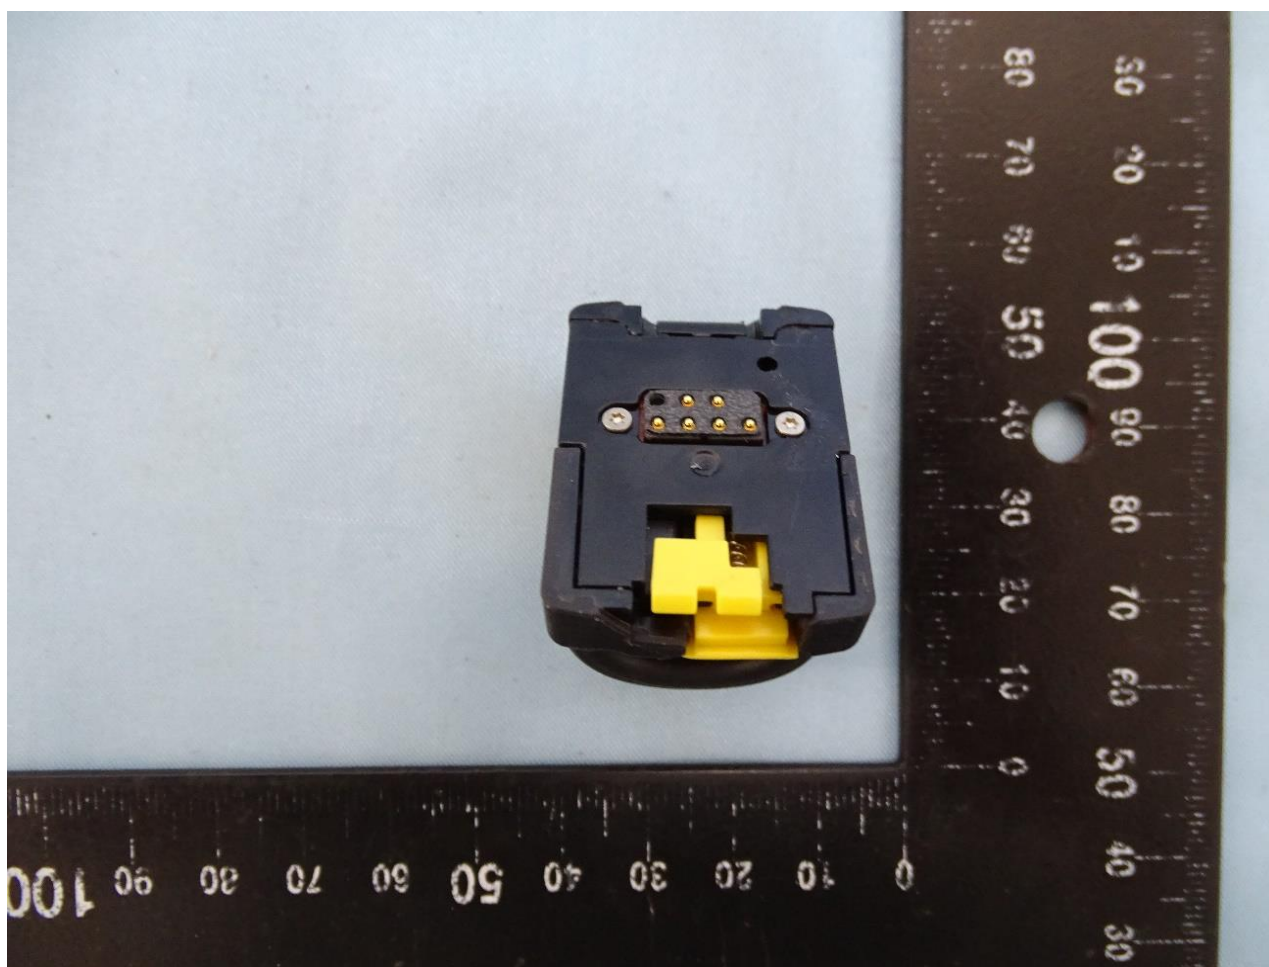

Double Side Trigger (USBC without charge pad)





Back of the hand mount

