

1. External Photograph of EUT

Brand Name: Zebra / Model Name: TC530E

Sample 1 and Sample 2















Sample 3













2. Photograph of Accessory

Brand Name: Zebra / Model Name: TC530E

Specification of Accessory		
Adapter	Brand Name	Zebra
	Part Number	PWR-WUA5V12W0US
Battery 1 (1x)	Brand Name	Zebra
	Part Number	BT-000442-0020
Battery 2 (1.5x)	Brand Name	Zebra
	Part Number	BT-000442-0820
Battery 3 (Wireless Battery)	Brand Name	Zebra
	Part Number	BT-000442-002B
Battery 4 (1x)	Brand Name	Zebra
	Part Number	BT-000442-1020
USB TYPE A to TYPE C cable	Brand Name	Zebra
	Part Number	CBL-TC5X-USBC2A-01
USB TYPE C to 3.5mm audio connector	Brand Name	Zebra
	Part Number	ADP-USBC-35MM1-01
3.5mm Earphone	Brand Name	Zebra
	Part Number	HDST-35MM-PTT1-01
Rugged Headset	Brand Name	Zebra
	Part Number	HS2100-OTH
USB TYPE C Earphone	Brand Name	Zebra
	Part Number	HDST-USBC-PTT1-01
Trigger Handle	Brand Name	Zebra
	Part Number	TRG-NGTC5-ELEC-01
Soft Holster	Brand Name	Zebra
	Part Number	SG-NGTC5TC7-HLSTR-01
TC53/TC58 RUGGED BOOT	Brand Name	Zebra
	Part Number	SG-NGTC5EXO1-01
3.5mm to 3.5mm audio connector	Brand Name	Zebra
	Part Number	CBL-HS2100-3MS1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.



Adapter



Battery 1 (1x)







Battery 2 (1.5x)







Battery 3 (Wireless Battery)







Battery 4 (1x)





