



OPERATION MANUAL

Design for: Multimedia Keyboard





WWW Home press this button to launch the default internet browser application.



Email press this button to launch the default E-mail application



Back press this button to browse back page layout.



Forward press this button to browse forward page layout.



Stop press this button to stop bring up viscera.



Refresh press this button to refresh page layout ;



Search press this button to bring up “ Search window” for web address, press this button again to close “Search window”.



Bkmk press this button to bring up “My Favorites window”, press this button again to close “My Favorites window”.





Media press this button to launch the system default media player application.(suggest :use ver8.0 or above)



Mute press this button once to mute the volume, press again to un-mute.

VOL-

press this button to reduce volume,

VOL+

press this button to increase volume.



Play/Pause press this button once to play CD/VCD, press again to pause playing.




Stop press this button to stop media playing.



Prev Track press this button to skip forward track.



Next Track press this button to skip next track.





My computer press this button to open “ my computer ” file.



Cal cul ator press this button to launch calculator application.



Power press this button to shut off power apace



Sl eep press this button to launch power management mode.



Wake Up press this button to wake up power.

Installation Instruction

- 1 . Keyboard with PS/2 connector : copy driver\ps2\xkb.exe to
windows program catalogue (such as : c:\windows);
Keyboard with USB connector : run driver\usb\USBdriver




.exe ;


Keyboard with USB connector and USBHUB : run driver\usb+hub\
u+h.exe ;

Keyboard with USB+PS/2 connector : run driver\usb+ps2\
u+p.exe or aolonic.exe ;

- 2 . Restart computer (After installation , there is a multimedia sign on the right corner of below);
- 3 . Press the multimedia sign, choose “ about、configure、remove、Esc、 ” or “ hide、 show ” menu , turn to the next window (double knock the sign to go into “ configure ” window);

****Remark:** You must make sure you have installed the DirectX8.1 or






above before you start to install multimedia keyboard
in windows2000.

Personal Configure

1、Media player selection

- a、After install the program, set “Windows Media Player” to be default ;
 - b、Others : Press “browse” to choose other media player
Winamp.exe、STHSVCD.exe、Mmxado.exe、STHSDVD.exe、
wmplayer.exe ;
 - c、Customer could choose CD player or other players , press
“Enter” to save the configure.
- 



2、 My computer personal configure

- a、 After install the program, set “ My computer ” to be default ;
- b、 Set up of the file opening : Press “ browse ” to choose *.exe file
- c、 Press “ Enter ” to save the configure.


3、 Calculator ditto

Appendix

Multimedia keyboard

Multimedia driver disc

Multimedia operation manual





FCC NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.