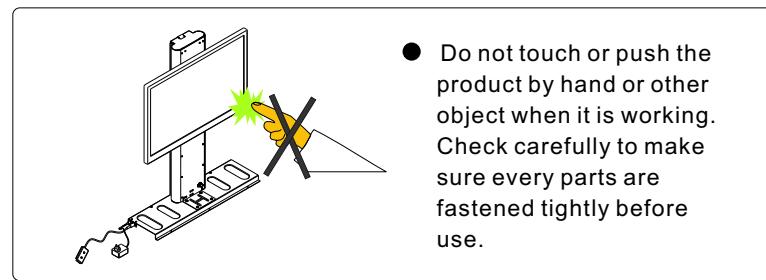
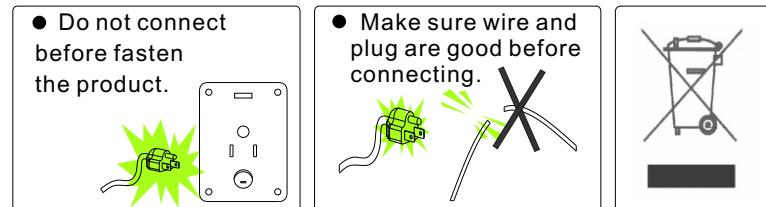


**Warning:**

This wall mount is intended for use only with the maximum weights indicated. Use with heavier than the maximum weights indicated may result in instability causing possible injury.

3-4.Caution**3-5.Maintenance**

Do not use corrosive agent or alcohol or chemical cloth to clean!

4.Reliability

Temperature and humidity condition: -20°C ~ +50°C , 80%HR

**Warning:**

1. Do not disassemble the product to repair by yourself .

Warranty for electricity is void after disassembled !

2. After you installed the apparatus, please check the expansion screws and all fastening devices every 3 months, and please do not use it and contact the local dealer if gets loose, rusty or lost.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and


(2) this device must accept any interference received, including interference that may cause undesired operation.

[Http://www.xyz888.com.cn](http://www.xyz888.com.cn)

Mail : mail@xyz888.com.cn

USER'S GUIDE**Model : ZX-C03A Elevating TV Stand****1.Specification****1-1.Dimensions:**

Length: 720mm ,
Width : 225mm ,
Height : 960mm

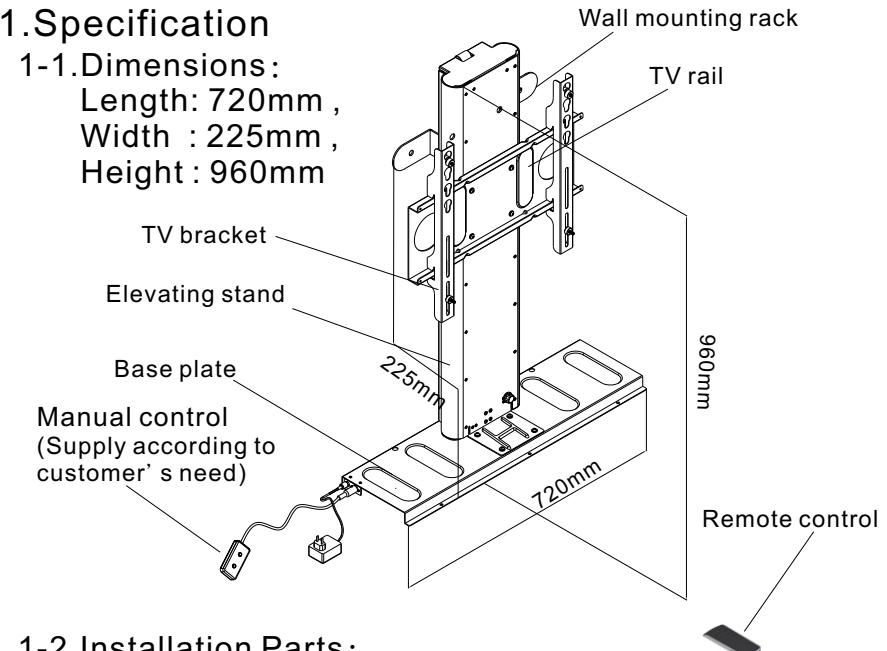
**1-2.Installation Parts:**

①	2pcs	②	2pcs	③	2pcs	④	2pcs
	Sink head screw M5*25/M6*30/M8*35 (mm)		Tab M5/M6/M8(mm)		Round head screw M5*23/M6*25/M8*30 (mm)		Washer Ø16*6.2*T1.5/ Ø16*8.4*T1.6(mm)
⑤	4pcs	⑥	4pcs	⑦	2pcs	⑧	20pcs
	Plastic wall plug Ø10*47mm		M6*50mm Self-tapping screw		Pad M5/M6/M8(mm)		M6*10mm Screw
⑨	2pcs	⑩	1pc				
	M8*70mm Expansion screw		Remote control				

Notice:

Check all the parts as shown on the manual included .If parts are missed or damaged,do not use it and please return to your local distributor.

1-3. Assembly Tool(Not included):

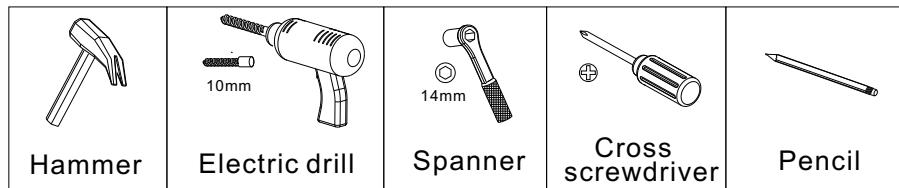

2.Electric Specification

2-1.Input Voltage/Current/Frequency:
100-240VAC/< 1.2A/50~60Hz

Output Current: DC24V ,3A

2-2.Motor

Item	Rated Voltage	Current (No Load)	Current (Rated Load)	Operating Temperature
Motor	DC24V	≤0.7A	≤1.8A	-20°C~50°C



Warning:

Correct installation is extremely essential, and falls outside the scope of responsibility of manufacturer . The user must pay attention to the weight of TV and This product, and only solid wall can support the weight . Please complied with the installation instruction of LCD/PDP to install them.

B. Remote control (See diagram 9):

I . Key Function

1.V.P.:one push to extend elevating stand to the top.
H.P.: one push to back elevating stand to the bottom.
2.Raise:hold on to raise elevating stand. Lower: hold on to lower elevating stand.


II . Operating Instruction

1.Aim the LED indicator (on remote control)at TV . The remote range is 3 - 10m.

2. Insert one 23A, 12V battery in the remote control. If the battery ran out , please open the battery cover and put in new battery.

3.When user press any function key of remote control, the TV bracket with TV will move to the corresponding place ,and will stop when you loosen the key.

Diagram 9

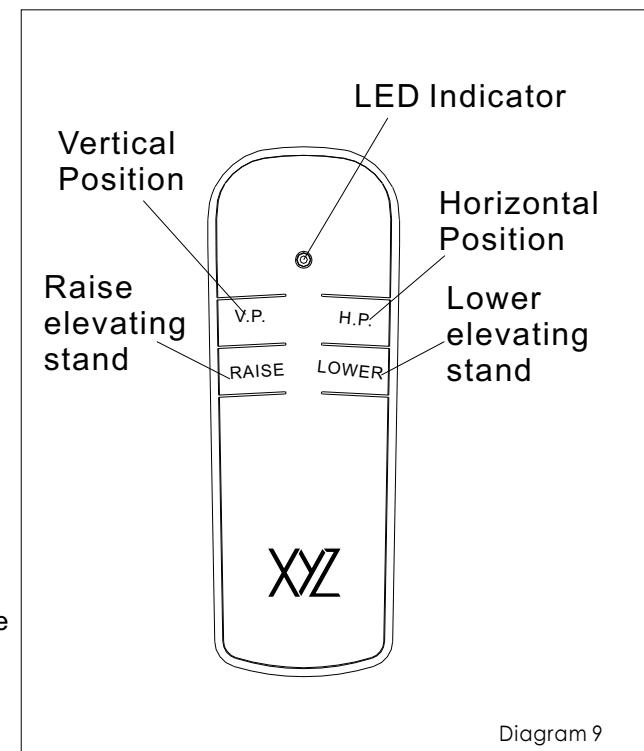

III. Notice

If any remote control of our product was lost or damaged ,you can buy a new remote control with the same frequency which produce by our company and do following operation:

1.Memory cleaning: press coding key about 10 seconds ,the memory will cleaned after the indicator closed.(The memory is the coding memory of the previous remote control).

2.Use new remote control: press any key of remote control and the coding key1-2seconds at the same time ,loosen remote control firstly, then loosen the coding key ,finally ,you can operate the product with new remote control .(Coding key ,Indicator,please see dingram 4).

3-3. Technical Parameters:

Item Model	TV Screen size(inch)	Product Dimension(mm)	Max Installation size(mm)	Min Installation size(mm)	Loading (kg)	Extending Length(mm)	Net weight(kg)
ZX-C03A	25~46	720*225*960	660*400	200*200	50	640	26.5±1

7. Hook TV on the TV rail, centerize TV, then screw up the screws on TV bracket to fasten up TV tightly. Use the wire saddle to fix the power cord of TV.(see diagram 7)

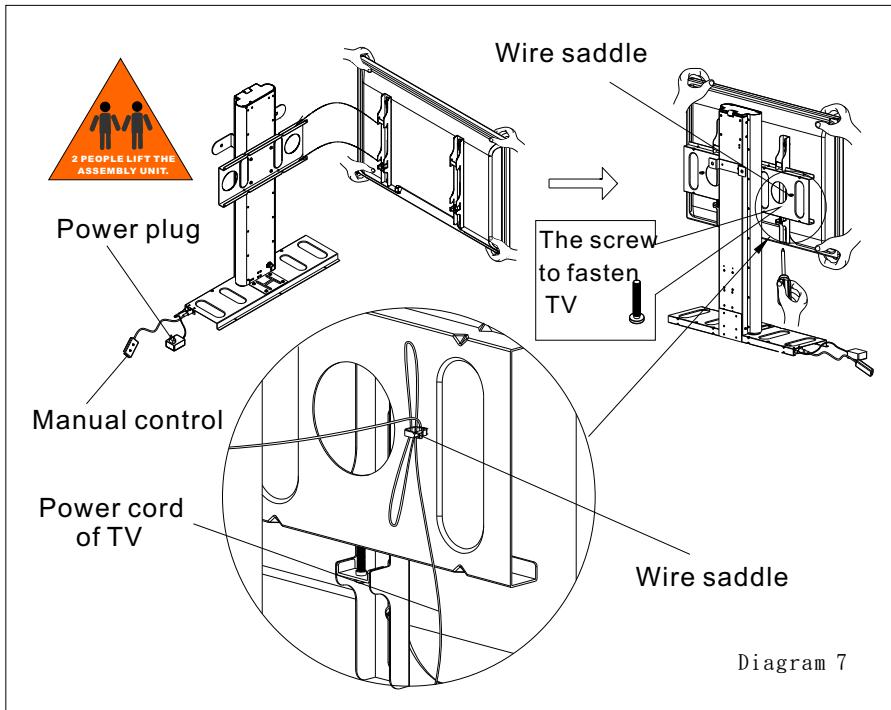


Diagram 7

3-2. User's Guide

A.Function:

This product has remote control and manual control,they can control elevating stand to move 640mm from up to down. (see diagram 8)

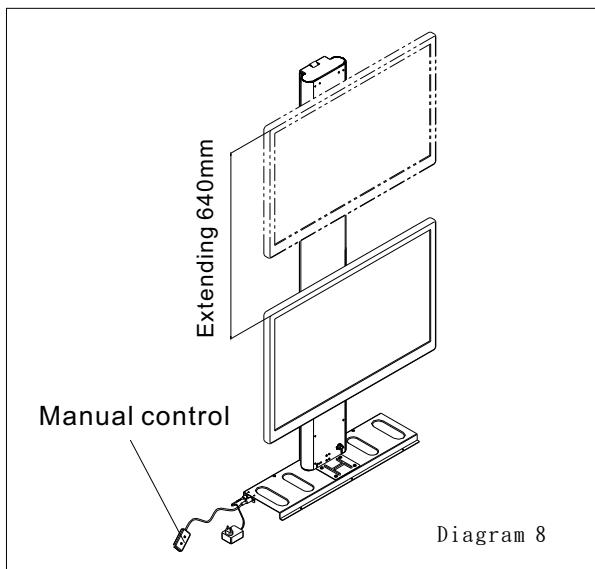


Diagram 8

3. Installation Instruction

3-1. Installation Method:

1. Install elevating stand on the base plate by fastening 8@M6X10mm screws,then fix the wall mounting rack and reinforce plate to elevating stand and base plate by 8@M6X10mm screws.(see diagram 1)

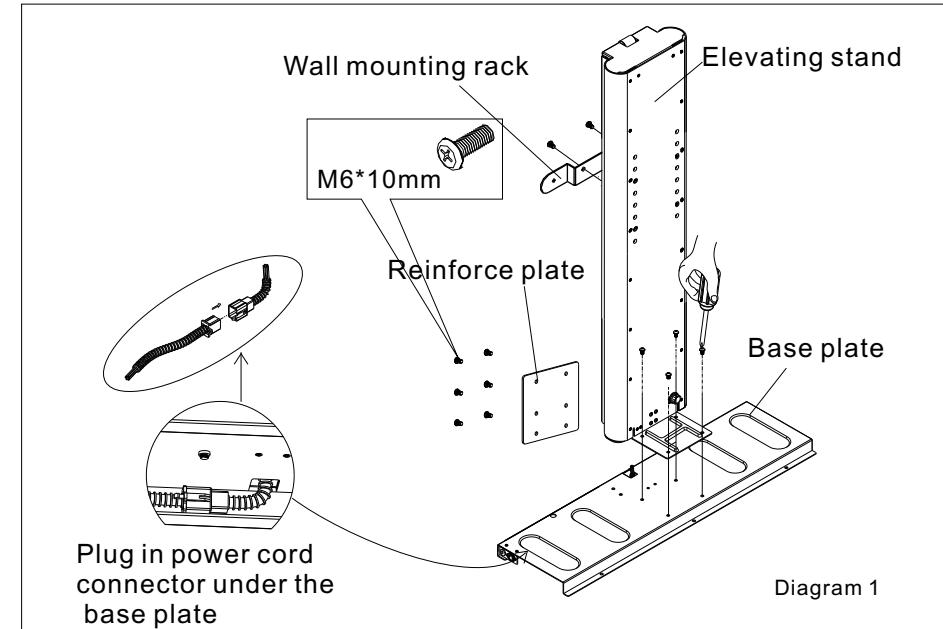


Diagram 1

2. Move the assembled parts to installation position and mark screw hole locations to be drilled,use electric drill to drill holes on the wall at marked locations to 75mm depth, $\varnothing 10\text{mm}$ and drill holes on the ground at marked locations to 60-70mm depth, $\varnothing 10\text{mm}$; then put 5 plastic wall plug into the holes(4- $\varnothing 10\text{mm}$) on the ground.(see diagram2)



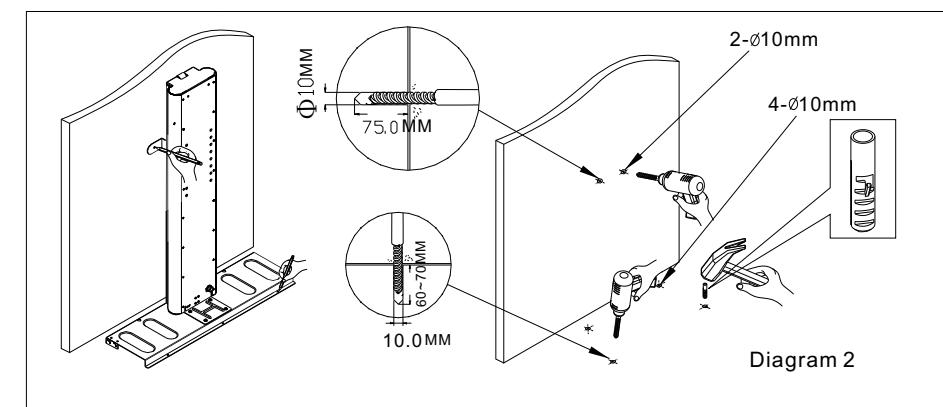


Diagram 2


3. Fasten base plate on the ground by ⑥M6X50mm self-tapping screws. (See diagram 3)

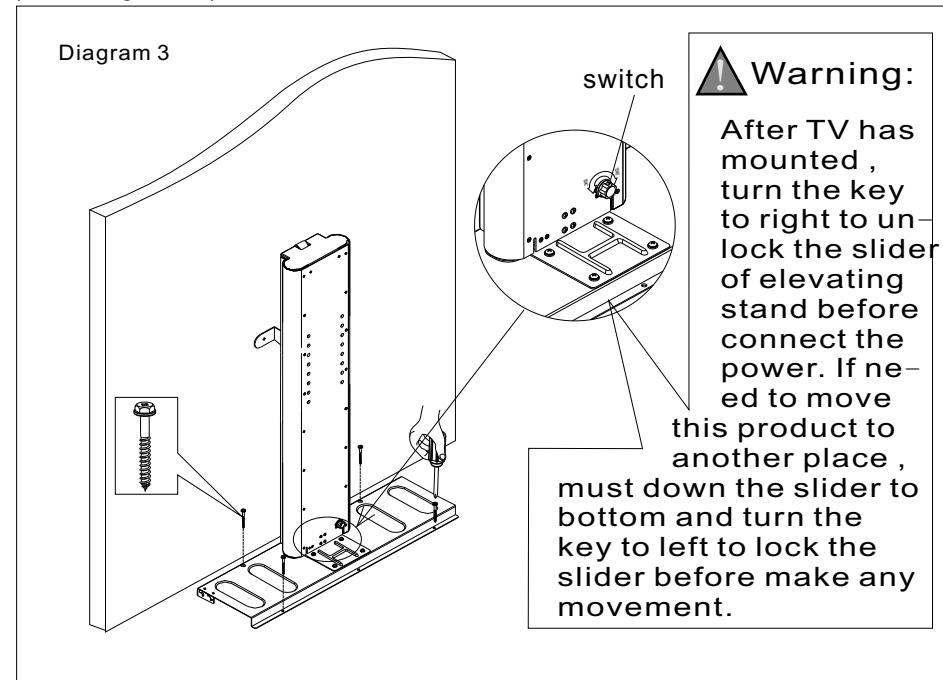


4. Connect the power supply and turn on the switch, use remote control or manual control to rise the elevating stand to the top position, then fix the wall mounting rack to the wall by ⑨expansion screws, and connect the base plate and elevating stand by ⑧M6X10mm screws. (see diagram 4)

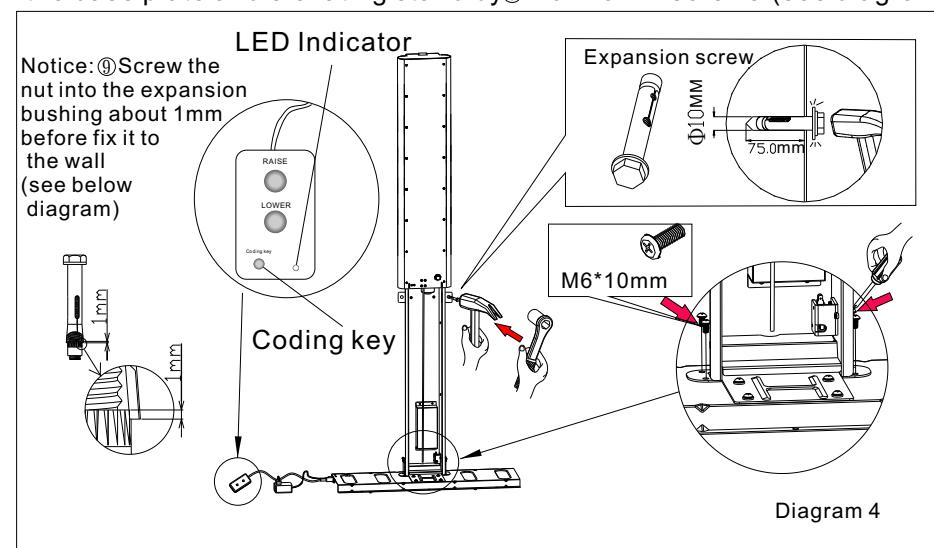

5. Adjust the elevating stand to the bottom position, turn off the switch, fix the TV rail to elevating stand by ⑧M6X10mm screws. (See diagram 5)

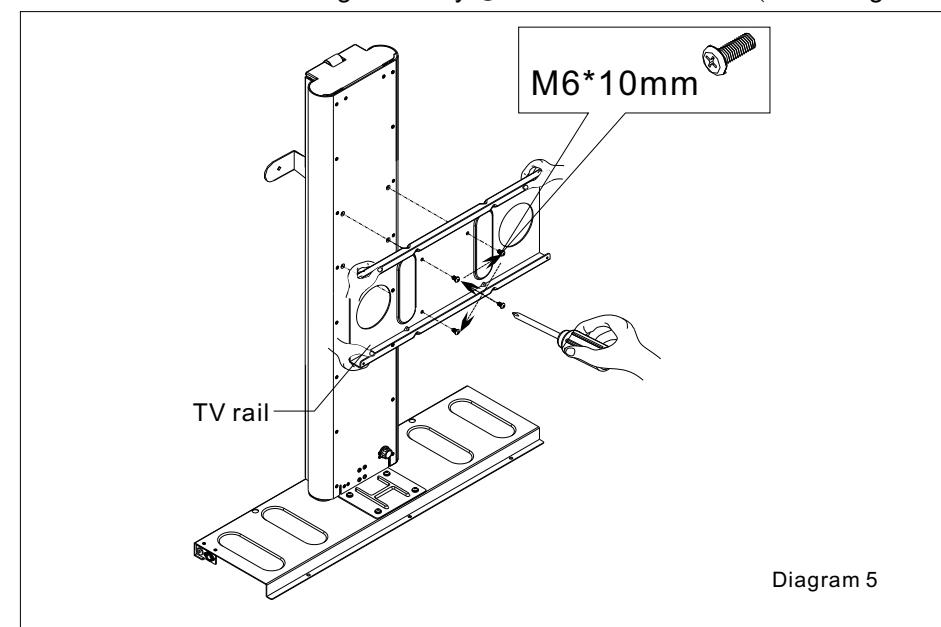

6. Screw up ② tabs on the upper holes of TV back cover by ① sink head screws, then, hook TV brackets on the tabs. Fasten lower end to TV back cover by screwing up ③round head screws, ④washers and ⑦pads. (See diagram 6)

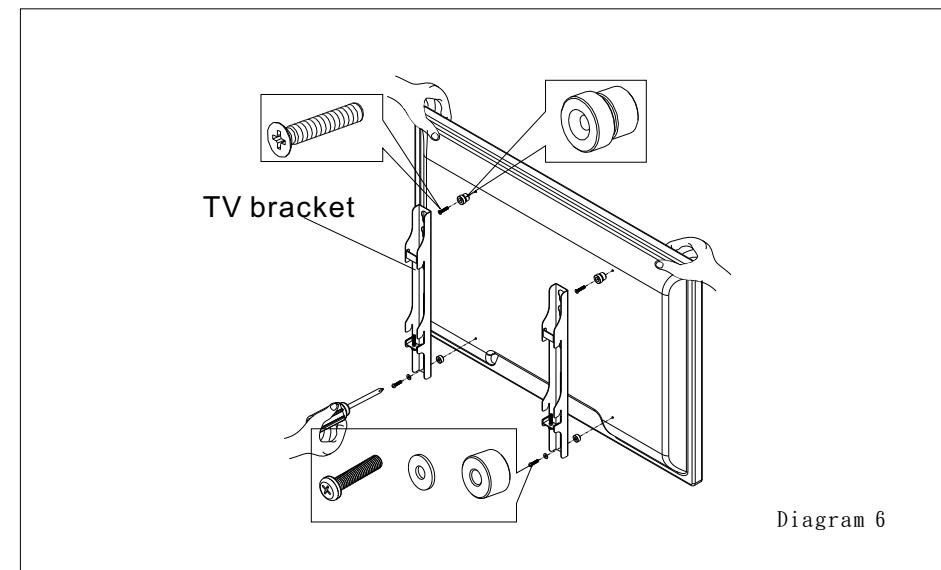

**NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV
INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS
EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY
TO OPERATE THE EQUIPMENT.**