### 5. Technical Parameters:

Item Model	TV Size (inch)	Product Dimension (mm)		Mix Installation size (mm)		L/R Angle (°)	Down Angle (°)	Up Angle (°)	Net Weight (kg)
YD-C09A	42	705*450*220	600*400	200*200	60	±15	15	10	±


Caution: This wall mount is intended for use only with the maximum weights indicated. Use with heavier than the maximum weights indicated may result in instability causing possible injury.

### 6. Notice:







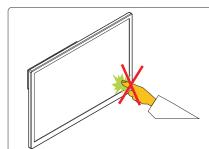

Do not touch or push the product by hand or other object when it is working. Check carefully to make sure every parts is fastened tightly before use.

#### 7. Maintenance

Often to check the product, ensure the safety. Do not use corrosive agent or alcohol or chemical cloth to clean.

# 8. Reliability

Temperature and humidity condition: -20°C~+50°C,80%HR



# **A** Warning:


- 1. Do not disassemble the product to repair by yourself.warranty for electricity is void after disassembled!
- 2. After you installed the apparatus, please check the expansion screws and all fastening devices every 3 months, and please do not useit and contact the local dealer if it gets loose, rusty or lost.

Http://www.xyz888.com.cn

Mail: mail@xyz888.com.cn

# **USER'S GUIDE**

Model: YD-C09A TV Wall mount

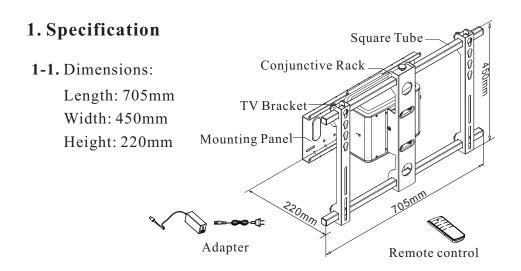

#### 1-2. Installation Parts:

① 2pcs	2 2pcs	3 2pcs	4 2pcs	⑤ 2pcs	6 4pcs
<b>3</b>	<b>1</b>	8	0	<b>9</b>	Q AMAIN
M5*28mm Cross		M5*23mm Cross	Ŭ		Ø10*47mm
Sink Head Screw	Tab	Round Head Screw	Washe	Pad	Plastic Wall Plug
7 4pcs	8 8pcs	9 4pcs	① 1pcs	① lpcs	
0					
M6*50mm Hexagon	M6*18 Plastic-head Screw	M6*10mm Cross Flat Head Screw	<b>Adapte</b>	Remote control	

# 1-3. Assembly Tools (NOT INCLUDED)



Check all the parts as shown on the manual included . If parts are missed or damaged, do not use it and please return to your local distributor.



## 2. Electric Specifications

**2-1.**Input Voltage/Current/Frequency, Output Current A.Input Voltage/Current/Frequency: 100-240VAC/<0.65A/50~60Hz B.Output Current:DC12V,2A

#### 2-2. Motor


Item	Rated Voltage	Current(Not Load)	Current (Rated Load)	Operating Temperature
Motor	DC12V	≤0.3A	≤0.6A	-20°C∼50°C

# Warning:

Correct installation is extremely essential, and falls outside the scope of responsibility of manufacturer. The user must pay attention to the weight of TV and TV wall mount, and only solid wall can support the weight. Please comply with the installation instruction of LCD/PDP to install them.

#### 3. Installation Instruction

**3-1.** Be sure the wall to be mounted is solid enough and does not have rigid material inside. Then, put the mounting panel on the wall, Horizontalize it and mark hole locations. Drill holes on the wall at marked locations to  $60\sim70$ mm depth and  $\emptyset10$ mm, Put the © plastic wall plug (4pcs) to the holes, Then use  $\bigcirc7$ Hexagon flange wood screw tighten them with anner. (Diagram 1)

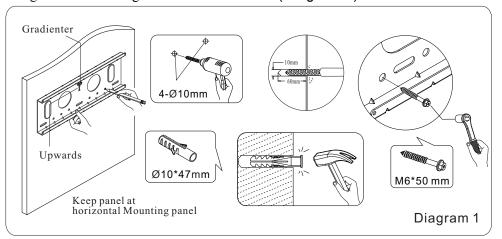

### **4-2.2** Operating Instruction

**A.** Insert one 23 Å 12 V battery in the Remote control, the effective distance is within 10 meters.

**B.** When user presses any function key (up, down, left, and right) of Remote control, the TV bracket with TV will move to the corresponding direction, and will stop when you loosen the key.

#### **4-2.3** Notice

If any remote control of our product was lost or damaged, you can buy a new remote control with the same frequencies which produce by our company and do following operation:

- **A.** Memory cleaning: Press coding key about 10 seconds, the memory will clean after the LED indicator closed. (The memory is the coding memory of the previous remote control).
- **B.** Use new remote control: Press any key of remote control and the coding key1-2seconds at the same time, Loosen remote control firstly, Then loosen the coding key, Finally, you can operate the product with new remote control. (Coding key, Indicator, Please see diagram2).


### Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined b turning the interference by one or more of the following measures:

- --Reorient or relocate the receiving antenna.
- --increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

**3-4.**Hang TV wall mount (with TV) to the hooking gap of the mounting panel ,Then tighten the lower end of TV wall mount by (2pcs) plastic head screws. (Diagram 4)

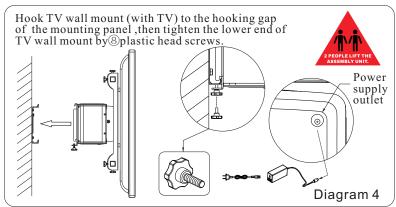



### 4. User 's Guide.

#### 4-1. Function

This product can be controlled by remote sensor to adjust the angle of TV to tilt up 10° and tilt down 15°, turn left or right 15°.



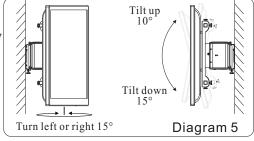

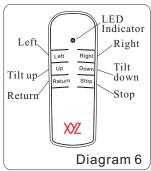

# 4-2. Remote control(Diagram 6)

### 4-2.1. Key Function

**Left**: Press the key the bracket will turn left.

**Right**: Press the key the bracket will turn right.


**Up**: Press the key the bracket will tilt up.

**Down**: Press the key the bracket will tilt down.

**Return**: Press the key the mount will come back to the original positon.

**Stop**: Press the key the mount will stop in the course of return.

**3-2.** Fix the Main bracket on Locking plate by 4pcs@Flat Head Screw.Insert square tube (2pcs)into the holes of the conjunctive rack.Screw up the ® plastic head screws behind the conjunctive rack to fasten square tube. Finally, hang TV brackets (2pcs) on the square tubes (make surethe horizontal space between backets equal to the space of TV back cover) and tighten them by ® plastic head screws. (Diagram 2)

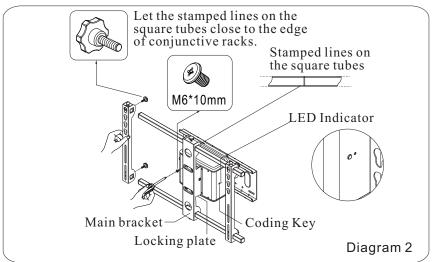

**3-3.** Screw up tabs ② (2pcs) to the upper holes of TV back cover by ① sink head screws (2pcs), The hang TV to the corresponding holes on TV bracket by the tabs. Screw up TV brackets to the lower end of TV back cover by ③ round head screw with ④ washer and ⑤ pad. (Diagram 3)

