

# **AIV SRS 4000 User's Manual**

## **Contents:**

- 1、 Paring SRS4000**
- 2、 Using SRS4000**
- 3、 Adjust Sound volume**
- 4、 LED Status**

### **Paring AIV SRS4000 with your phone (First time to use your device)**

1. Make sure your Bluetooth phone close to the SRS4000 Bluetooth device
2. Start your engine (SRS4000 will automatically ON);

#### **Adding a Phone to Paring List**

3. Push and hold the operation button > 5s to turn off SRS4000 (The Blue LED will turn off)
4. Release the operation button;
5. Push and hold the operation button again > 5s to set SRS4000 the device in paring status (The LED quickly flash).
6. Using your cellular to seeking hand free ----AIV-Cartkit will show on your list , key in the paring code " 1 2 3 4 "

### **Start Using Your Phone's Bluetooth**

1. The SRS 4000 will automatically connect to your phone when the engine is started
2. During SRS4000 turn off status:
  - 2.1. Push and hold 2 seconds ——turn on SRS4000 BT device ( Can hear a beep sound) ;
  - 2.2. Push and hold 5 seconds——Enter paring status ;
3. During SRS4000 turn ON status: :

- 3.1. After paring with cellular phone :
  - 3.1.1. Quick push Button one time——Start voice dial (If your cellular phone is support voice dialing) ;
  - 3.1.2. Double click the button——Redial the last number.
- 3.2. Quick push Button one time during incoming call——accept the incoming call and start talking ;
- 3.3. Quick push Button two times during incoming call——Refuse picking up the incoming call
- 3.4. Quick push Button one time during talking ——Hang up phone

3.5. Push and hold 5 seconds——Turn off the SRS4000 ;

#### **Set up sound volume:**

1. Adjust the sound volume during the talking;
2. Turn off the SRS4000 when finishes talking by push the button for 2 seconds, the SRS4000 will store the volume default setting in SRS4000.

#### **LED Status :**

1. LED quick flash 2 times ( Interval 500Ms ) : SRS4000 is Turning ON ;
2. LED flash every 4 seconds: No device is paired to SRS4000;
3. LED Quick flash ( Interval 500Ms ) : SRS4000 in paring status ;
4. LED quick flash 2 times every 4 seconds: SRS4000 is ready for using ;

FCC NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.