


CHARGING THE RECHARGEABLE BATTERY


DYNAMO POWER

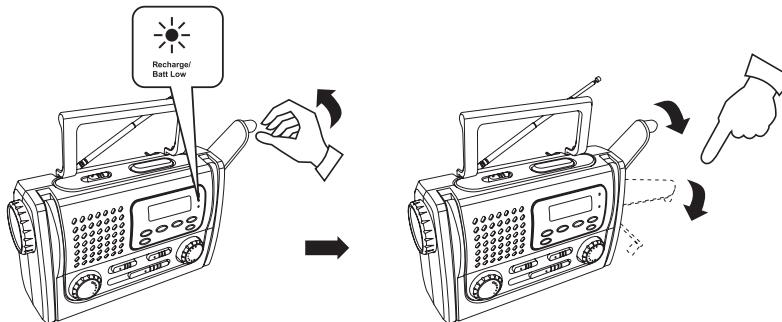

Note: Turn the Dynamo hand-crank clockwise at a moderate speed for about 1 minute. This will provide a 1/4 charge.


You can also use the built-in POWER STATION to charge an external low-voltage device such as a phone or PDA (subject to device compatibility). Connect the device (cords not included) to the dynamo out jack and crank the dynamo.

AC ADAPTOR (NOT INCLUDED)

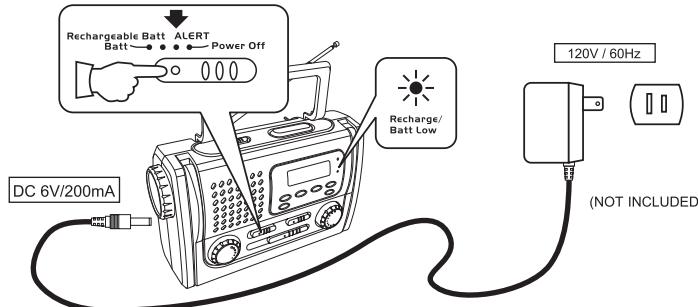


Note: Keep the AC Adaptor (Not Included) connected for about 12 hours to fully charge.


AUXILIARY BATTERIES (NOT INCLUDED)

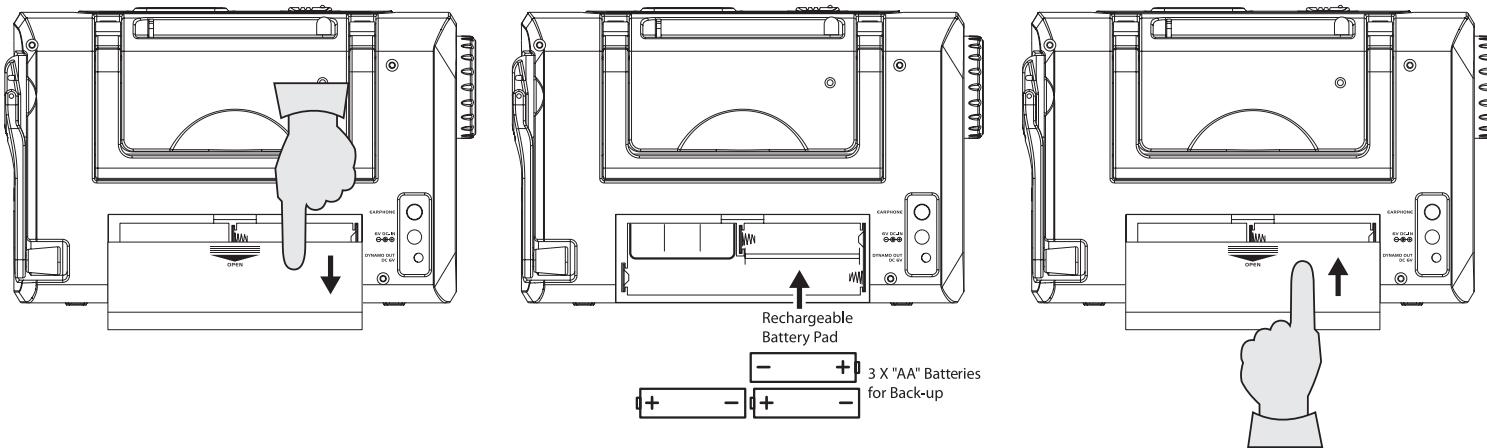

Replace the 3 "AA" batteries with new ones when the low battery indicator illuminates, the sound become unstable, or the clock display no longer functions.

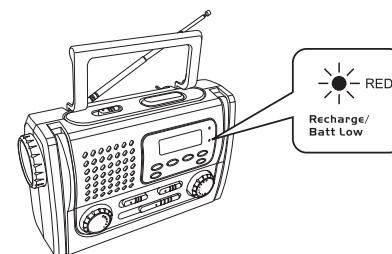


SETTING THE TIME

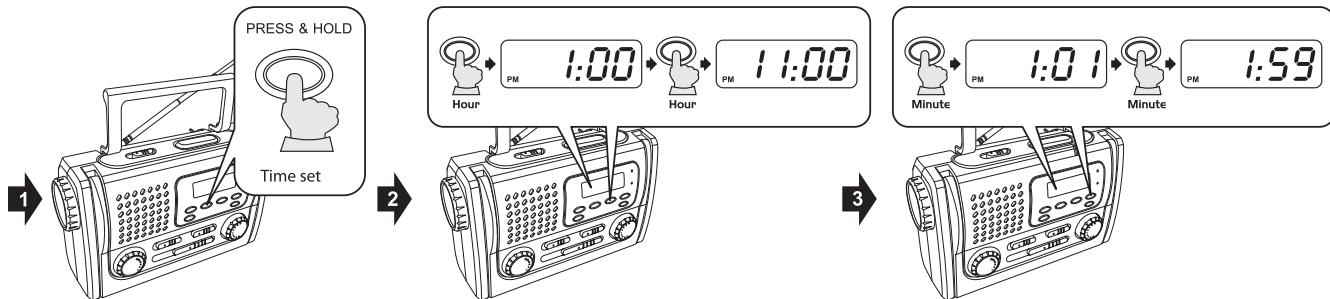

Note: In the Radio on mode, press the radio/clock button to alternate between radio and clock displays.




LISTENING TO THE RADIO

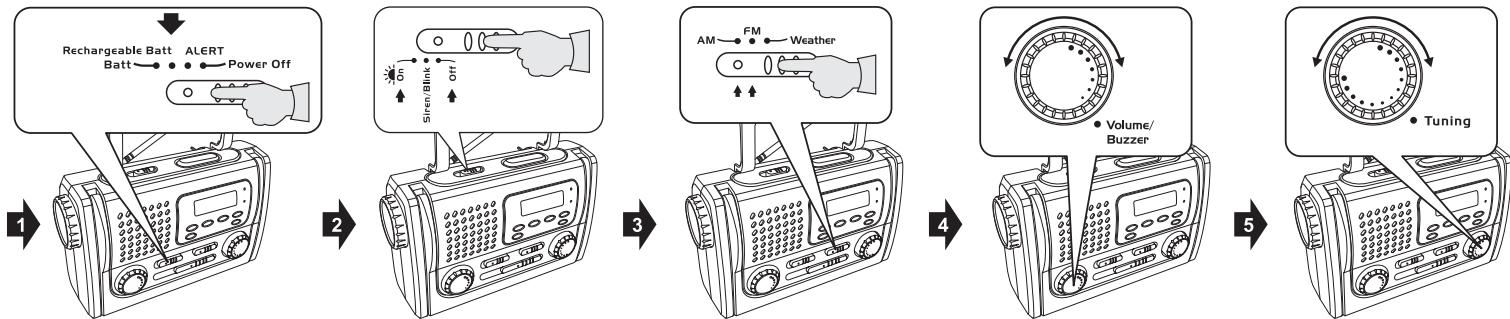


RECHARGEABLE BATT.=BUILT-IN RECHARGEABLE BATTERY
BATT.=3 x "AA" ALKALINE BATTERIES (NOT INCLUDED)

TO IMPROVE RECEPTION


FM:

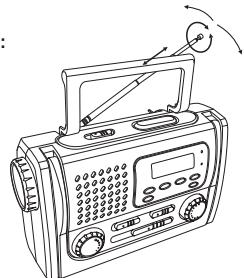

AM:

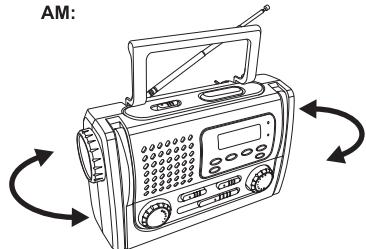

LISTENING WITH HEADPHONES (NOT INCLUDED)

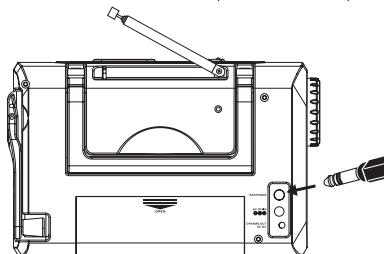

Note: Headphones can also be used with weatherband.