

NOTES: 1. Stations marked (P) operate less than 24 hours per day, however, hours are extended when possible during severe weather. 2. Occasionally the frequency of an existing or planned station must be changed because of unexpected radio frequency interference with adjacent NOAA Weather Radio stations and/or with other government or commercial operations within the area.

CARE AND MAINTENANCE

GENERAL

- Use a soft, clean cloth moistened with plain, luke-warm water to clean the exterior of the unit.
- Never use solvents such as benzene or other strong chemical cleaners since these could damage the unit's finish.
- It is important that no liquid reaches the inside of the unit.

POWER DURATION

GENERAL

RADIO	FLASHLIGHT	BLINK/SIREN
10 days with new alkaline batteries/ 8 hours with fully charge built-in rechargeable battery.	1 days with new alkaline batteries/5 hours with fully charged built-in rechargeable battery.	2 days with new alkaline batteries/2 hours with fully charged built-in rechargeable battery.

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE	SOLUTION
GENERAL		
No sound is heard.	Power is not on.	Select appropriate power source.
	VOLUME Control is set to minimum.	Adjust the VOLUME Control.
	Station has not been tuned properly.	Tune station properly.
	FM reception is weak.	Extend the FM antenna.
	AM reception is weak.	Adjust the position of the unit.
Power is not on.	Rechargeable Battery Pack is not plugin properly.	Re-plug the Rechargeable Battery Pack.
Rechargeable Battery Pack in not function.	Rechargeable Battery is in sleeping-mode. (Not use over 3 months)	Rechargeable Battery by AC/DC adapter for over 12 hours. (AC/DC adapter not included)