



© 2024 Yamaha Corporation  
Published 02/2024  
2024 年 2 月 发行 AMOD-A0

## Écouteurs sans fil

## 真无线耳机

## 真無線耳機

**Model No.**  
**Serial No.**

**Label information**  
 The model name (part number), power requirements and so on for this product are found printed at the location shown in the illustration. You should note this serial number in the space provided below and retain this manual as a permanent record of your purchase and this identification in the event of theft.

**Étiquette d'informations**  
 Le numéro de modèle (numéro de référence), les spécifications d'alimentation, etc. de ce produit figurent à l'emplacement illustré ci-dessous. Notez le numéro de série de votre achat afin de faciliter l'identification du produit en cas de vol.

**Aufkleberangaben**  
 Die Modellnummer (Teilenummer) sowie Leistungsanforderungen usw. dieses Geräts sind an der abgebildeten Stelle aufgedruckt.

**Information om etiketten**  
 Modellnamn (delnummer), strömkrävt och så vidare för den här produkten finns tryckt på den plats som visas på bilden.

**Informazioni sull'etichetta**  
 Il numero di modello (numero del componente), il numero di serie, i requisiti di alimentazione ecc. si trovano sul retro e/o sul fondo della cassa di ricarica.

**Información de la etiqueta**  
 El número de modelo (número de referencia), requisitos de alimentación, etc., correspondientes a este producto se encuentran impresos en la ubicación que se muestra en la ilustración.

**Labelinformation**  
 Onder andere de naam van het model (onderdeelnummer) en vermogensgegevens voor dit product zijn op het model (onderdeelnummer) in de afbeelding gedrukt geplaatst.

**Informação do modelo**  
 Os dados do modelo (número da peça), as requisitos de energia etc. para este produto encontram-se impressos no local mostrado na ilustração.

**标签信息**  
 此产品的型号(部件号)和电源要求等信息印于图中所示位置。

**標籤資訊**  
 此產品的型號(零件編號)、功率需求等資訊印於圖中所示位置。

**정보**  
 본 제품에 대한 모델명(부품번호), 전원 요구 사항 등은 그림에 표시된 위치에 인쇄되어 있습니다.

## EN

Please read these precautions carefully before using this product.

### Points that must be observed

Please take care to carefully read and observe the following precautions to avoid harm to yourself or to others, as well as damage to your personal property.

After reading, please keep this document readily available for anyone who uses this product.

For inspection or repair, please contact one of the following customer centers.

- The store where you purchased the product
- Yamaha dealer

This product is intended for use as a general household device. Do not use it in any field or activity requiring a high degree of reliability in regard to human lives or valuable assets.

Please note that Yamaha accepts no liability for any losses resulting from improper use or unauthorized modification of this product.



**These precautions alert you to the possibility of death or serious injury to yourself or others.**

- Do not use this product while driving or cycling. Also, do not use this product when you need to hear what is going on around you, such as at a railroad crossing or construction site. Reduced ability to hear surrounding sound increases the risk of an accident.

**If you notice any abnormality**

- If any of the following abnormalities occur, stop using this product immediately.
- Unusual smells, sounds or smoke coming from the product
- An unusual amount of heat from the product
- Cracks or damage to the product

Continuing to use the product as-is may result in burns, injury, fire ignition, explosion, fluid leakage, electrical shock or malfunction. Have the product inspected or repaired immediately.

## Charging

- To charge the charging cable, connect it to the USB port of a commercially available USB power adapter (5 VDC, min. 0.5 A output). Incorrect connection may cause a fire, explosion, fire, leakage, electric shock or malfunctions. For details on charging, refer to the User Guide.
- Charge this product within the specified charging temperature range. Charging at a temperature outside the specified range may cause a fire, explosion, fire, leakage, electric shock, or malfunction. Charging temperature is: 5 ~ 40 °C
- Use the included charging cable to charge the earbuds. Using a charger other than the one supplied with this product may cause a fire, explosion, fire, leakage, electric shock or malfunction.
- Use only the supplied USB power cable to charge this product. Do not use the supplied USB power cable for other devices. Failure to observe this may cause a fire, burn, or malfunction.
- Do not cover the product with blankets, clothing or similar materials while being used or charged. This may cause overheating or ignite a fire.
- Never charge this product when it is wet. This may cause a fire, explosion, fire, leakage, electric shock or malfunction.

- Do not dispose of batteries in a fire or hot oven, or mechanically crush or cut the battery. Doing so may cause an explosion.
- Do not leave the batteries in a place with extremely high ambient temperature. This may result in an explosion, or cause the flammable liquid or gas to leak.
- Do not subject the batteries to extremely low air pressure. This may result in an explosion or the leakage of flammable liquid or gas.
- Do not drop this product or apply any strong impact to the product. Failure to observe this may cause a fire, explosion, fluid leakage, electric shock or malfunction.

- Do not disassemble or modify this product. Failure to observe this may cause a fire, explosion, fluid leakage, electric shock or malfunction.

The charging case and anclused USB power cable are not waterproof. Do not use these products in damp or wet conditions, such as in a bathroom or rainy outdoor location. Also, do not get the products wet with sweat, rainwater or seawater. Liquids such as water or foreign matter that get into these products may cause a fire, explosion, water leakage, electric shock or malfunction. When charging, make sure that the earbuds are not wet. If they are wet, wipe them off with a soft, dry cloth.

Do not handle the charging case with wet hands. Failure to observe this may cause fire, explosion, fluid leakage, electric shock or malfunction.

- Do not use open flame near this product. Failure to observe this may cause a fire, explosion, fluid leakage, electric shock or malfunction.

Do not use this product in an area where the use of radio waves is restricted, such as near medical devices. Otherwise, radio waves emitted from this product may affect the operation of medical electric equipment. When using this product in an airplane, follow the instructions of the crew.

Do not use this product within 15 cm (6 in) of a person with a heart pacemaker implant or a defibrillator implant. Otherwise, radio waves emitted from this product may affect the operation of the pacemaker implant or the defibrillator implant.



These precautions alert you to the possibility of physical injury to yourself or others.



- Keep earbuds out of the reach of infants. Your children may accidentally swallow them.
- Attach the eartips to the earbuds securely. Otherwise, eartips may detach and remain in your ears, resulting in injury.
- If the earbuds irritate your skin, stop using them. Otherwise, inflammation or rash may be caused.
- Do not wear earbuds without eartips. Do not use broken eartips. Otherwise, injury may be caused.

- Indicates points that you must observe in order to prevent product failure, damage or malfunction.
- Do not store this product in the following places.
  - Direct sunlight
  - Extremely high or low temperatures
  - Excessive dust
- Otherwise, malfunction or damage to the product may be caused.
- Use a soft, dry cloth to clean this product. Do not use benzene, thinner, detergents, or other cleaning agents. These may cause discoloration or damage to the surface of chemical wiping cloths or cleaning fluids that contain alcohol when wiping the surface of this product, as this may cause discoloration or deformation.
- Do not place or hold the earbuds in the vicinity of a cord, magnetic card, or other object that may be affected by the magnetic field of the product. Otherwise, the data on the affected device may be corrupted or destroyed.
- Please observe the following:
  - Do not apply unreasonable force to the charging connector.
  - Do not dry this product off with hot or warm air from a hair dryer.
  - Do not tug on the USB power cable while it is connected.
- Failure to observe these points may damage the product.
- Do not do anything that could damage the supplied USB power cable.
  - Do not place it near a heater.
  - Do not bend it excessively or alter it.
  - Do not scratch it.
  - Do not place it under a heavy object.
- Using the power cord with the core of the cord exposed could cause electric shocks.

**The waterproofness of the earbud body is compliant with IPX5 (Earbud nozzle: excluding the sound conduit).**

IPX5 indicates that the product will continue functioning even if water is directly projected against it from any direction. While this standard guarantees this performance with fresh water or tap water at room temperature, it does not guarantee equivalent performance with warm water or seawater. In addition, malfunctions caused by water ingress due to incorrect handling are not covered by the warranty, even during the warranty period. The second digit of IEC refers to "Liquid ingress protection" according to JIS C 0920 (harmonized standard of IEC 60529). "Degrees of protection provided by enclosures (IP Code)".

- For information on replaceable parts, such as earbuds, consult your Yamaha dealer.
- Your ears may tingle in geographical locations where the air is very dry. This is not a malfunction of the earbuds, but is caused by static electricity on your body or a connected device.

- This device contains a lithium-ion battery.
- You should recharge the batteries at least once every six months, to ensure that they stay functional. If they battery isn't used for extended periods of time, they may fall out of the battery.
- The battery cannot be recharged at a temperature outside of that which is specified in the manual.
- Rechargeable batteries have limited lifetimes, and their capacity degrades depending on the method of storage, the environment, frequency of use and the passage of time.
- Lithium-ion batteries can be recycled. After usage, you may recycle the battery, but never attempt to remove it by yourself. Have the device inspected by qualified Yamaha service personnel. There are many recycling programs available in your area, dispose properly according to relevant environmental laws and disposal rules in your area.
- Do not use the e-Readers at high volume in a public place. Sound leakage from the e-Readers may be heard by people around you.
- Maximum operating temperature: 40°C
- Do not use the e-Readers in wet, humid, or corrosive environments.
- For more information regarding this device, see the "User Guide".
- If you plan to transfer ownership of this product, include this document and the supplied e-Reader in the transfer.
- Follow the rules of your local authority to dispose of this product and its accessories.
- The illustrations in this manual are for instructional purposes only.
- The company names and product names in this document are the trademarks or registered trademarks or trademarks of their respective companies.

**• FCC Part 15.19**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**• FCC Part 15.21**  
Any changes or modifications (including the equipment off) to this device that are not expressly authorized by the manufacturer may void the user's authority to operate the equipment.

**• FCC RF Radiation Exposure Statement:**  
This equipment complies with FCC RF Radiation exposure limits set forth for an uncontrolled environment.  
This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

**• Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an authorized radio/TV technician for help.

Modifications not expressly approved by the manufacturer could void your authority to operate the equipment under FCC rules.