

For Android™ 13

# Enterprise Mobility PM452 User Manual

# Instruction

This manual provides information about basic features and using the PM452. Please read this manual carefully before using your device and peripherals to ensure safe and proper use.



**Note:** Screenshots in this manual may differ from actual screens.

## **Revision History**

Revision	Date	Description
v1.0	27 Jun 2024	Initial release
v1.1	02 Jul 2024	Removed unsupported feature icon
v1.2	15 Jul 2024	Updated NFC tapping area figure

# Introduction

## PM452 SKUs

The contents of this manual can cover the following SKUs.

Part Number	Scanner	Keypad	Network	Common
P452E31B4DNE0C	N5703	- Function-Numeric		
P452E3IB4DNE0C	EX30	- Tunction-Numeric		
P452E3164DNE0C	N5703			
P452E3I64DNE0C	EX30	Alpha-Numeric	Wi-Fi 6E,	
P452E3864DNE0C	N6803FR		Bluetooth	
P452E3124DNE0C	N5703			
P452E3I24DNE0C	EX30	Numeric		Android 13 GMS  RAM/Flash: 4G/64G
P452E3824DNE0C	N6803FR			
P452E61B4DNE0C	N5703	- Function-Numeric		
P452E6IB4DNE0C	EX30	- Function-Numeric		NFC
P452E6164DNE0C	N5703			
P452E6I64DNE0C	EX30	Alpha-Numeric	LTE, Wi-Fi 6E, Bluetooth	
P452E6864DNE0C	N6803FR			
P452E6124GNE0C	N5703			
P452E6I24DNE0C	EX30	Numeric		
P452E6824DNE0C	N6803FR			

# **Table of Contents**


IN:	ISTRUCTION	1
	Revision History	1
	PM452 SKUs	2
GE	ETTING STARTED	5
	Device Parts	5
	Product Standard Accessories	7
	Install SD & SIM cards	8
	Install & Remove Battery	11
	Charge the Device	14
	LED Indicator	18
	Turn On / Off the Device	19
	Use a Touch Screen	20
LE	EARNING THE BASICS	23
	Setup Wizard	23
	Home Screen	24
	MTP Connection with PC	32
	Manage the Files	33
	Lock the Screen	34
	Settings	35
US	SING THE KEYPAD	37
	Keypad	37
	Use the Buttons	
CA	AMERA	52
SC	CANNER	53
_		

# **Table of Contents**

Turn on / off the Scanner	53
ScanSettings	54
Scan a Barcode	63
ScanDemo	64
RELESS	65
Mobile Network	65
Wi-Fi	66
Bluetooth	67
NFC	70
STEM MAINTENANCE	71
System Information	71
Check Device Health	72
OS Update	73
Factory Data Reset	76
CESSORIES	77
Hand Strap	77
Gun Handle	78
Charging cradle	81
FETY INFORMATION	83
	Mobile Network Wi-Fi Bluetooth NFC  STEM MAINTENANCE System Information Check Device Health. OS Update Factory Data Reset  CESSORIES Hand Strap. Gun Handle Charging cradle


## **Device Parts**

Figure 1 PM452 front + left + bottom view

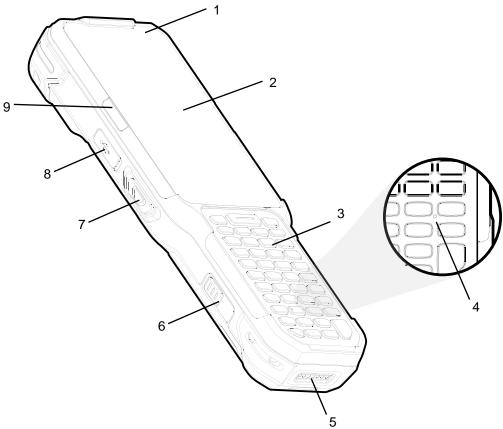

No	Name	Description
1	LED indicator (Front)	Indicate the power status and notification. Find more details in LED indicator
2	Touch screen	Displays all operating screen
3	Keypad	Numeric / Alpha-Numeric / Function-Numeric Keypad For more details, refer to Using the Keypad
4	Microphone	Use for collecting sound
5	I/O connector for cradle	Connector for charging and communication with cradle
6	Battery release button (Left)	Press the buttons in to release the battery
7	Scan button (Left)	Scan a barcode by pressing (Programmable button)
8	USB connector with cap	USB Type C connector for charging and data communication and the connector is protected by the cap
9	LED indicator (Center-Left)	Indicate the barcode reading result. Find more details in <u>LED indicator</u>

Figure 2 PM452 rear + right + top view

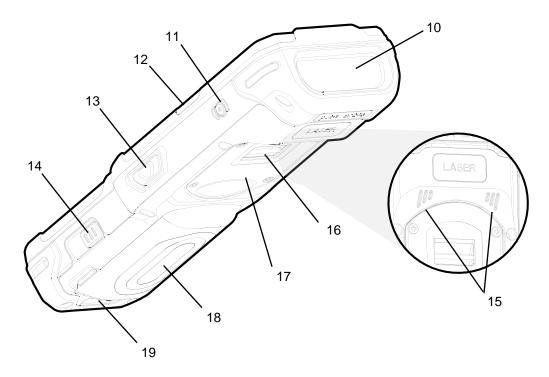

No	Name	Description
10	Scanner & Top camera	Scan a barcode & Take a picture
11	Power button	Turn on/off the device
12	LED indicator (Center-Right)	Indicate the barcode reading result. Find more details in LED indicator
13	Scan button (Right)	Scan a barcode by pressing (Programmable button)
14	Battery release button (Right)	Press the buttons in to release the battery
15	Speaker	Ring system sound
16	Hand strap hole (Top)	Mount a hand strap
17	Gun handle connect part	Plug the gun handle. Refer to Gun Handle
18	Battery	Provide power
19	Hand strap hole (Bottom)	Mount a hand strap

## **Product Standard Accessories**

The following items are in the product box.

Accessory	Name
	Battery pack
	Charger
	AC plug
	Stylus pen
	LCD protection film
	Hand strap




Note: The images may differ from the actual accessory.

## Install SD & SIM cards

#### PM452 supports

- · microSD card
- Micro SIM card WWAN (LTE) SKU only


You can find the card slots when removing the battery. Depending on SKU, the equipped card slots are different. Refer to the following table.

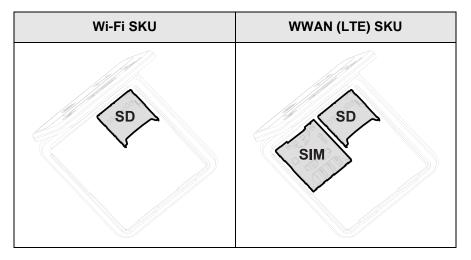

## **Install SD card**


1. Remove the battery and open the card slot cover.

Figure 3 Card slot cover

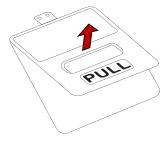

2. Insert a microSD card with the contacts facing down.

Figure 4 Install a SD card

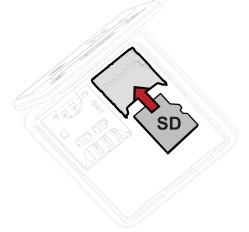


3. Close the card slot cover firmly.

To remove the card, gently slide it out of slot.

## Install SIM card


1. Remove the battery and open the card slot cover.

Figure 5 Card slot cover

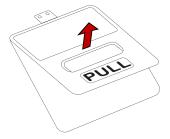

2. Insert a micro SIM card with the contacts facing down.

Figure 6 Install a SIM card

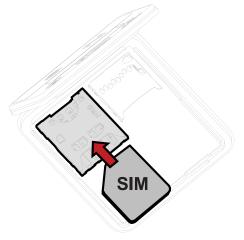

3. Close the card slot cover firmly.

To remove the card, gently slide it out of slot.

## **Install & Remove Battery**

## Install the battery

- 1. Insert the battery from the top (Opposite side of the gold contacts).
- 2. Push the battery's bottom firmly.

Confirm that the battery release buttons are completely outward.


Figure 7 Installing the battery



## Remove the battery

1. Press and hold the both sides of battery release buttons simultaneously.

Figure 8 Removing the battery - 1

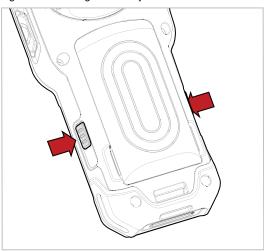

2. While pressing the battery release button in, pull the battery's bottom side up.

Figure 9 Removing the battery - 2



#### **Battery hot swap**

Battery hot swap is a feature that allows users to replace the battery without powering off.

PM452 supports two types of hot swap mode, Enterprise Hot Swap, and Legacy hot swap. Basically, the device enters Enterprise Hot Swap mode. You can change the preferred hot swap mode in EmSettings.

#### **Enterprise Hot Swap**

Enterprise hot swap allows the device to maintain Wi-Fi/Bluetooth connectivity and memory persistence even when detaching the battery. Users can earn time to replace the battery without stopping the ongoing task or disconnecting the Bluetooth devices.

But, as the backup battery with a smaller capacity than the main battery takes over to maintain the system, users are highly recommended to replace the battery within 30 seconds (30 seconds countdown displays). And some mitigations are activated to conserve power consumption.

- Reducing display brightness to about 10%
- · Disabling NFC, Scanner
- · Lowering sound volume

Once the user replaces the battery with a charged one, the device will come back to normal operation mode without booting process.



Notice: Do not change any settings or perform actions that may increase power consumption for device stability.

#### Legacy hot swap

When the battery is removed from the device, the display turns off, the device enters Hot swap mode and waits for battery replacement.

Once you replace the battery to a new one, the device will come back to normal operation mode without booting process.

## **Charge the Device**

Before using PM452, charge the device enough to use. PM452 can be charged with power adapter or charging cradle. For best charging performance and safety, follow the normal <u>charging temperature</u>.



**Caution:** Always use an original charger and cable from Point Mobile. Other chargers and cables may damage PM452. Also, make sure the charger and cables are not wet.

Follow the Battery Safety Information for safety of using the battery.

#### **Battery specification**

Typical capacity:

Standard battery: 4,000mAh

Extended battery: 5,700mAh

Rechargeable & Removable battery

#### **Charging temperature**

Charge devices and batteries in temperatures from 0 °C to 45 °C. At out-of-normal range temperatures, the PM452 may stop charging for safety, and the power LED blinks red.


## **Smart Charging**

PM452 supports three charging modes to provide optimal battery performance for your work.

- Life-X mode (Default)
  - An optimized charging mode that improves the battery's lifespan and stability.
- Normal mode
  - A typical charging mode.
- · Fast charging mode
  - A charging mode that charges the battery faster than the other modes.

To change the smart charging mode, go to **Settings** > **Battery** or **EmKit** > **EmSettings**, and select **Smart Charging**.


Figure 10 Smart Charging

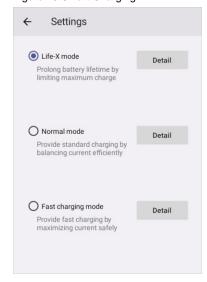

## Charge with power adapter


- 1. Assemble a proper country plug and charger, and rotate the plug clockwise to engage firmly.
- 2. Open the USB connector's cover cap on the PM452.

Figure 11 USB connector with cap

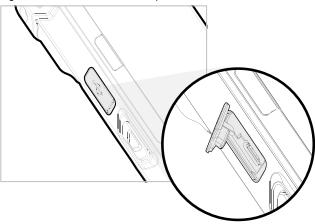

- 3. Connect the cable to the USB connector.
- 4. Provide power by plugging the power adapter to the wall socket.

Figure 12 PM452 charging with power adapter

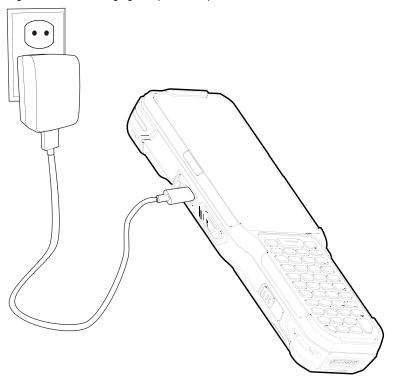

## **Charging Cradle**

There are three types of charging cradle for PM452. Single slot (ethernet) cradle (SSC / SEC), 4 slot cradle (4SC), 4 slot battery cradle (4SBC). The cradles are sold separately and can be used in common with PM451.

#### Single Slot Cradle (SSC) / Single Slot Ethernet Cradle (SEC)

SSC and SEC provide one PM452 charging slot and one PM452 battery charging slot.

### 4 Slot Cradle (4SC)

4SC provides four PM452 charging slots.


#### 4 Slot Battery Cradle (4SBC)

4SBC can charge up to 4 pieces of PM452 batteries at the same time.

## **LED Indicator**

PM452 has two types of LED indicators.

Figure 13 PM452 LED indicators

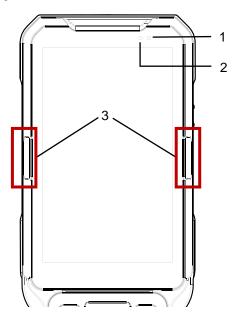


No	Indicator	Status	Indication
1	Notification LED	Solid red	Device entered Hot swap mode
'	Notification ELD	Blinking blue	Notification existing
		Solid green	Device is completely charged
2 Power LED	Solid red	Device is charging / Battery is low	
	Power LED	Blinking red	Charging temperature is out-of-normal range (Refer to Charging temperature) / Battery is very low
		Alternately blinking red & green	Cannot recognize the battery
3 C	Center LED	Red flash	Barcode reading failed
		Blue flash	Barcode reading success

## Turn On / Off the Device

To turn on the device,

 Press and hold the power button on the right side of the device until SMART BEYOND RUGGED logo displays on the screen.


Figure 14 PM452 power button

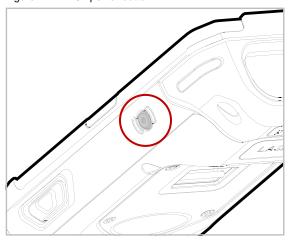

## To turn off the device,

- Press and hold the power button when the display is on until the power menu is shown. Then, tap **Power** off

Figure 15 Power menu - Power off

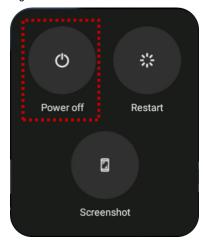

## **Use a Touch Screen**

## Controlling the touch screen

Gesture	Description
	Tap One-finger press
	Long-press One-finger press, wait, lift for select action
	Drag, Swipe, or Fling One-finger press, move, lift for scroll or tilt action
	Long-press drag One-finger press, wait, move, lift for pick up and move, or select multiple items action
	Pinch Open & Close Two-finger press, move outwards and inwards, lift for zoom in / out action
	Rotate When PM452 is turning sideways, screen orientation is changing

## **System navigation**

## **Navigation bar (Software button)**

The navigation bar is enabled as a default, and it is located at the bottom of the screen. The app overview button, home button, and back button are placed on the bar in order.

Figure 16 Navigation bar



Shape	Button	Function
	Recent apps button	Tap to see the recently used app list.
•	Home button	Tap to go to home screen. Long-press to launch the Google Assistant.
<b>4</b>	Back button	Tap to go back to previous screen.

#### **Gesture Navigation**

If you are unfamiliar with the navigation bar or you want to see the screen with a wider screen, hide the navigation bar. The functions provided by the software buttons on the navigation bar can be used by using specific gestures.

To hide the navigation bar, navigate to **Setting** > **System** > **Gesture** > **System** navigation and change the setting to **Gesture navigation**. Then, the navigation bar will be hidden.



Note: To use the navigation bar again, change the setting to 3-button navigation.

Find the gestures and matched function in the table below.

Figure 17 Gesture navigation





Function	Gesture
Open recent apps screen	Swipe up from the bottom of the screen, hold, then release.
Go to home screen	Swipe up from the center-bottom of the screen.
Back to previous screen	Swipe from the left or right edge of the screen.
Launch Google Assistant	Swipe up from either the left-bottom or right-bottom.

## **Setup Wizard**

When PM452 starts very first time or boot after factory reset, Setup Wizard is launched. Following the steps on the screen, set system language, Google account, Wi-Fi connection and copy the data, etc.

Some settings can be skipped, but there may be some restrictions on the use of the system.

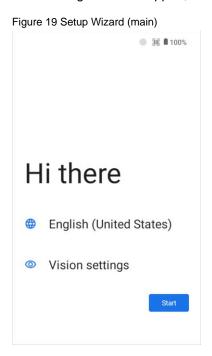

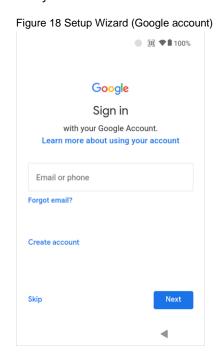

## **Home Screen**

Home screen is a screen displayed after Setup Wizard or pressing the Home button.

Figure 20 Home screen



No	Item	Description
1	Status bar	Indicates device status and notification.
2	Google search	Search an item with Google
3	Арр	Tap to run the application Long-press to see the application's options
4	Favorites tray	Place the frequently used apps
5	App folder	Apps are organized in the folder. Tap to open the App folder

## Status bar

Time, status icons, and notification icons are on the Status bar.

#### **Status icons**

Icon	Description	Icon	Description
LTE	LTE connected	3G	3G connected
E	EDGE connected		
4	Strong signal		Weak signal
×	Data disabled	×	Connection issue
<b>\$</b>	Data communication	Δ	No data connection
@	Hotspot enabled	<b>†</b>	Airplane mode
*	Connected to a Bluetooth device	•	Connected to a Wi-Fi network
	Battery is full	ı	Battery is low
İ	Battery is critical low	?	Cannot recognize battery
<b>Ξ</b>	Battery is charging	Ö	Alarm is set
•	Location service turned on	-	Vibrate mode
[ii]	Scanner turned on	M	Scanner turned on, but trigger turned off
	Numeric input mode		Lowercase alphabet input mode
<b>1</b>	Uppercase alphabet input mode (Temporary)	Û	Uppercase alphabet input mode (Fixed)
	Functions input mode (Temporary)		Functions input mode (Fixed)
Ct	CTRL functions mode	At	ALT functions mode

#### **Notification icons**


Icon	Description	Icon	Description
	New Email	ŌŦ	Connected to VPN network
□	Upcoming event	<b>=</b>	Other input method available
<u> </u>	File uploaded	<u>•</u>	File downloaded
	File copied	ф	OTG device connected
•	There are more notifications		

## **Notification panel**

Notification panel displays a list of all notifications. Tap a notification to respond.

To open the Notification panel, drag the Status bar down. To close the panel, swipe it up.

Figure 21 Notification panel

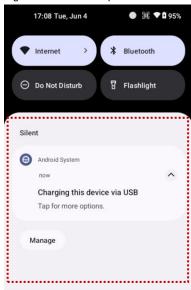


## **Quick setting panel**

Quick setting panel contains some frequently used settings such as Wi-Fi, Bluetooth, etc.

To use the Quick setting panel,

- 1. Open the Notification panel.
- 2. Drag down the Notification panel.
- 3. Tap a setting icon to enable / disable the setting or long-press an icon to see more detail.

Figure 22 Quick setting panel

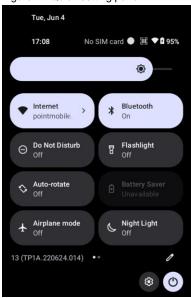

To edit the configuration of Quick setting panel,


- 1. Tap / on the bottom of the panel.
- 2. By long-press and dragging the icon, customize the configuration of the panel.

## **Apps & Widget**

#### App folder


To create the app folder, long-press an app icon and drag it to another app icon.


Figure 23 Create app folder

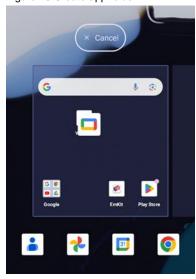

To change the folder name, tap the **Edit Name** and input a new name.

Figure 24 Change app folder name

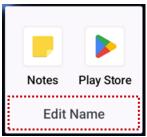

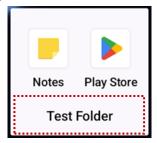


#### App drawer

All installed apps are listed alphabetically in App drawer.

- To open the App drawer, swipe up the Home screen.
- To close the App drawer, swipe down the screen.

Figure 25 App drawer

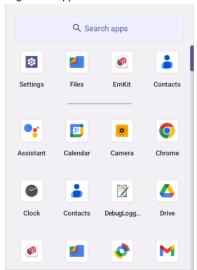

#### **Favorites tray**

To organize an app in the Favorites tray,

- 1. Long-press an app icon from the App drawer. Then, drag it slightly until the Home screen is shown.
- 2. Place the app icon in the Favorites tray.

Figure 26 Add an app to Favorites tray




#### Organize app in Home screen

To organize an app in the Home screen,

- 1. Long-press an app icon from the App drawer. Then, drag it slightly until the Home screen is shown.
- 2. Place the app icon where you want.

(To cancel to place the app, drag it to Cancel area and release.)


Figure 27 Place app in Home screen

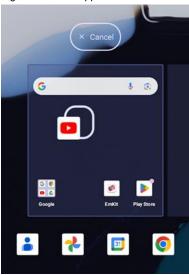

To remove an app or widget in the Home screen,

- 1. Long-press an app icon or widget.
- 2. Drag it to **Remove** area and release.

Figure 28 Remove from Home screen

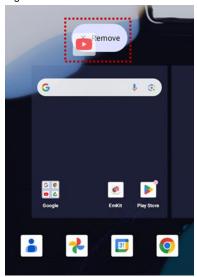


## Widget

To add a widget in the Home screen,

- 1. Long-press the empty space of the Home screen.
- 2. In three menus, select Widgets.

Figure 29 Widget menus

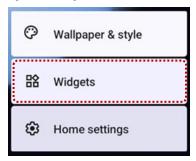


- 3. Among the list, tap and hold a widget you want to add.
- 4. Place the widget to the Home screen by dragging.

#### MTP Connection with PC

To transfer the files with a PC,


- 1. Connect the device to the PC via USB cable first.
- 2. Drag down Status bar and tap **Android System** notification to change USB preference option.

Figure 30 USB connection notification

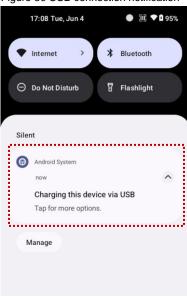

3. Change the option to File Transfer from No data transfer.

Figure 31 USB Preferences

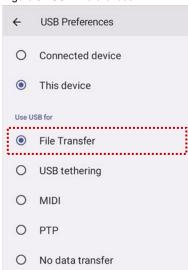


4. Now PC can recognize the connected device. Find PM452 device from file explorer of the PC.

## **Manage the Files**

Launch Files <a>I</a> to manage the files in the storage.

You can find the folders and files, move / copy them to other location, and delete them from the storage.

Figure 32 Files

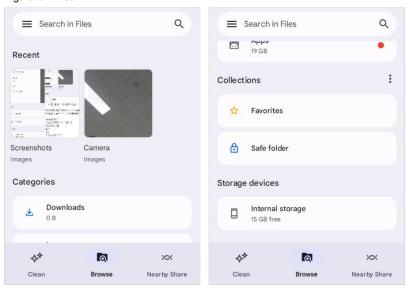


#### Lock the Screen

Protect the device from unauthorized personnel by setting up the screen lock.

- 1. Navigate to **Settings** > **Security**.
- 2. Tap Screen lock.

Figure 33 Screen lock

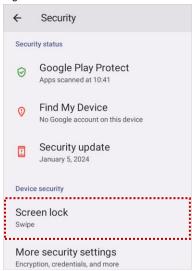

- 3. Choose a screen lock method.
  - None: Screen unlocks immediately
  - Swipe: Swipe the lock screen to unlock (Default)
  - Pattern: Draw a pattern to unlock
  - PIN: Input a PIN to unlock (At least 4 digits)
  - Password: Input a password to unlock (At least 4 characters)

## **Settings**


There are two ways to go to **Settings**:

- Open the App drawer and tap Settings
- Open the Quick setting panel and tap gear icon

#### Adjust display brightness

To adjust the display brightness level,

- · Open Quick setting panel and adjust display brightness bar
- Go to Settings > Display > Brightness level

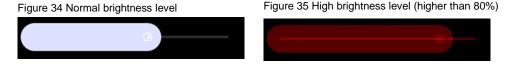




**Caution:** Using high brightness levels for long periods may cause eye strain and increase battery consumption.

#### **Adjust sound**

To adjust sound volume, go to **Settings** > **Sound** and control the Media, Call, Alarm, Ring volume bars.

Figure 36 Volume bars

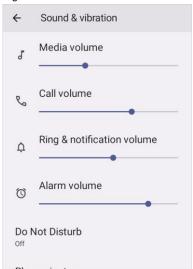



**Caution:** Using high volume levels for long periods may cause ear strain and increase battery consumption.

### **Learning the Basics**

#### Adjust display and text size

If the display and text size of the screen is too small or too large, adjust the size.

- 1. Go to Settings 🔯 > Display > Display size and text.
- 2. Referring to the Preview, set the font size.

Figure 37 Set display and text size




#### **Use Keyboard Backlight**

The buttons in the keypad may not be visible in the dark. For this inconvenience, PM452 have keyboard backlight so that you can find the proper keys easily.

To use the keyboard backlight,

- 1. Go to **Settings** > **Display**.
- 2. Tap Keyboard Backlight switch.

Figure 38 Keyboard Backlight

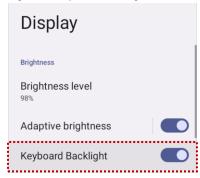

### Keypad

#### **Numeric Keypad**

Figure 39 Numeric keypad



Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT	Programmable keys,  P1 is the AppSwitch key by default  P2 is the Back key by default
Scan (Orange) SCANNER_F	Scan the barcode
Left / Up / Down / Right  DPAD_LEFT / UP / DOWN / RIGHT	Moves left / up / down / right
ESC ESCAPE	Escape function

Key	Description
Backspace BKSP	Backspace function
TAB TAB	Tap function
Alpha (Yellow)	Toggle key for Alphabet input mode.  The keycode or function shown on the keypad in yellow will be inputted in Alphabet input mode.  Press once  Activates Alphabet input mode  The icon appears on status bar
	Press twice  • Back to default input mode
	Toggle key for functions input mode. The function shown on the keypad in blue will be run in functions input mode.
Fn (Blue)	Press once
Fn	Press twice  • Maintains the functions input mode  • The icon appears on status bar
	Press three times  • Back to default input mode
Function 1 ~ 4 (5 ~ 8)	In Default input mode  • Executes the function mapped to F1 ~ F4
F1 F2 F3 F4 F4	In Function input mode  • Execute the function mapped to F5 to F8

Key	Description
	In Default input mode • Inputs 0 ~ 9
Numeric 0 ~ 9 0~9  STU (YZ)  1  2	In Alphabet input mode
Period / Decimal Point PERIOD  ,	In Default input mode
Minus (-)	In Default input mode
Shift	Toggle key for shift combination input mode.  In Default input mode  • Press once  - Activates Shift combination mode temporarily  - The  icon appears on status bar. Ex)  • Press twice  - Maintains the Shift combination mode  - The  icon appears on status bar. Ex)  • Press three times  - Back to default input mode  In Function input mode  • Press once  - Activates CTRL function mode temporarily  - The  icon appears on status bar.  • Press twice  - Back to Function input mode

Key		Description
Enter ENTER	ENTER +	Enter function
Symbol	ф	Press once         • Inputs a symbol you set. By default, '~' will be inserted  Press twice         • Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want.    V

#### Alpha-Numeric Keypad

Figure 40 Alpha-Numeric keypad



Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT	Programmable keys,  P1 is the AppSwitch key by default  P2 is the Back key by default
Scan (Orange) SCANNER_F	Scan the barcode
Left / Up / Down / Right  DPAD_LEFT / UP / DOWN / RIGHT  VM-L  VM-DN  VM	Moves left / up / down / right
ESC ESCAPE	Escape function

Key	Description
	In Default input mode  Inputs alphabet in uppercase or lowercase  (If the shift combination mode is on, inputs uppercase)
Alphabets  A B C	<ul> <li>In Function input mode</li> <li>Controls screen brightness, keyboard backlight brightness, and volume (E, J, K, P, W, X)</li> <li>Input arithmetic operators (Q ~ U)</li> <li>Refer to <u>Functions</u> section for more detail</li> </ul>
	In CTRL function mode
CTRL (Green)	In Default input mode  • Activates the CTRL function mode  • The function shown on the keypad in green will be run  • The Ct icon appears on status bar
	<ul> <li>In Function input mode</li> <li>Activates the ALT function mode</li> <li>The At icon appears on status bar</li> </ul>
Space / TAB SPACE / TAB	In Default input mode  Inputs blank (space function)
SP	In Function input mode  Tab function
Backspace BACKSPACE DEL	In Default input mode  • Backspace function
BKSP	In Function input mode  • Delete function
Numeric 0 ~ 9 / Function F1 ~ F24	In Default input mode  Inputs 0 to 9
0~9/F1~F24 F11 F21 F1 F12 F22 F2 F13 F23 F3 1 2 3	In Function input mode  • Executes the function mapped to F1 to F10
	In Shift combination mode  • Executes the function mapped to F11 to F20

Key	Description
	In CTRL function mode  • Executes the function mapped to F21 to F24  Toggle key for Shift combination mode.  The uppercase alphabets will be inputted or the function shown on the keypad in yellow will be executed in Shift combination mode
Shift (Yellow)	Press once
	Press three times  • Back to default input mode
Fn (Blue)	Toggle key for functions input mode. The function shown on the keypad in blue will be run in functions input mode.  Press once
Enter ENTER	Enter function

Key	Description
Period / Decimal Point PERIOD	Inputs a period (decimal point)
Symbol FLD.	Press once     Inputs a symbol you set. By default, '~' will be inserted  Press twice     Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want.      W




**Note:** The 5250 terminal emulation keypad configuration is only used when the 5250 emulation software runs on PMA52

ex) ERP INP, CLR EOF, SYS RQ keys in CTRL function mode

#### **Function-Numeric Keypad**

Figure 41 Function-Numeric keypad

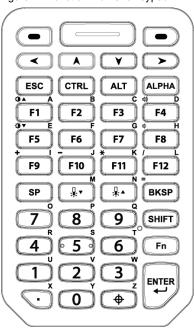

Key	Description
P1 / P2 SOFT_LEFT / SOFT_RIGHT	Programmable keys,  P1 is the AppSwitch key by default  P2 is the Back key by default
Scan (Orange) SCANNER_F	Scan the barcode
Left / Up / Down / Right  DPAD_LEFT / UP / DOWN / RIGHT	Moves left / up / down / right
ESC ESCAPE ESC	Escape function

Key	Description
CTRL	Toggle key for the CTRL function mode  The Ct icon appears on status bar in the CTRL function mode
ALT	Toggle key for the ALT function mode  The At icon appears on status bar in the ALT function mode
	Toggle key for Alphabet input mode.  The keycode shown on the keypad in yellow will be inputted in Alphabet input mode.
Alpha (Yellow)	Press once
	Press twice  • Back to default input mode  In Default input mode
Function 1 ~ 12  F1 ~ F12  A B C D	<ul> <li>Executes the function mapped to F1 ~ F12</li> <li>In Alphabet input mode</li> <li>Inputs alphabet A ~ L</li> </ul>
F1 F2 F3 F4	In Function input mode
Space SPACE	Space function
Keyboard backlight brightness keys	In Default input mode
	In Alphabet input mode  Inputs alphabet M or N

Key	Description
Backspace  BKSP  BKSP	In Default input mode  • Backspace function  In Function input mode  • Inputs arithmetic operator '='
Numeric 0 ~ 9 0 ~ 9	In Default input mode  Inputs 0 to 9  In Alphabet input mode
Shift	<ul> <li>Inputs alphabet O to W or Y</li> <li>Toggle key for Shift combination mode.</li> <li>The uppercase alphabets will be inputted in the Shift combination mode</li> <li>Press once         <ul> <li>Activates Shift combination mode temporarily</li> <li>The icon appears on status bar. Ex)</li> </ul> </li> <li>Press twice         <ul> <li>Maintains the Shift combination mode</li> <li>The icon appears on status bar. Ex)</li> </ul> </li> <li>Press three times</li> </ul>
Fn (Blue)	<ul> <li>Back to default input mode</li> <li>Toggle key for functions input mode.</li> <li>The function shown on the keypad in blue will be run in functions input mode.</li> <li>Press once <ul> <li>Activates Functions input mode</li> <li>The icon appears on status bar</li> </ul> </li> <li>Press twice <ul> <li>Maintains the functions input mode</li> <li>The icon appears on status bar</li> </ul> </li> <li>Press three times <ul> <li>Back to default input mode</li> </ul> </li> </ul>

Enter	
ENTER	Enter function
Period / Decimal Point PERIOD	In Default input mode
Symbol	Press once  • (In Default input mode) Inputs a symbol you set. By default, '~' will be inserted  • (In Alphabet input mode) Inputs alphabet Z  Press twice  • Provides a 3x3 grid on the screen with nine additional symbols. Choose a symbol you want.

#### **Use the Buttons**

#### **Functions**

Function	Description	Numeric	Alpha-Numeric	Function-Numeric
<b>□</b> ()	Volume down	Fn + 2	Fn + P	Fn + F8
<b>U</b> )))	Volume up	Fn + 3	Fn + J	Fn + F4
₩.▼	Display brightness down	Fn + 4	Fn + K	Fn + F5
₩.	Display brightness up	Fn + 7	Fn + E	Fn + F1
	Keyboard backlight brightness down	Fn + 6	Fn + W	Keyboard backlight brightness down
	Keyboard backlight brightness up	Fn + 9	Fn + X	Keyboard backlight brightness up
CTRL	CTRL function mode	Fn + SHIFT	CTRL	CTRL
ALT	ALT function mode	-	Fn + CTRL	ALT
$\uparrow$	Home screen	-	CTRL + A	-

#### Screenshot

To take a screenshot, simultaneously press the **Power button + P1 key** (on the left side of the front scan button).