

EUT Position: X-axis



EUT Position: Y-axis




EUT Position: Z-axis



---

**Test Setup Photo of Radiated Measurement (0.009 ~ 30MHz)**


---

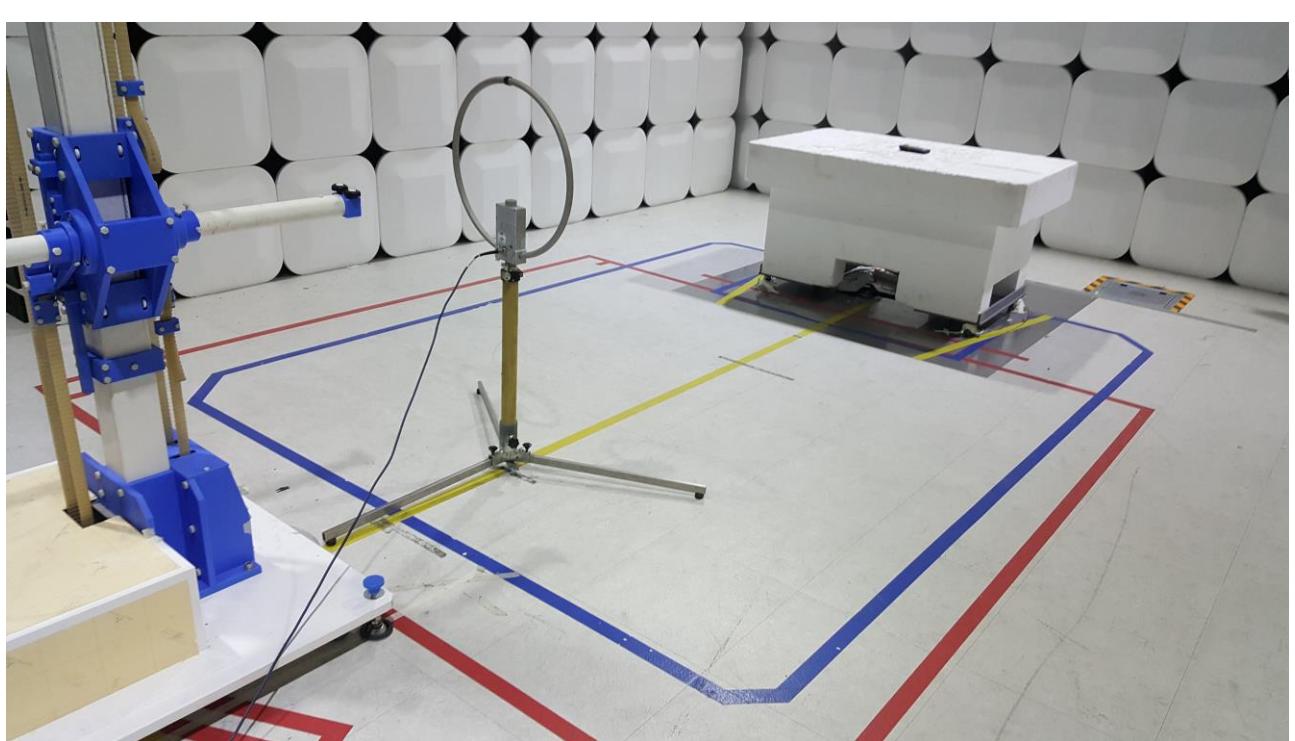

---

**Test Setup Photo of Radiated Measurement (below 1000MHz)**

---

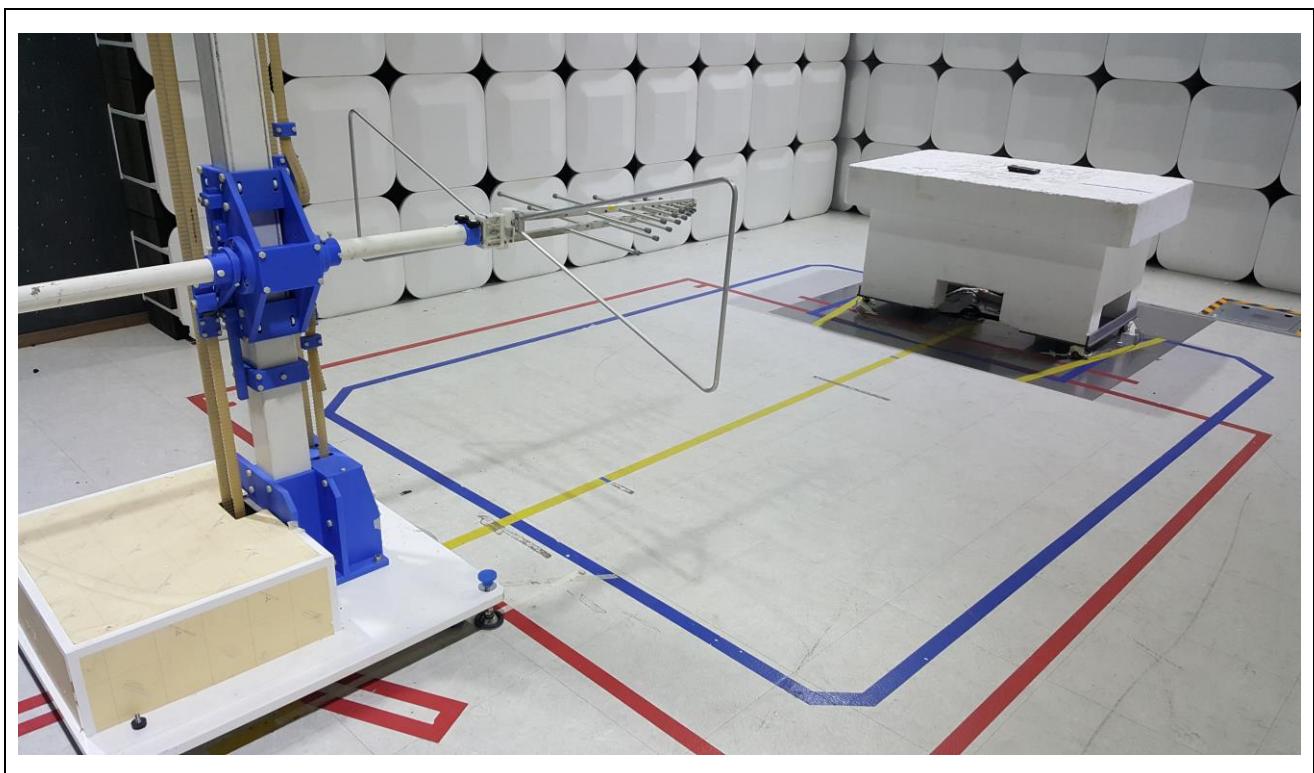

---

**Test Setup Photo for AC Conducted Emissions**

---

