

WIRELESS HEADPHONE MANUAL INSTRUCTION

BATTERY INSTALLATION:

1) HEADPHONE

SLIDE BATTERY COVER UP TO OPEN.
INSERT 2 X AAA BATTERIES IN THE CORRECT POLARITY
REPLACE BATTERY COVER

2) TRANSMITTER

OPEN BATTERY COVER
INSER 2 X AAA BATTERIES IN THEIR CORRECT POLARITY
REPLACE BATTERY COVER

INSTRUCTIONS:

1) TO USE RADIO

TURN THE POWER KNOB LOCATED ON ONE SIDE OF THE HEADPHONE.
TOWARDS THE ON POSITION. THE POWER LIGHT INDICATOR SHOULD
LIT.
POSITION THE HEADPHONE AT THE BACK OF YOUR NECK.
PRESS RESET BUTTON ONCE AND PRESS SCAN TO SELECT YOUR DESIRED
STATION.
ADJUST THE VOLUME ACCORDINGLY.

2) TO USE TRANSMITTER

CONNECT ONE SIDE OF THE TRANSMITTER JACK TO THE TRANSMITTER
SOCKET.
CONNECT THE PROPER SIZE TRANSMITTER JACK TO THE DEVICE YOU WANT
TO USE. TRANSMITTER WILL WORK WITH AN
IPOD/MP3/MP4/TV/DVD/NOTEBOOK COMPUTER.
TURN THE TRANSMITTER ON. THE POWER LIGHT INDICATOR SHOULD BE LIT.
PRESS THE RESET BUTTON ONCE AND PRESS THE SCAN BUTTON ONCE TO
START LISTENING TO THE DEVICE CONNECTED.
ADJUST VOLUME ACCORDINGLY.
TO SWITCH BACK TO RADIO, SIMPLY TURN OFF THE TRANSMITTER AND
PRESS RESET AND SCAN BUTTON ONCE SIMULTANEOUSLY.

CAUTION:

BATTERIES MUST BE REPLACED UNDER FOLLOWING CONDITIONS:

- 1) POWER LIGHT INDICATOR BECOMES DIM.
- 2) SOUND FROM HEADPHONE IS LOW DESPITE VOLUME KNOB BEING
AT IT'S MAXIMUM.

BOTH HEADPHONE AND TRANSMITTER MUST BE TURNED OFF WHEN NOT IN
USE TO AVOID DISCHARGE OF BATTERY.

REMOVE BATTERIES IF UNITS ARE NOT TO BE USED FOR A LONG PERIOD OF

TIME.

BATTERIES MUST BE DISPOSED OFF PROPERLY.

DO NOT MIX OLD/NEW BATTERIES AND BATTERY TYPES.

DO NOT EXPOSE UNIT TO EXCESSIVE HEAT OR MOISTURE.

KEEP THIS INSTRUCTION SHEET FOR FUTURE REFERENCE.

WARNING:

NOT RECOMMENDED FOR CHILDREN BELOW 5 YRS.

MAY CONTAIN SMALL PARTS NOT SUITABLE FOR SMALL CHILDREN.

FCC STATEMENT:

1. THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRIED OPERATION.

2. CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

