



 
 
 
 
 
## INSTRUCTION SHEET



### To Operate :

- Remove the rug and remote illuminator units from the protective plastic bags and dispose of all bags, ties and packaging.
- Open battery compartment door of the rug light with a Phillips screw driver. Insert 3 *fresh* AA ALKALINE batteries as shown on the diagram inside the battery compartment. Close the battery compartment door and tighten the battery door screw.
- Repeat the procedure for inserting the remote light batteries.
- The system and channel switches are preset at the factory to work for most environments. (See below instructions if changing control codes for other conditions).
- Lay the rug flat on the floor.
- Rug should only be placed next to bed as shown. Do not place away from bed. And light unit on rug should always be placed under or closest to the bed to avoid stepping on or tripping over the light unit.
- Place the Remote Illuminator at a location where you desire low level lighting at night when activated by stepping on the rug.
- Step and stand on the Step 'n Shine rug to activate the rug light. The active switch areas are distributed throughout the rug area. If the rug fails to light, try stepping on another section of the rug and stand for at least one second.
- Once the rug is lit, you may now walk away. After a period of approximately 5 seconds, you may step back on the rug to turn the Step 'n Shine light off. When turning off, the rug light will slowly dim for about 10 seconds. Otherwise, if you leave the rug for 15 minutes, the rug will automatically start to turn off signified by the dimming light. To re-trigger the light, simply step on the rug again for an additional 5 minutes of light.
- When the rug light is activated, all Remote Illuminators in the area with a corresponding switch code will also turn on after a brief delay of 1 to 4 seconds. The remote lights remain lit until the rug light is turned off or automatically times out after 15 minutes. The remote light dims out as they turn off. You may also manually turn on or off the remote lights by pressing on the lens of the Remote Illuminator.
- If you want to turn off the rug light completely, slide the system switch on the bottom to OFF, and it cannot be activated. Similarly, there is an OFF switch position for the remote light, which does not allow it to be turned on by activating the corresponding rug light(s). The remote light in the OFF position also cannot be turned on with a manual "tap". If you will be away for an extended time, like more than 2 weeks, it is suggested that you slide the switches to OFF positions to extend battery life.

### DRAWING OF BATTERIES POSITIONS.

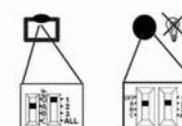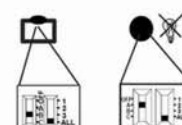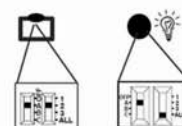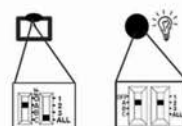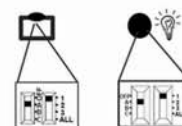

### To Change Channel Switch Settings :

- If you have multiple units in your home, you can change the channel switch on the rug light bottom to have each rug light work independently. There is no need to change the channel number of your first rug light. Change the channel of your second rug light to 2. If you have a third, move that rug light channel switch to 3.
- If you want the rug light to activate all remote lights, move the channel number to ALL.
- Match the channel number on the remote light to the rug light channel you want to use to activate the remote light. If you want the remote light to activate from any rug on the system, the slide switch of the remote light should be set to ALL.
- If you have interference from the other rug lights, perhaps nearby neighbors, you can select another system letter by sliding the system switch on all your rug lights and remote lights so they all have the same system letter -- A, B or C.
- You can also select a different system letter(s) within your own home where you have multiple rugs and multiple remote lights, and wish some rug(s) and remote light(s) to work completely independent of others in the home. A rug light and remote light set to system B will not be affected in any way by any rug or remote light set to system A or system C.

### To Clean :

- Product is surface washable only. DO NOT LAUNDRER. Wipe surface with damp cloth.

### Remote Light Placement :

- Do not place on the floor where someone may accidentally step or trip over the unit. Suggested areas are vanity or kitchen counter, table or nightstand, or dresser top.
- The removable hook can be attached to the back of the remote light by simply inserting the tab on the hook into the notched hole on the back of the remote light and snapping into place. You can then hang the remote light from most door knobs, or even on a closet pole. The notched hole also allows you to hang the remote light from a nail or hook on a wall.

### About Your Step 'n Shine product :

- The product uses high frequency radio waves to communicate from the rug light to the Remote Illuminator lights. These radio waves can be affected in various ways by building materials, water pipes, appliances and other wireless devices such as wireless telephones. Often moving either or both the rug and the Remote Illuminator even a few inches can greatly improve or degrade the ability for the Step 'n Shine system to work properly. Even when conditions are very good, the remote light may fail to respond for a given activation due to temporary interference from some other source.
- The lighting system provides low level lighting for dark rooms. The light may appear dim or even off in a brightly lit room.
- Indoor use only. Do not use outdoors or when the unit may get damp.
- Modifications not expressly approved by Step 'n Shine, LLC, for compliance could void the user's authority to operate the equipment.

### If the Remote Illuminator lights fail to operate when the rug light is stepped on, check the following :

- ALWAYS use FRESH ALKALINE AA batteries. Batteries get old over time even when not used, so using fresh batteries from your local retailers is important. Replace the batteries when the units start to act intermittently.
- Make sure both units are ON, and the channel switches are set to the correct setting. See chart.
- Make sure all units are operating by (1) stepping on the rug and observing the rug light turn on, and (2) pressing on the lens of the remote light to manually light the Remote Illuminator. If either fails to turn on, double check the switch settings and replace the batteries.
- For best operation, you may have to try the Remote Illuminator in different locations. The radio link between the main rug unit and the Remote Illuminator can be affected by hidden objects such as steel supports, drains, electrical wires and water pipes in walls, or by a nearby appliance such as a TV or refrigerator. Sometimes moving the unit a few inches is adequate to improve the radio signal, but in some cases, may require the remote light to be moved to a different part of the room or a different room altogether.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.