


TU23A-RF-TX/RX Instruction

1. There are 5 switches on the front of remote controller.(Illustration for DIP SWITCH)

- (a) Switch 1,2 & 3 are for Channel Code.
- (b) Switch 4 is for setting direction of customize application.
- (c) Switch 5 is for module option. (**ON**:Normal module
OFF:Setting module)

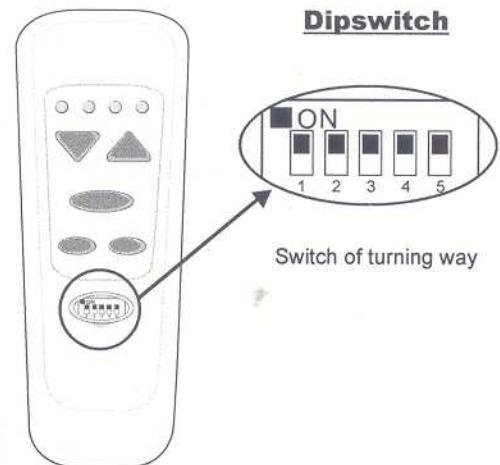


2. Operation:

- (a) Confirm all parts are assembled well.
- (b) Switch remote controller DIP SWITCH 5 to **OFF** for Setting module.
- (c) Set switch1,2 & 3 as an unique Channel Code.(One Channel Code can be set up for four ID Code.)
- (d) Press left or right button to select the order of customize application.
- (e) Plug in POWER CORD(LED light on the receiver starts flashing)→press **STOP** button→ when the LED stops flashing, then the unique Code between remote control and customize application has been set.
- (f) Press **▲** or **▼** to confirm direction is correct.(If not,please change DIP SWITCH 4)
- (g) After all manual setting, move DIP SWITCH 5 to **ON** for Normal module. You can pressing **▲,▼,●,●**.
- (h) Power on and off will not arrest the previous settings. The remote controller can be ready after LED light off.

Remark : Radio Frequency is 433.92MHz.

3. Button instruction:

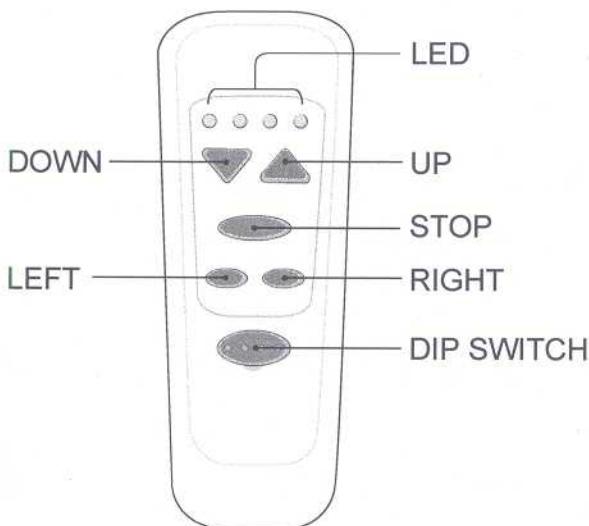

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user' s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.