

WIRELESS LIGHTING CONTROL SYSTEM

Remote Dimmer


USER GUIDE

V.01 2008.3


Avertronics INC

LINE INSTALL


Remote Dimmer connecting

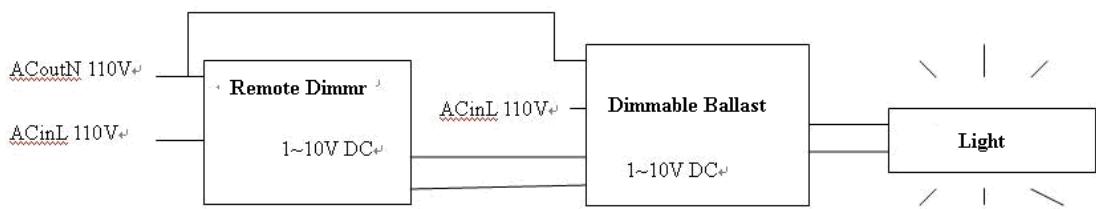


Remote Dimmer connecting

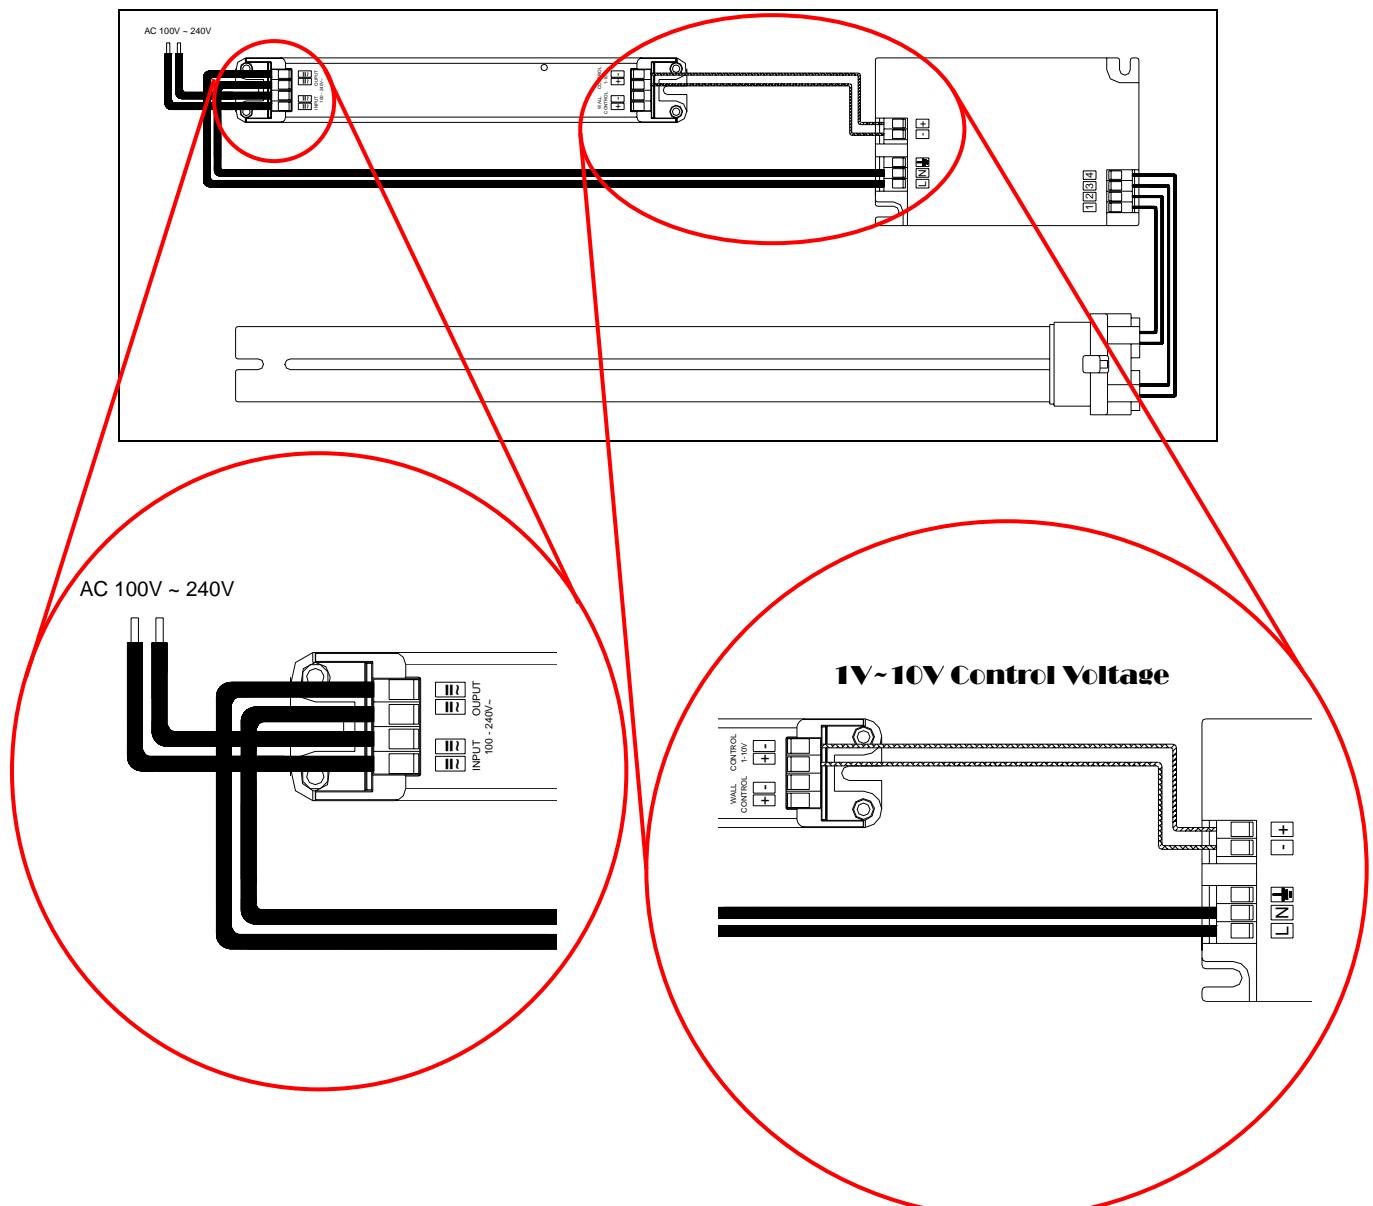

Remote Dimmer with dimmable ballast connecting

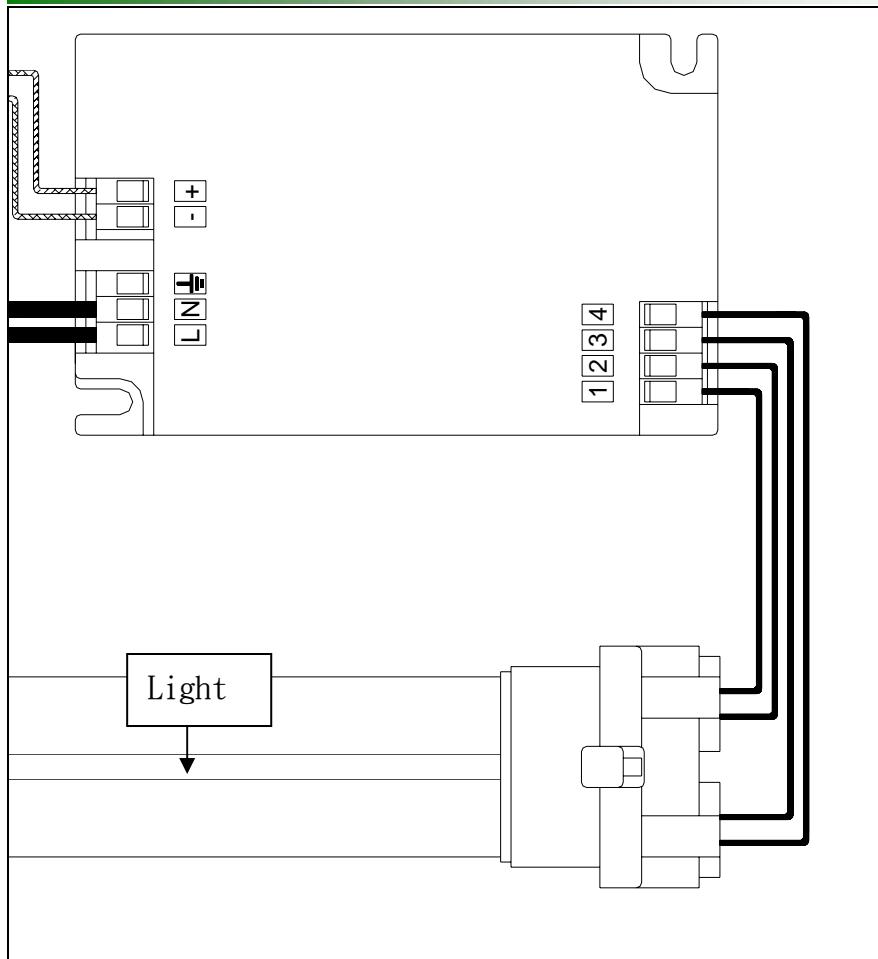

Remote Dimmer with multiform dimmable ballasts connecting


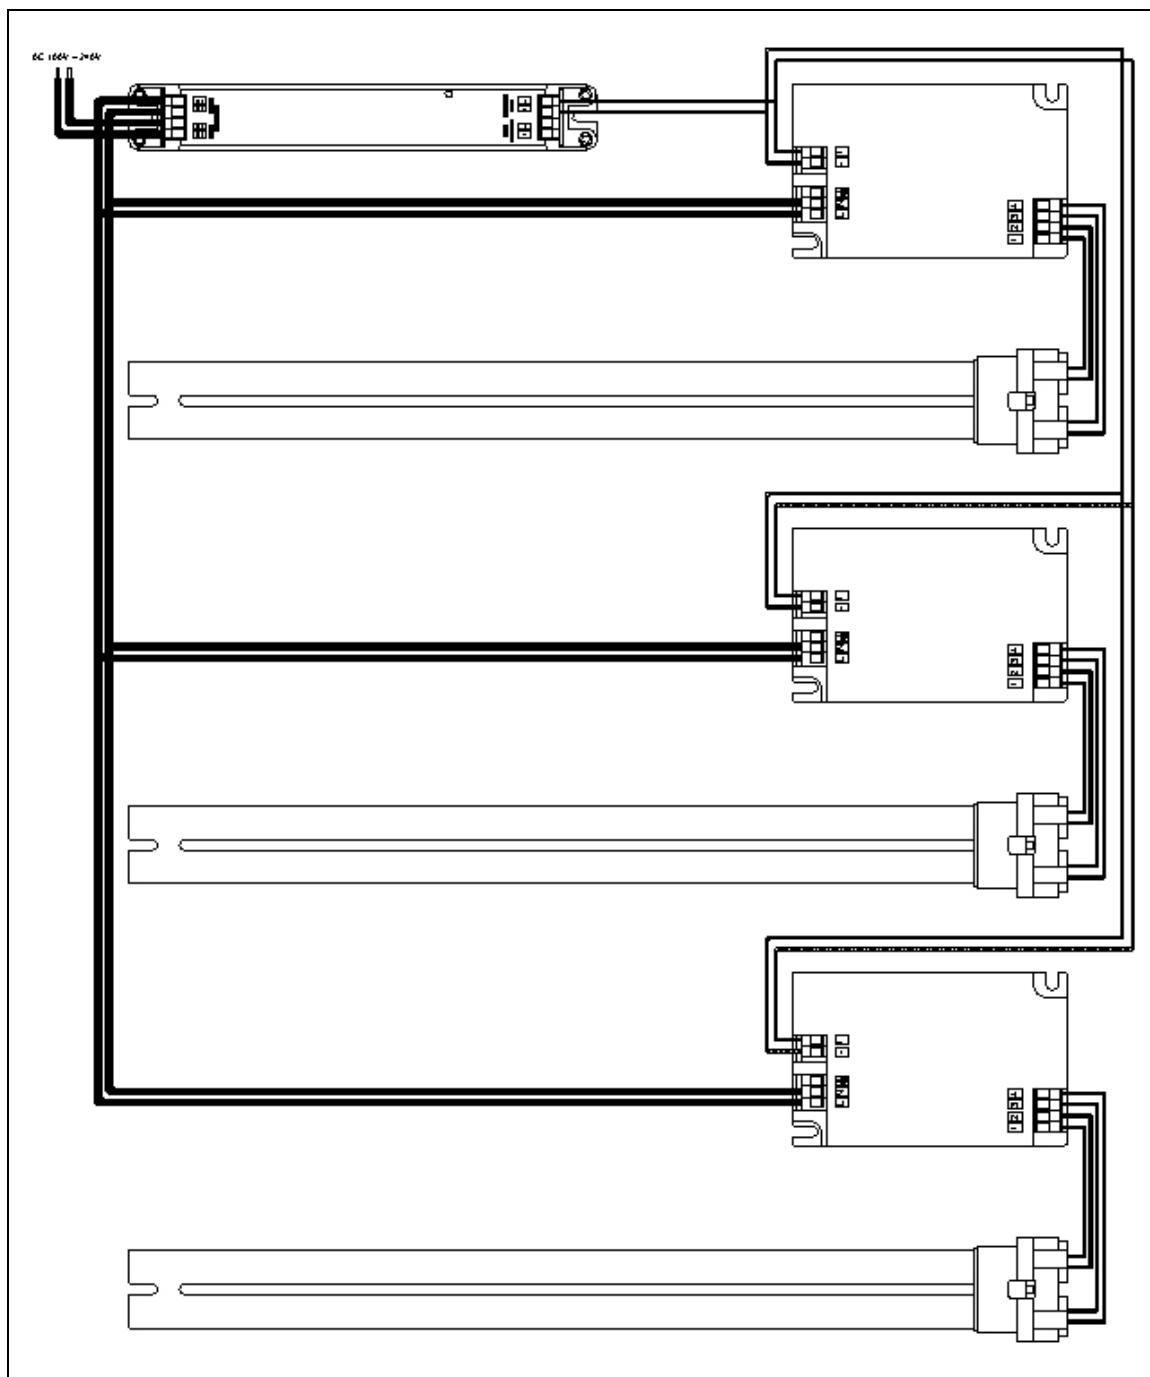


Control Gear **INSTALL**

Control Gear connecting



Control Gear connecting

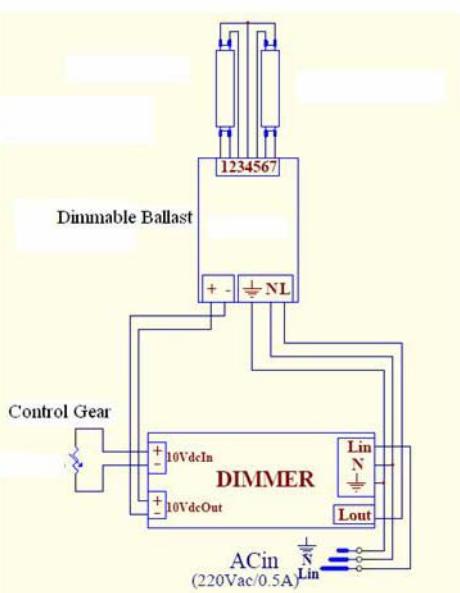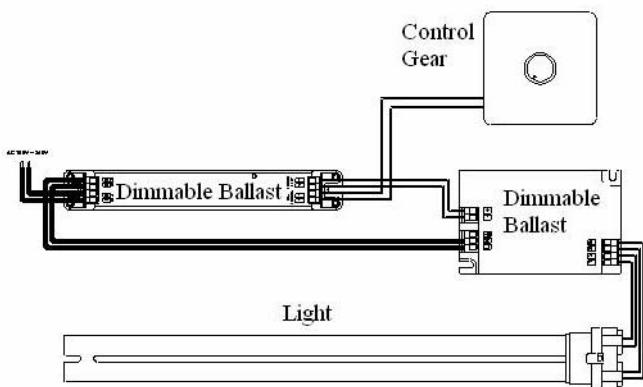

Normal Link Setup

1. Set up all equipments as diagram.
2. EUT links to light through ballast
3. Turn on light through EUT.

FCC Caution

1. The device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. FCC RF Radiation Exposure Statement: The equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.
3. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
4. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.