


## BATTERY REPLACEMENT INSTRUCTIONS:

### Base Unit (Transmitter)

1. Locate battery compartment on bottom side of Base Unit.
2. Carefully, remove battery cover.
3. Carefully, load 2 AAA batteries (not included).
4. Replace battery cover.

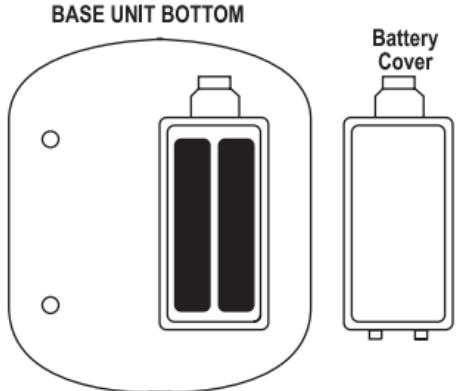

## TIMER INSTRUCTIONS:

### Count Down Timer:

1. Press MODE to select timer mode. The upper display will show a small TIMER and 0:00.
2. Press HR and MIN button to set the timer. Press START/STOP button to start countdown timer. "▼" will blink for every second.
3. To stop countdown timer, press START/STOP button again. The "▼" becomes solid.
4. Press CLEAR button to clear the setting back to 0:00.

### Count Up Timer:

1. Press MODE to select timer mode. The upper display will show a small TIMER and 0:00.
2. Press START/STOP button to start count up. The "▲" will blink for every second.
3. To stop count timer, press START/STOP button again. The "▲" becomes solid.
4. Press CLEAR button to clear the setting back to 0:00.

### LED Flashlight Instructions:

1. Press and hold silver button on side of Handheld Unit for flashlight illumination while receiver switch is in the ON position.
2. Release silver button to turn off.

## TROUBLE SHOOTING:

Problem: Cannot Make Meat Selection.

Solution: May be in Timer Mode. Check to make sure that the Handheld Unit is in Thermometer Mode by pressing MODE button.

Problem: No Data Link between Handheld Unit and Base Unit.  
"▼" will blink for every second.

Solution 1: Check to make sure that both units are turned ON while in close proximity to one another.

Solution 2: Check Batteries for replacement.

Problem: Flashlight will not work.

Solution 1: Make sure receiver switch is in the ON position and press flashlight button on the side of the Handheld Unit.

Solution 2: Check Batteries for replacement.

### CLEANING INSTRUCTIONS:

1. Hand wash probe gently with soap and water.
2. DO NOT immerse probe in water while cleaning.
3. Dry immediately.
4. DO NOT WASH Handheld Unit or Base Unit.
5. NOT DISHWASHER SAFE.

## HELPFUL HINTS:

1. For best results, make sure probe tip is inserted into the meat at least 1 inch.

2. Do not allow the probe or probe wire to come in direct contact with flames. If cooking with grill cover closed, only use medium and low heat.

3. Make sure that probe tip is inserted into the center of meat (NOT poking through meat).

## CAUTION:

1. Caution Meat Probe and Wire are very hot while in use.

2. Always use a heat-resistant glove when handling meat probe or probe wire while in use. DO NOT touch with bare hands.

3. DO NOT expose Handheld/Base Unit to direct heat or hot surfaces.

4. NOT FOR USE IN MICROWAVE OVENS.

5. DO NOT expose Base Unit/Probe plug connector to water.

6. DO NOT use Handheld/Base Unit in the rain.

7. Base Unit registers temperatures as low as 30°F and as high as 410°F. A 410°F is exceeded probe wire may deteriorate.

8. This product is intended for use as a meat thermometer, NOT INTENDED FOR USE AS AN EXTERNAL OVEN THERMOMETER.

9. Keep Stainless Steel Probe/Wire away from Children.

# Remote Wireless BBQ Thermometer

## **FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.