

User Manual of 2.4G Duplex Stereo Wireless Headphone

Connecting Method:

Connect the DC(DC-5V) plug on the power adaptor to the DC jack on the transmitter, turn the power switch to ON; insert one end of audio cable into AUDIO-IN on the transmitter, and then insert the other end of audio cable into the PC audio sound output plug; Insert one end of microphone cable into MIC-OUT on the transmitter, insert the other end of microphone cable into the PC microphone IN.

Matching method:

Turn on the power switch of receiver and transmitter, the power indicator light shine Red. The indicator light of transmitter will bright one time; Press the function switch (VOL) on the right of the receiver and press the top switch(matching switch) on the transmitter at the same time about 3-6 seconds. When the matching light of receiver and transmitter bright at the same time, loosen your hand, the light of transmitter and receiver will bright and then stop. That shows the matching is success. Press the fuction switch(VOL) of receiver again to confirm the matching is finished., the indicator light keep original situation and glist every 1-3 seconds. Then turn on the player, you can hear the beautiful music. If matching is failed, please try again.

Wireless Headphone:

Generally, the product is matched before selling, you need not to match again. Turn on the power switch of transmitter and receiver, the indicator light of transmitter keep original situation and glist every 3-5 seconds, the indicator light of receiver(Green light) keep bright. Only press the (VOL key) to confirm the matching is finished. The indicator light keep original situation and glist every 1-3 seconds. Then turn on the player, you can hear the beautiful music. If the voice is too low or too loud, please press the VOL+ or the VOL- to modulate the voice.

Wireless Chat online:


Under the wireless headphone suitation, press the VOL key on the receiver and transfer it into chating suitation, then turn on the chating tool: QQ or MSN to chat online and listen to music at the same time.

Charge function:

When the receiver is out of power, insert the transmitter's jack into the DC plug and then put the receiver onto the transmitter. Matching the charge slice the indicator light become red. When charge complete, the indicator light of transmmiter crushed out.

Remark:

This product has emergency function. When the built-in battery is out of power, please turn the sponge on the edge of headphone by counterclockwise. Then insert 2x AAA into it. Transfer the battery switch to DC2. When the product is not used, please turn off the power of transmitter and reveiver.

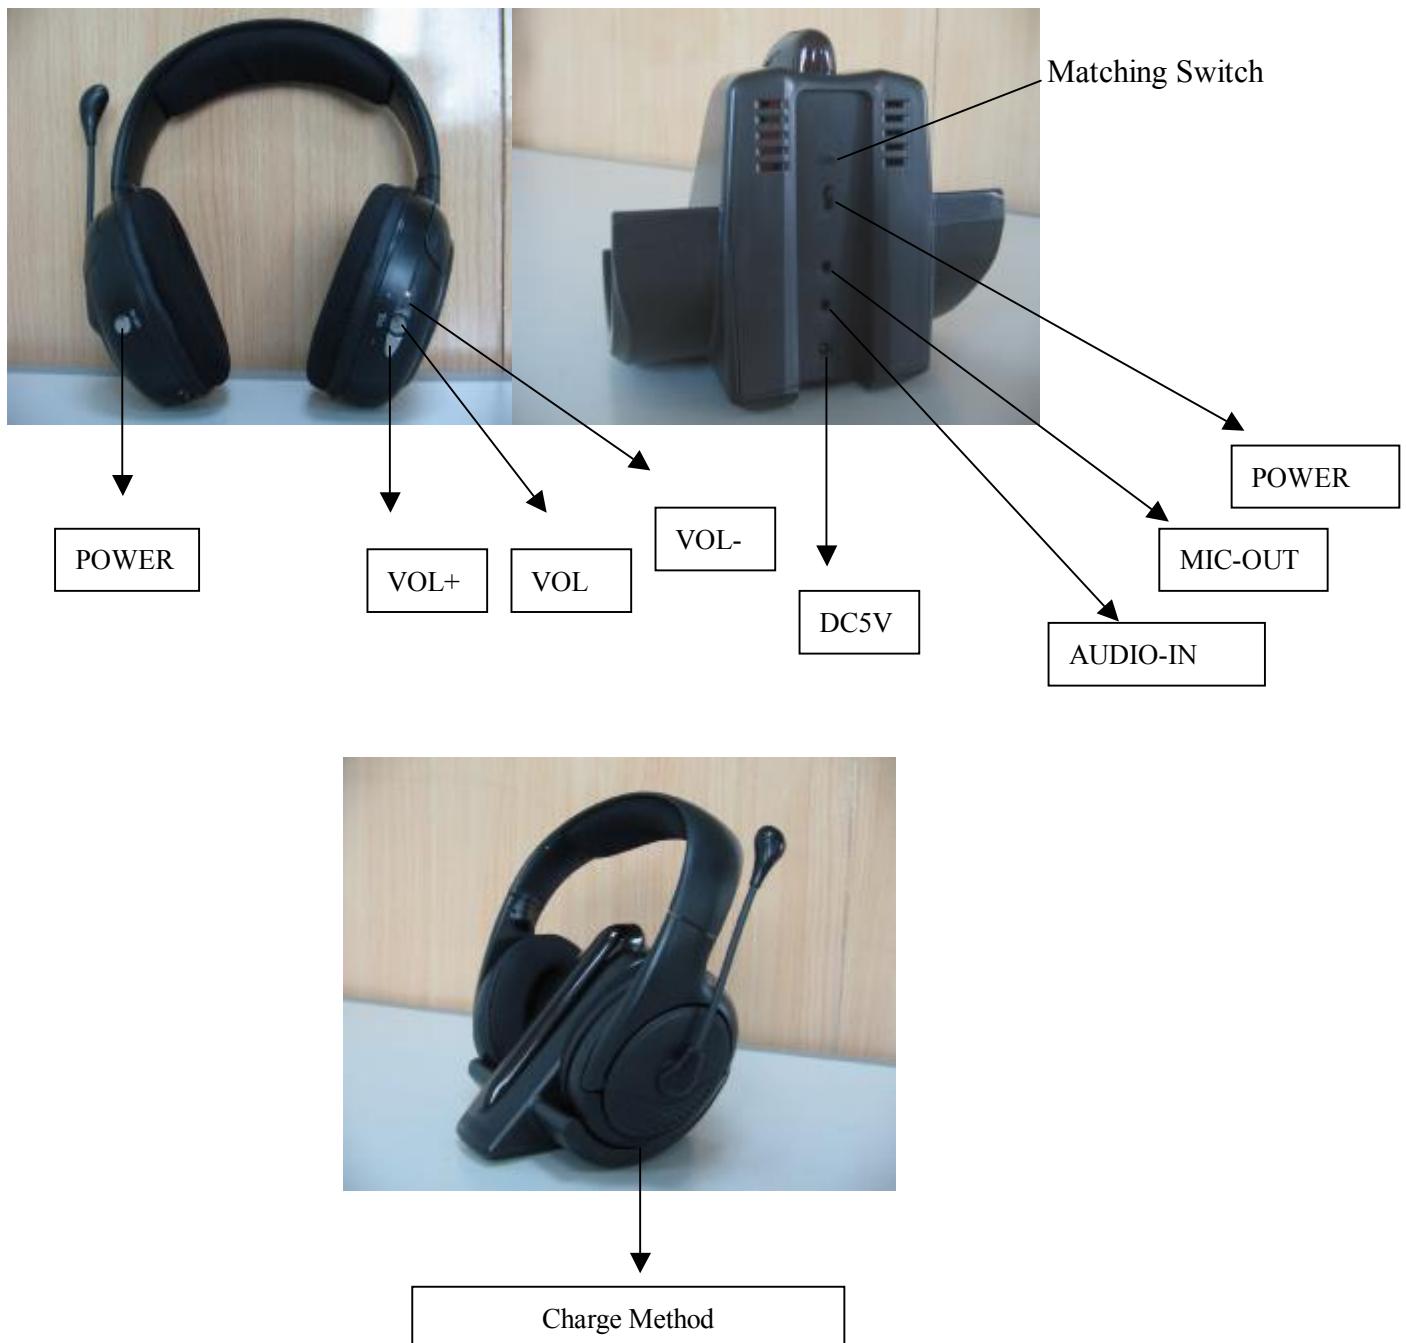

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.