

210mm

105mm

80mm

320mm

Tenda

Quick Installation Guide
Wireless N300 Universal Range Extender
A9

Package contents

- Wireless extender x 1
- GPL x 1
- Quick installation guide x 1

This quick installation guide instructs how to configure and install the device. For product or function details, please go to www.tendacn.com to download the user guide.

Option 1:
Extend your WiFi network using web UI

① Power on the extender
Plug the extender into a power outlet near the router/modem in the same room. Wait until the \diamond LED indicator blinks red.

② Extend your WiFi network
Prerequisites:
- For smart phone/Pad (Recommended): Disable its **Mobile Data** (if any) function.
- For desktop computer: An installed wireless adapter is required.
1. Connect your WiFi-enabled device to the extender's default SSID named **Tenda_EXT**. By default, it has no password.

③ Relocate the extender
To get better connection, follow the on-screen instructions or steps below to relocate your extender.
1. Plug the extender into an outlet halfway between the router/modem and the WiFi dead zone.
The location you choose must be within the range of your existing WiFi network.
2. Wait until the \diamond LED indicator lights solid green. If not, relocate the extender closer to your router/modem.

④ Done.
To connect your WiFi-enabled devices to the extender, use the following information:
Extender SSID: **Tenda123**
Extender password: Your existing WiFi network password.

⑤ Tap Done.
Wait until the **Extended successfully** page appears.

LED indicator description

	Power/Signal LED indicator
Red	Solid on: The extender is starting. Blinking: - The extender completes startup. - Extending your existing WiFi network. - Fails to extend to your existing WiFi network.
Green	Extended successfully, and the connection quality is good.
Orange	Extended successfully, but the extender is a little far away from your router/modem. Relocate it closer to the router/modem.
Off	The extender is not powered on.

Buttons description

	WPS button An alternative method used to extend or re-extend your existing WiFi network. See Option 2 for detailed instructions.
	RST Reset button Hold down this button using a paper clip. Release it when the \diamond LED indicator lights red.

Option 2:
Extend your WiFi network using WPS button

You can use **Option 2** if your router/modem has a WPS button, which may be indicated by or . Otherwise, use **Option 1**.

① Power on the extender
Plug the extender into a power outlet near the router/modem in the same room. Wait until the \diamond LED indicator blinks red.

② Extend your WiFi network
1. Press the WPS button on the router/modem. Within 2 minutes, press the WPS button on the extender.
2. Wait until the \diamond LED indicator on the extender lights solid green or orange. If not, use **Option 1**.

③ Relocate the extender
1. Plug the extender into an outlet halfway between the router/modem and the WiFi dead zone.
The location you choose must be within the range of your existing WiFi network.
2. Wait until the \diamond LED indicator lights solid green. If not, relocate the extender closer to your router/modem.

FAQ

Q1. I cannot log in to the web UI of the extender. What should I do?
A1. Try the following solutions:
Before extending:
(1) If a mobile WiFi-enabled device is used:
Ensure that it has connected to the extender's WiFi network named **Tenda_EXT**, and the **Mobile Data** (if any) function is disabled.
(2) If a laptop, or a desktop computer installed with a wireless adapter is used:
- Ensure that it has connected to the extender's WiFi network named **Tenda_EXT**, and its wireless network connection has been set to **Obtain an IP address automatically**.
- Ensure that you enter re.tenda.cn or **192.168.0.254** in the **address bar** (not searching bar).
(3) If the problem persists, reset the extender, and try extending again.

Q2. How to reset the extender?
A2. With your extender powered on, press the **RST** button at the bottom of the extender using a paper clip. Release it when the \diamond LED indicator lights red. The extender is restored to the factory settings.

Q3. How to set up a login password for management of my extender?
A3. Connect your WiFi-enabled device to the extender's WiFi network. Log in to its web UI and perform as follows:
- For smart phone/Pad:
Tap on the homepage, then follow the on-screen instructions for setup.
- For laptop, or a desktop computer installed with a wireless adapter:
Navigate to **Administration**, and follow the on-screen instructions for setup.

Q4. The extender cannot find the WiFi network of my router/modem. What should I do?
A4. Try the following solutions:
(1) Ensure that the WiFi bar of your router/modem is enabled and can be detected by your WiFi-enabled device.
(2) Change the channel of your router/modem, and try again.
(3) Change the encryption type of the router/modem to WPA2-PSK or WPA2-5GHz, and try again.

CE

CE Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Declaration of Conformity
Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type A9 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
<http://www.tendacn.com/en/service/download-ca101.html>

Operating Frequency: 2.4 GHz/EU/2412-2472MHz (CH1-CH13)
ERP Power (Max): 2.4 GHz: 19.95dBm Software Version: V02.03.125

REDUCTION EXPOSURE STATEMENT
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.
This equipment should be installed and operated with minimum distance 20cm between the device and your body.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Technical Support
Shenzhen Tenda Technology Co., Ltd.
6-9 Floor, Tower E3, NO.1001, Zhongshanyuan Road, Nanshan District, Shenzhen, China. 518052
USA hotline: 1-800-570-5892
Toll Free: 7 x 24 hours
Canada hotline: 1-888-998-8969
Toll Free: Mon - Fri 9 am - 6 pm PST
Hong Kong hotline: 00852-81931908
Global hotline: +86 755-2765 7180 (China Time Zone)
Webster: www.tenda.com
E-mail: support@tenda.com.cn

Copyright
© 2021 Shenzhen Tenda Technology Co., Ltd. All rights reserved.
Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Specifications are subject to change without notice.

RECYCLING
This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.
User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

