


- Wireless router * 1
- Power adapter * 1
- Ethernet cable * 1
- Quick installation guide * 1

Method 1: Connect your WiFi-enabled device (such as a smart phone) to the router's WiFi network using the SSID labeled on the bottom of the router. There is no WiFi password by default.

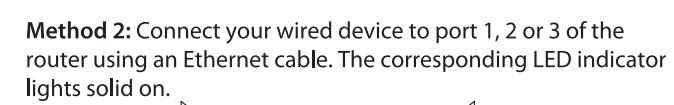

1. Use the included power adapter to connect the router to a power source.
2. Connect the WAN port of the router to a LAN port of your modem or the Ethernet jack using an Ethernet cable. The WAN LED indicator lights on.

1. Start a web browser on a device that has connected to the router, and visit **tendawifi.com**.



WiFi-enabled devices: Connect your WiFi-enabled devices to the WiFi network of the router using the WiFi name and WiFi password you set.

Wired devices: Your wired devices connected to the router can access the internet directly now.

Jack/Port/Button	Description
POWER	Power jack. Used to connect to the included power adapter.
WAN	Used to connect this router to the internet.
RESET	Used to reset the router. When the SYS LED indicator blinks, hold the button down for about 8 seconds, and release it when all the LED indicators blink once.
1/2/3	They are LAN ports used to connect to wired devices such as computers or switches.

Q1: Can't connect to the web UI of the router after entering **tendwifi.com**, what should I do?

A1: Try the following solutions in order:

- 1. Ensure that **tendwifi.com** is entered correctly in the address bar of the browser.
- 2. If you are using a mobile phone, please try to access the router by an Ethernet cable.
- 3. If you use a WiFi-enabled device to log in to the web UI of the router, ensure that it is connected to the router's SSID, and the mobile data (if any) is turned off.
- 4. If you use a computer to log in to the web UI of the router, ensure that it is connected to the router's LAN port properly by an Ethernet cable. If it is not, it is **Set an IP address automatically and Obtain DNS server automatically**.
- 5. Refresh the browser.
- 6. Replace the web browser.
- 7. Reset the router.

Q2: **Connect the Internet after the configuration, what should I do?**

A2: Try the following methods:

- 1. If you use a computer to connect the router, connect properly, and the WAN LED indicator is solid or on blinking.
- 2. Log in to the web UI of the router, and navigate to the **Internet Settings** page. Follow the on-screen instructions to complete the configuration.
- 3. If you use wireless devices to connect the Internet:
 - Check if your devices can access the Internet.
 - If you use a mobile phone, check if the mobile data is **On**, **2G**, or **3G properly**.
 - Check if your computer is set to **Obtain an IP address automatically and Obtain DNS server address automatically**.
- 4. If you use a WiFi-enabled device to connect the router:
 - Check if your WiFi-enabled devices are connected to the WiFi network.
 - Change your WiFi name and WiFi password to **WIFI Settings**.

Q3: How to change my WiFi name and password?

A3: Log in to the web UI of the router on your wired or WiFi-enabled device, click **Advanced Settings** in the left sidebar, click **WiFi Settings**, and customize your WiFi name and password.

Q4: How to reset the router?

A4: When the **SYS** indicator lights on or blinks, hold down the **RESET** button for about 8 seconds. Release it when all the LED indicators blink once.

