


Important Information Required By the FCC

The Manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

248x72mm

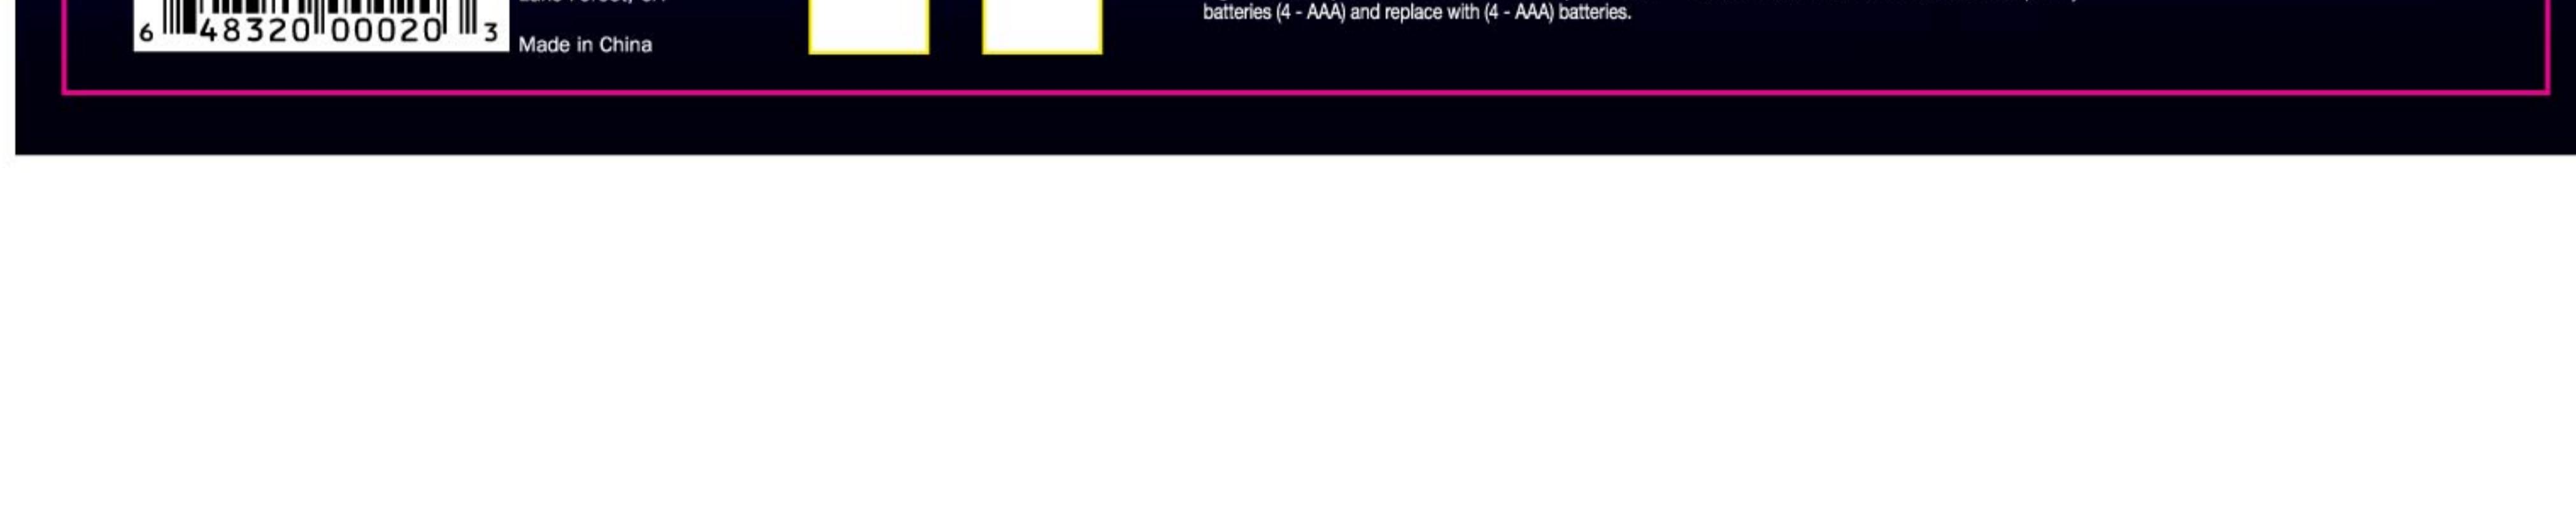

*If Purchasing more than 1 Light for the same household or area, you must select different frequencies.

THIS UNIT IS FREQUENCY:

A

B

Mount Light and Switch with double back adhesive tape or screws (included).
Switch can be mounted up to 30 feet from light.

TO CHANGE BATTERY:

Switch: Remove plate from back of switch, dispose of old battery (23A/12V) and replace with (23A/12V) battery.

Light: Remove plate from back of switch, dispose of old batteries (4 - AAA) and replace with (4 - AAA) batteries.

• Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (nickel hydride).

• Do not mix old and new batteries.

• Do not use batteries that are damaged.

• The supply terminals are not to be short-circuited.

• Only batteries of the same or equivalent type as recommended are to be used.

• Batteries are to be inserted with the correct polarity.

• Keep batteries out of reach from children and pets.

• Do not dispose of batteries in fire, batteries may explode or leak.

• Used batteries and products should not disposed of with household trash.

• Do not attempt to recharge non rechargeable batteries.

218x151mm

