

# Clarion

**Owner's Manual**

---

## **NX807**

---

**DVD MULTIMEDIA STATION WITH BUILT-IN NAVIGATION &  
7" TOUCH PANEL CONTROL**

## CLARION PRODUCT REGISTRATION INFORMATION

For USA and Canada only

[www.clarion.com](http://www.clarion.com)

Dear Customer:

Congratulations on your purchase of a Clarion mobile electronic product. We are confident that you'll enjoy your Clarion experience.

There are many benefits to registering your product. We invite you to visit our website at [www.clarion.com](http://www.clarion.com) to register your Clarion product.

We have made product registration simple with our easy to use website.

The registration form is short and easy to complete. Once you're registered, we can keep you informed of important product information.

Register at [www.clarion.com](http://www.clarion.com) - it's easy to keep your Clarion product up to date.

## INFORMATIONS DE L'ENREGISTREMENT DE PRODUITS CLARION

Pour les États Unis et le Canada seulement

[www.clarion.com](http://www.clarion.com)

Cher client:

Nous vous remercions d'avoir acheté ce produit électronique mobile Clarion. Nous sommes confiants que vous appréciez votre expérience Clarion.

Il y a beaucoup d'avantage à enregistrer votre produits. Nous vous invitons à visiter notre site Web [www.clarion.com](http://www.clarion.com) pour enregistrer votre produit Clarion.

Nous avons facilité la tache d'enregistrement de produit simple et facile grâce à notre site Web. Le formulaire d'enregistrement est court et facile à compléter. Lorsque vous êtes enregistrer, nous pouvons vous tenir informé des informations important de produits. Enregistrer à [www.clarion.com](http://www.clarion.com) - c'est facile de mettre à jour votre produit Clarion.

## INFORMACIÓN DEL REGISTRO DE PRODUCTO DE CLARION

Para USA y Canada nomas

[www.clarion.com](http://www.clarion.com)

Querido Cliente:

Felicitaciones por su compra de producto electrónico móvil de Clarion. Estamos seguros que usted gozará de su experiencia con el producto de Clarion.

Hay muchas ventajas al registrar su producto. Le invitamos a que visite nuestro sitio en internet [www.clarion.com](http://www.clarion.com) para registrar su producto de Clarion.

Hemos hecho el registro de producto fácil en nuestro sitio. La forma de registro es corta y fácil de completar. Una vez que lo registre, podremos proporcionarle la información de su producto.

Registrese en [www.clarion.com](http://www.clarion.com) - es fácil mantener su producto de Clarion actualizado.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique

à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

**Contents**


---

<b>1. FEATURES</b> .....	<b>4</b>
Expanding Systems .....	4
<b>2. PRECAUTIONS</b> .....	<b>5</b>
<b>3. CAUTIONS ON HANDLING</b> .....	<b>8</b>
Operation Panel .....	8
USB Port .....	8
Cleaning .....	8
Handling Discs.....	9
<b>4. OPERATION PANEL</b> .....	<b>11</b>
Functions of Buttons.....	11
<b>5. REMOTE CONTROL</b> .....	<b>12</b>
Remote Control Functions .....	13
<b>6. MAIN MENU</b> .....	<b>15</b>
<b>7. DVD VIDEO PLAYER OPERATIONS</b> .....	<b>16</b>
Discs .....	16
Change DVD System Settings .....	17
Watching to a Disc.....	17
Showing DVD Player Mode Screen .....	18
Operate the DVD Player Menu.....	18
Showing Video Files Player Mode Screen .....	19
Operate the Video Files Player Menu .....	20
Playable Video Disc Formats .....	21
<b>8. CD PLAYER OPERATIONS</b> .....	<b>22</b>
Listening to a Disc/Ejecting a Disc .....	22
Showing CD Player Mode Screen .....	22
Operate the CD Player Menu.....	22
Listening to Compressed Audio .....	23
Tag Display Function .....	23
Playback MP3/WMA/AAC menu .....	24
<b>9. USB AUDIO OPERATIONS</b> .....	<b>25</b>
Notes on Using USB Memories .....	25
Select USB Audio Mode .....	25
Playing Audio Files in USB Memory .....	26
<b>10. USB VIDEO OPERATIONS</b> .....	<b>27</b>
Notes on Using USB Memory Device.....	27
Select USB Video Mode .....	27
Playing Video Files in USB Memory .....	27
Playable Video Format.....	27
<b>11. iPod® OPERATIONS</b> .....	<b>29</b>
Notes on Using iPod/iPhone® .....	29
iPod Audio Menu Operations.....	29
iPod Audio ID3 Mode Screen .....	29
iPod Audio Playlist Mode Screen .....	30
iPod Audio List Mode Screen .....	30
iPod Audio Bluetooth® Mode .....	30
<b>12. Pandora® OPERATIONS</b> .....	<b>31</b>
Selecting the Pandora Mode .....	31
Pandora Bluetooth Mode.....	32
<b>13. Bluetooth AUDIO PLAYER OPERATIONS</b> .....	<b>33</b>
Selecting the Bluetooth Audio Mode .....	33
Bluetooth Audio Player Settings .....	33
Registering Your Bluetooth Audio Player (Pairing) .....	33
Selecting the Bluetooth Audio Player .....	34
Controlling the Bluetooth Audio Player.....	34
<b>14. Bluetooth TELEPHONE OPERATIONS</b> .....	<b>35</b>


Select the BT Phone Mode .....	35
Bluetooth Telephone Settings .....	35
Registering Your Phone (Pairing) .....	36
Select the Phone .....	36
Get the Phone Book Data .....	36
Telephone Operations .....	36
<b>15. TUNER OPERATIONS .....</b>	<b>38</b>
<b>16. SiriusXM® Satellite Radio OPERATIONS .....</b>	<b>39</b>
Activating Your SiriusXM Subscription .....	39
Selecting a Satellite Radio Mode .....	39
Displaying the SiriusXM Radio ID .....	39
Channel Selection by Up/Down Button .....	40
Channel Selection by Channel Number .....	40
Tuning to Channels from the Channel List .....	40
Tuning to Channels from the Preset Channel List .....	40
Tuning to Channels from the Category List .....	40
Parental Control Lock / Unlock .....	40
Setting the Password .....	40
Replay .....	41
SmartFavorites .....	41
TuneStart™ .....	41
TuneMix™ .....	41
<b>17. HDMI MODE .....</b>	<b>42</b>
Wire Connection of HDMI Mode .....	42
Select HDMI Source .....	43
<b>18. Apple CarPlay™ .....</b>	<b>43</b>
To start Apple CarPlay .....	43
To go to Apple CarPlay screen .....	44
To move to Apple CarPlay screen .....	44
To return to original screen .....	45
<b>19. AUX .....</b>	<b>46</b>
<b>20. CAMERA INPUT OPERATIONS .....</b>	<b>46</b>
<b>21. REAR SOURCE OPERATIONS .....</b>	<b>47</b>
DVD Video in Rear .....	47
DVD Video Rear Source Control Info Mode .....	47
DVD Video Rear Source Control Direct Mode .....	47
AUX Video in Rear .....	48
<b>22. FULL DIGITAL SOUND SYSTEM .....</b>	<b>48</b>
<b>23. SETTING OPERATIONS .....</b>	<b>49</b>
General Setup Menu .....	49
Video Setup Menu .....	50
Audio Setup Menu .....	50
Navigation Setup Menu .....	50
Others Setup Menu .....	51
Set the Anti-Theft Code .....	51
<b>24. TROUBLESHOOTING .....</b>	<b>52</b>
General .....	52
DVD Player .....	52
USB Device .....	53
Bluetooth .....	53
SiriusXM Advisory Messages .....	54
TFT Screen .....	55
<b>25. ERROR DISPLAY .....</b>	<b>56</b>
DVD/CD Player .....	56
<b>26. SPECIFICATIONS .....</b>	<b>57</b>
<b>27. WIRE CONNECTION GUIDE .....</b>	<b>59</b>

# 1. FEATURES

- Apple CarPlay™
- Optical Digital Output
- Latest Map Guarantee

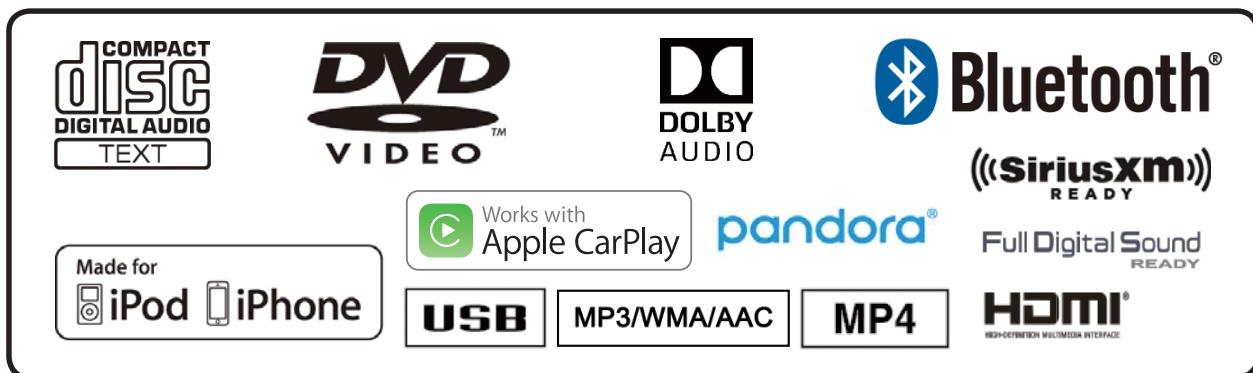

## Expanding Systems

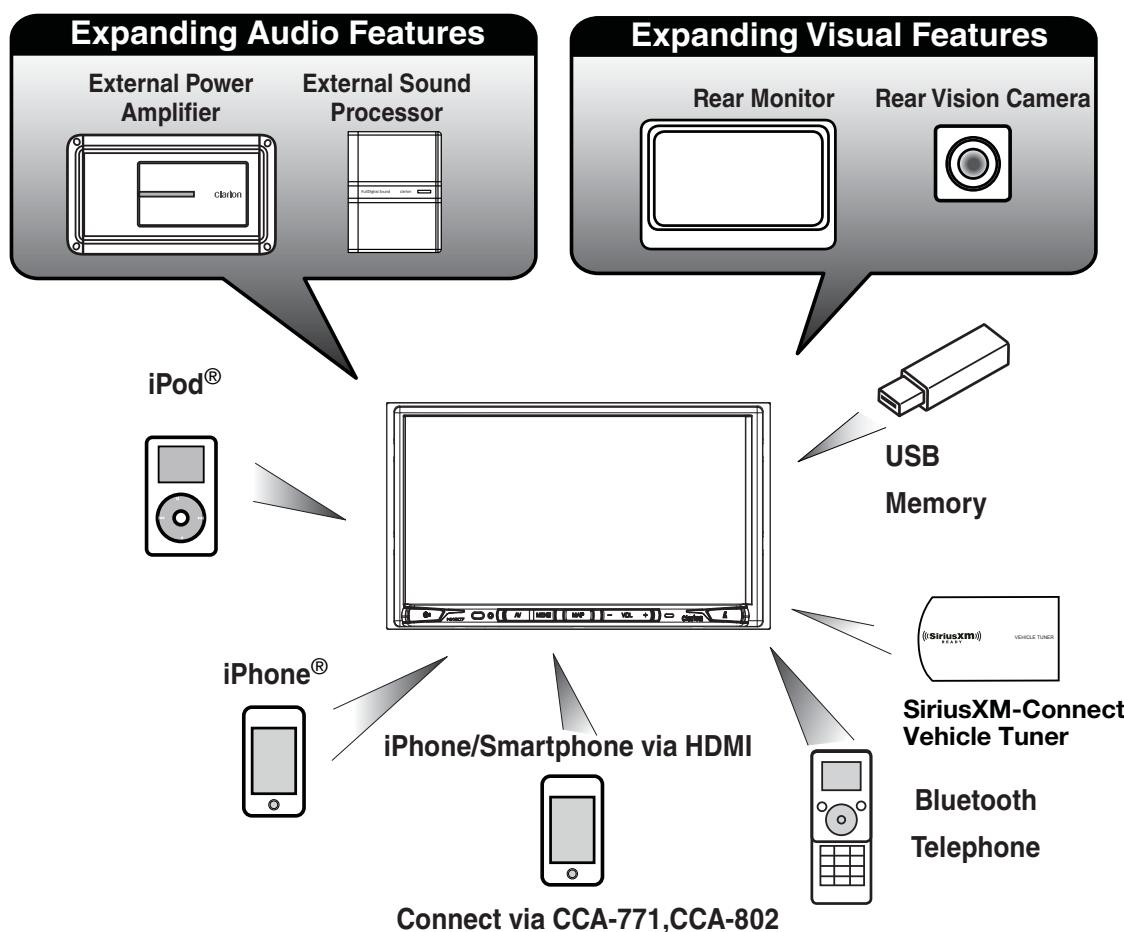

### NOTE:

- The items listed outside of the frames are the commercial products generally sold.
- CCA-771, CCA-802: Sold separately.

## 2. PRECAUTIONS

### WARNING

- For your safety, the driver should not watch any video sources and/or operate the controls while driving. Please note that watching and operating any video sources while driving are prohibited by law in some countries. Also, while driving, keep the volume to a level at which external sounds can be heard.
- Do not disassemble or modify this unit. It may cause an accident, fire, or electric shock.
- Do not use this unit when a trouble exists, such as no screen content appears or no sound is audible. It may cause an accident, fire, or electric shock. For that case, consult your authorized dealer or a nearest Clarion service center.
- In case of a problem, such as any material has been entered in the unit, the unit gets wet, or smoke or strange smells come out of the unit, etc., stop using this unit immediately, and consult your authorized dealer or a nearest Clarion service center. Using it in that condition may cause an accident, fire, or electric shock.
- Use a fuse with the same specification only when replacing the fuse. Using a fuse with a different specification may cause a fire.
- For the installation of this unit or a change in the installation, ask your authorized dealer or a nearest Clarion service center for safety. Professional skills and experiences are required to do so.
- This navigation system should not be used to replace your own judgment. No itinerary suggested by this navigation system should ever override any highway regulations, your own judgment, or a knowledge of safe driving practices. Do not follow the navigation system's suggested itinerary if it would cause you to perform a dangerous or illegal act, place you in a dangerous situation, or take you into an area you consider unsafe.
- The advice provided by the navigation system is to be regarded as a suggestion only. There may be times when the navigation system displays the vehicle's location incorrectly, fails to suggest the shortest route, or fails to direct you to your desired destination. In such instances, rely on your own driving judgment, taking into account the driving conditions at the time.
- Do not use the navigation system to locate emergency services. The database does not contain a complete listing of emergency services such as police stations, fire halls, hospitals and walk-in clinics. Please show discretion and ask for directions in such instances.
- As the driver, you alone are responsible for your driving safety.
- In order to avoid a traffic accident, do not operate the system while driving.
- In order to avoid a traffic accident, operate the system only when the vehicle is stopped at a safe place and the parking brake is on.
- In order to avoid a traffic accident or traffic offense, remember that actual road conditions and traffic regulations take precedence over the information contained on the navigation system.
- The software may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and the sources of information used. Please respect current traffic conditions and regulations at all times while driving.
- Where actual road conditions and highway regulations differ from the information contained on the navigation system, abide by the highway regulations.
- Keep the amount of time spent viewing the screen while driving to a strict minimum.
- The navigation system does not provide, nor represent in any way information on: traffic and highway regulations; technical aspects of the vehicle including weight, height, width, load and speed limits; road conditions including grade, percentage of incline and surface conditions; obstacles such as the height and width of bridges and tunnels; and other current driving or road conditions. Always rely on your own judgment when driving a car, taking into account current driving conditions.

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The portable device is designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA).

These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue.

The highest SAR value reported under this standard during product certification for use when properly worn on the body is 0.626 W/kg.

- Improper connection of speed pulse signal may result in serious damage or injury including electrical shock, and interference with the operation of the vehicle's anti-lock braking system, automatic gearbox and speedometer indication.

- FCC 20cm Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

- IC 20cm Statement

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 20 centimètres entre le radiateur et votre corps.

1. When the inside of the car is very cold and the player is used soon after switching on the heater, moisture may form on the disc (DVD/CD) or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc (DVD/CD), wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.



2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.

3. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

## INFORMATION FOR USERS

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

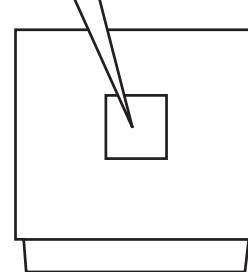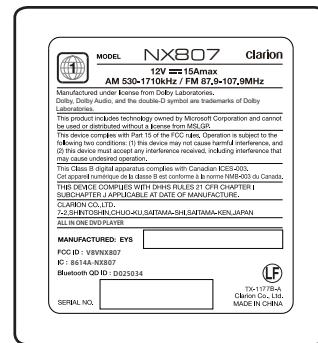

NX807

### 3. CAUTIONS ON HANDLING

#### ***Operation Panel***

For a longer service life, be sure to read the following cautions.

- The operation panel will operate properly in a temperature range of 0° to 60° C.
- Do not allow any liquids on the set from drinks, umbrellas etc. Doing so may damage the internal circuitry.
- Do not disassemble or modify the set in any way. Doing so may result in damage.
- Subjecting the operation panel to shocks may result in breakage, deformation or other damage.
- Do not let cigarettes burn the display.
- If a problem should occur, have the set inspected at your store of purchase.
- The remote control unit may not work if the remote control sensor is exposed to direct sunlight.
- In extremely cold weather, the display movement may slow down and the display may darken, but this is not a malfunction. The display will work normally when the temperature increases.
- Small black and shiny spots inside the liquid crystal panel are normal for LCD products.

#### ***USB Port***

- The USB memory sticks must be recognized as "USB mass storage class" to work properly. Some models may not operate correctly.

**When the memorized data is lost or damaged by any chance, Clarion shall not be liable for any damage.**

When using an USB memory stick, we recommend that you backup your data stored on it before by using a personal computer etc.

- Data files may be broken when using USB memory sticks in the following situation: When disconnecting the USB memory stick or turning the power off during writing or reading data. When affected by static electricity or electric noise. Connect/disconnect the USB memory stick when it is not accessed.
- Connecting with the computer is not supported.
- Connecting with the USB Hub is not supported.

#### ***Cleaning***

##### **• Cleaning the cabinet**

Use a soft, dry cloth and gently wipe off the dirt. For tough dirt, apply some neutral detergent diluted in water to a soft cloth, wipe off the dirt gently, then wipe again with a dry cloth.

Do not use benzene, thinner, car cleaner, etc., as these substances may damage the cabinet or cause the paint to peel. Also, leaving rubber or plastic products in contact with the cabinet

for long periods of time may cause stains.


##### **• Cleaning the liquid crystal panel**

The liquid crystal panel tends to collect dust, so wipe it off occasionally with a soft cloth. The surface is easily scratched, so do not rub it with hard objects.

## Handling Discs

### Handling

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

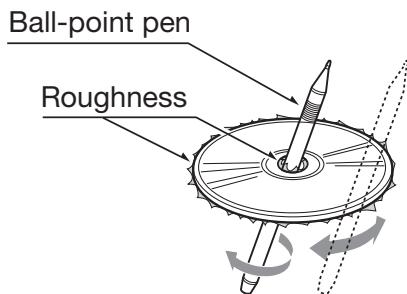

Never stick labels on the surface of the disc or mark the surface with a pencil or pen.

- Never play a disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a disc, you may not be able to get it back out of the DVD player or it may damage the DVD player.
- Do not use discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available disc protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

### Storage

- Do not expose discs to direct sunlight or any heat source.
- Do not expose discs to excess humidity or dust.
- Do not expose discs to direct heat from heaters.

### Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean discs.
- After using special disc cleaner, let the disc dry off well before playing it.

### On Discs

- Never turn off the power and remove the unit from the car with a disc loaded.


#### ▲ CAUTION

**For your safety, the driver should not insert or eject a disc while driving.**

## ⚠ About the registered marks, etc.

- This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.
- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.
- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPhone, iPod and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay and Lightning are trademarks of Apple Inc.
- Android™ is the trademark of Google Inc.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. And any use of such marks by Clarion Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.
- Pandora, the Pandora logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. used with permission.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## 4. OPERATION PANEL

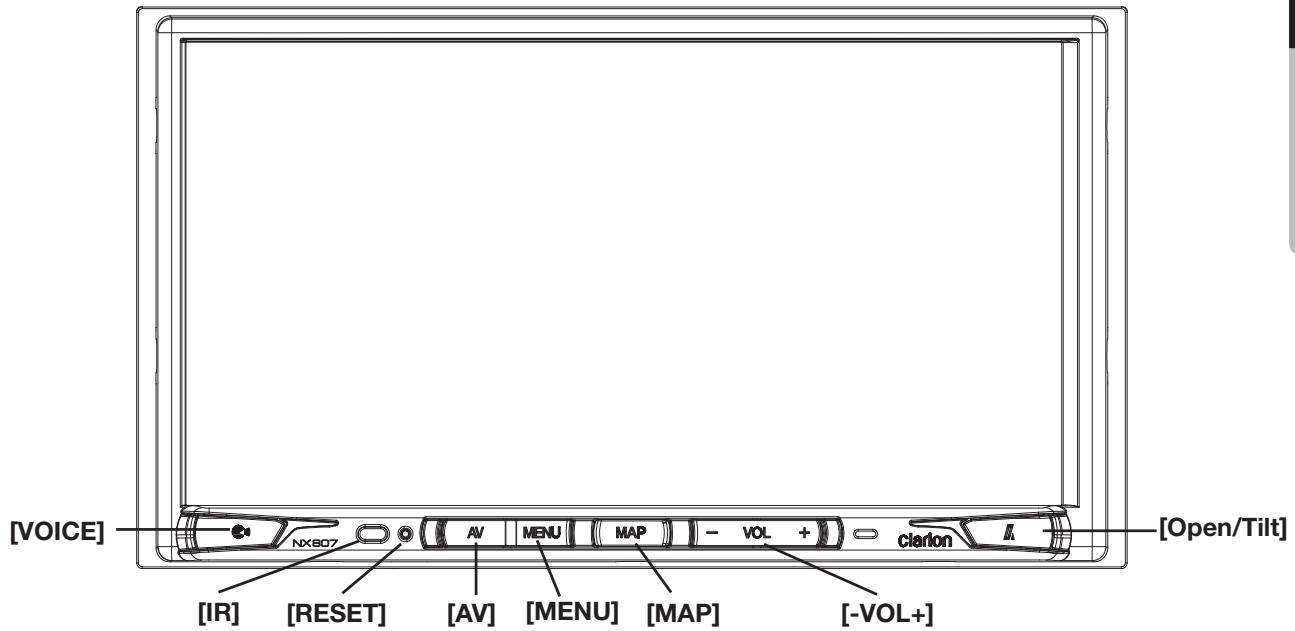

Only navigation map card is available and don't remove it when unit is powered on

### Functions of Buttons

#### [MAP] Button

- Press this button to move to the Native Navigation screen.
- Press and hold this button for 2 seconds to move to Apple CarPlay map.

#### [AV] Button

- Press this button to display the current audio source screen.

#### [MENU] Button

- Press this button to display main menu; press again to return current source.
- Press and hold this button for 2 seconds to turn off the monitor. Press anywhere on the touch screen to turn on the monitor again.

#### [RESET] Button

- Press this button to hardware reset the unit.

**Note:** When the [RESET] button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.

#### [IR] SENSOR

- Receiver for the remote control unit (operating range: 30 degree in all directions).

#### [VOICE] Button

- Press this button until you hear the tone, then you can use Siri® function.

#### [Open/Tilt] Button


- Press this button to open and close the panel.
- Keep pressing this button more than 2 seconds in order to change the tilt angle.

#### [-VOL+] Button

- Press these buttons to increase or decrease the volume level.
- Keep pressing one of these buttons for more than 2 seconds to quickly increase or decrease the volume level.

## 5. REMOTE CONTROL

### RCX005 Remote Control Included

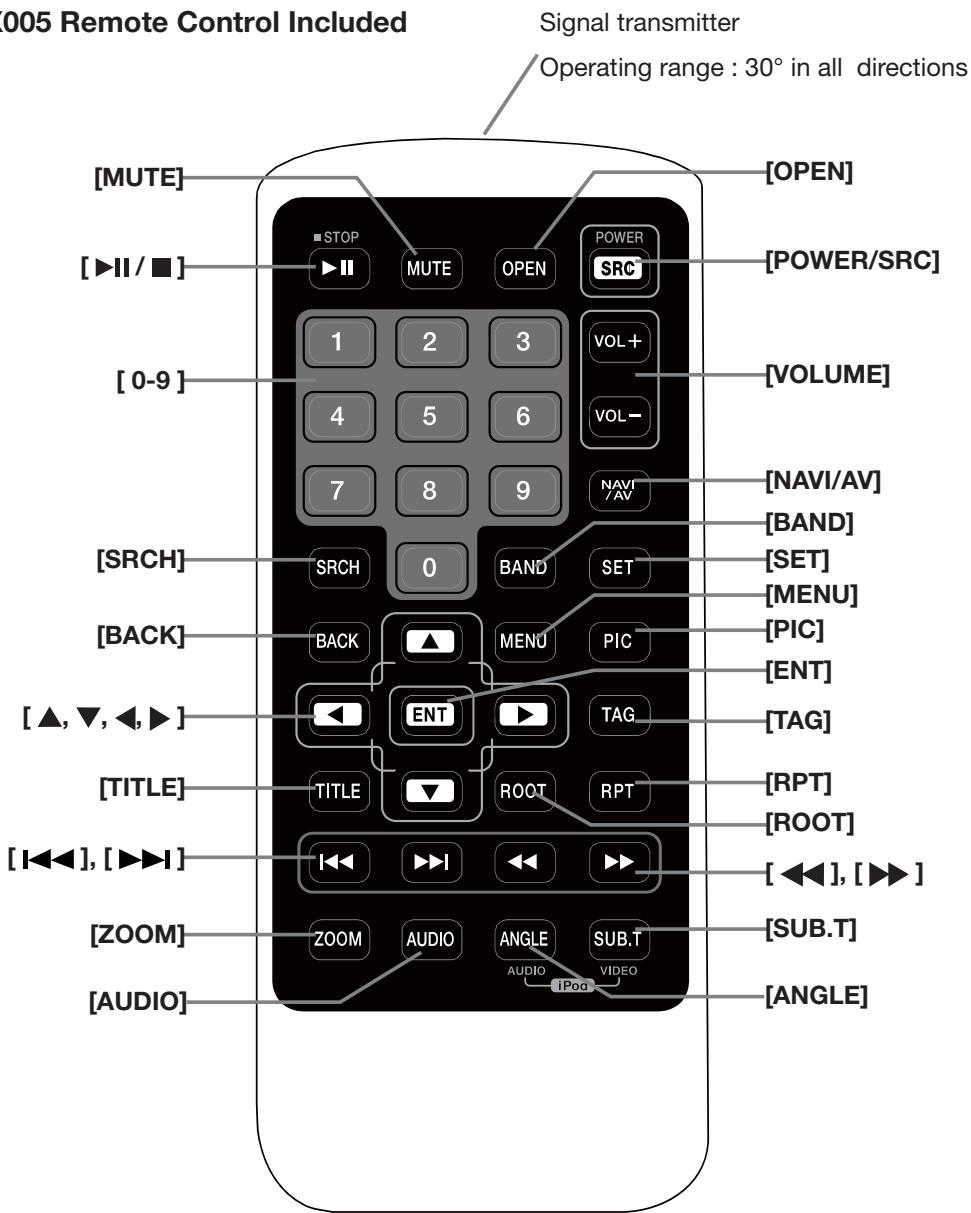

#### Replacing the batteries

1. Press the retention tab and pull out the battery tray and remove the old battery.
2. Insert the new CR2025 battery and slide the battery tray back in the remote control the same direction that you removed it. Please ensure the tray is inserted in the correct direction.

#### CAUTION

- Keep the battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately.
- Batteries (battery pack or batteries installed) must not be exposed to excessive heat such as sunshine, fire or the like.

## ⚠ CAUTION

- Use one CR2025 (3V) lithium battery.
- Remove the battery if the remote control is not used for a month or longer.
- There is a danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic objects.
- If the battery leaks, wipe the remote control completely clean and install a new battery.

- When disposing of used batteries, comply with governmental regulations or environmental public institutions' rules that apply in your country/area.

### ►Important

- Do not store the remote control in high temperatures or direct sunlight.
- The remote control may not function properly in direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal.

## Remote Control Functions

You can use the remote control to operate the NX807.

### Note:

- The wireless remote control operation may not be optimal in direct sunlight.

### [▶II/■] Button

- Press this button to play or pause video and audio media.
- Press this button more than 1 second to stop video and audio media.
- Play/Pause (Replay/TuneMix) in SiriusXM mode.

### [MUTE] Button

- Mute or unmute the speaker.
- The symbol [  ] on the upper right area of the screen indicates the speakers are muted..

### [POWER/SRC] Button

- Press this button to move the focus to the next available source item on the main menu.

### [0 - 9] Buttons

- Use in the key pad screen to select the radio.
- Use to select the track in the track list screen.
- Press to enter DVD video chapters/titles in the key pad screen.

### [VOLUME] Buttons

- Increase and decrease volume level.

### [NAVI/AV] Button

- Press this button to switch between current source and current position on the navigation map.

### • [SRCH] Button

- Press this button to open the chapter or title search window while playing DVD.

### [BAND] Button

- Cycles to the next band.

### [SET] Button

- Press this button to open the audio setting menu in any mode.

### [BACK] Button

- When in the main menu, press this button to return to the last screen.

### [▲], [▼], [◀], [▶] Buttons

- Press these buttons for cursor movement in the main menu or settings mode..
- From the main menu, you can select your desired source or change your settings.

### [ENT] Button

- Press to fix the entered data in the key pad screen or select the item the cursor is on.

### [MENU] Button

- Press this button to enter the main menu or return to the current resource.

### [PIC] Button

- No function.

### [TAG] Button

- No function.

### [TITLE] Button

- Press to go to the title menu on the DVD.

### [ROOT] Button

- Press to go to the root menu on the DVD.

### [RPT] Button

- Press to perform chapter repeat/title repeat/repeat off while playing DVD mode.
- Press to perform Repeat Track/Repeat All while playing CD.
- Press to perform Repeat Track/Repeat Folder/Repeat All while playing MP3/WMA, or video files on disc.
- Press to perform Repeat Track/Repeat Folder/Repeat All while playing MP3/WMA, or video files in USB memory.

**[◀◀], [▶▶] Buttons**

- Press to select the next preset lower or higher number in Tuner mode.
- Press to select the next lower or higher chapter number in DVD video mode.
- Press to select the next lower or higher track in CD, USB Video, USB Audio mode.
- Press for control of background source in Navigation mode.
- Preset Up/Down, Track Up/Down (TuneMix) in SiriusXM mode.

**[◀◀], [▶▶] Buttons**

- Press to manually select the next lower or higher station in Tuner modes.
- Press to perform fast-backward or fast-forward searching. Press again to change the speed to 2x, 4x, 8x or 16x.
- Press for control of background source in Navigation mode.
- Channel Up/Down in SiriusXM mode.

**[ZOOM] Button**

- Press to turn on and zoom in while playing DVD. You can zoom in up to 3x. (Not all DVD discs support this function).

**[AUDIO] Button**

- Press to switch the audio track of the disc while

playing a DVD.

**[SUB-T] Button**

- Press to switch next available subtitle while playing DVD.
- Press to display the video menu in iPod mode.

**[ANGLE] Button**

- Press to switch the angle option of the disc while playing a DVD. (Not all DVD discs support this function).
- Press to display the audio menu in iPod mode.

**[OPEN] Button**

- Press to open/close the front panel.

## 6. MAIN MENU



- 1 - Tuner---Touch the button to display the Tuner mode.
- 2 - HDMI---Touch the button to display the HDMI mode.
- 3 - Apple CarPlay---Touch the button to display the Apple CarPlay mode.
- 4 - Navigation---Touch the button to display the Navigation mode.
- 5 - TEL--- Touch the button to display the Telephone mode.
- 6 - iPod Audio---Touch the button to display the iPod Audio mode.
- 7 - USB Audio---Touch the button to display the USB Audio mode.
- 8 - Disc Audio---Touch the button to display the Disc Audio mode.
- 9 - SiriusXM ---Touch the button to display the SiriusXM mode.
- 10 - USB Video---Touch the button to display the USB Video mode.
- 11 - Disc Video---Touch the button to display the Disc Video mode.
- 12 - Pandora---Touch the button to display the Pandora mode.
- 13 - BT Audio--- Touch the button to display the Bluetooth Audio mode.
- 14 - AUX ---Touch the button to display the AUX mode.
- 15 - Camera---Touch the button to display the Camera mode.
- 16 - Setting button---Touch the button to display the Setting menu.
- 17 - Monitor off --- Touch the button to turn off the monitor.
- 18 - Day/Night --- Touch the button to change the dimmer.
- 19 - Audio off---Touch the button to make audio source voice off.
- 20 - Rear---Touch the button to display the Rear mode.

### Scrolling the menu

Swiping right or left will switch to the next or previous pages of the main menu.

### Customizing the menu button locations


1. Touch and hold any of the mode buttons on the main menu for more than 2 seconds.
2. When it begins to "float", drag the floating button to a new location.
3. Lifting up your finger will drop the button in the new location.

# 7. DVD VIDEO PLAYER OPERATIONS

## Discs

### Playable discs

This DVD video player can play the following discs.

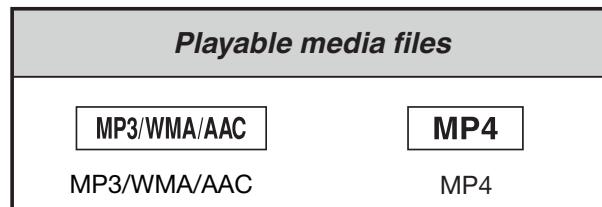

### About CD Extra disc

A CD Extra disc is a disc in which a total of two sessions have been recorded. The first session is Audio session and the second session is Data session.

Your personally-created CDs with more than second data sessions recorded cannot be played on this DVD video player.

#### Note:

- When you play a CD Extra disc, only the first session will be recognized.

### Discs that cannot be played back

This DVD video player cannot play back DVD-Audio, DVD-RAM, Photo CDs, etc.

#### Note:

- It may also not be possible to play back CDs recorded on a CD-R unit and CD-RW unit.  
(Cause: disc characteristics, cracks, dust/dirt, dust/dirt on player's lens, etc.)
- If a CD-R or CD-RW disc that has not been finalized is played, it will take a long time to start playing. Also, it may not be possible to play depending on its recording conditions.
- You cannot play SuperAudio CD.

The CD player is not supported even if it is a hybrid disc.

### About MP3/WMA/AAC playback

This unit can play back CD-R/CD-RW, DVD-R/RW and DVD+R/RW discs on which MP3/WMA/AAC music data have been recorded.

For a detailed information, see the section entitled "Listening to compressed audio".

### Note on region numbers

The DVD video system assigns a region number to DVD video players and DVD discs by sales area. DVD video players sold in U.S.A and Canada can play back DVD discs with the region number "ALL", "1" or any combination of numbers that also incorporate a "1".

The DVD video region number is marked on the disc jacket as shown below.



## Change DVD System Settings

### Note:

If the setup operation is performed in the middle of DVD video play, the disc will restart from the beginning.

### Selecting DVD Setup Menu

1. Touch the **[Settings]** button on the Main Menu to access the Video setup menu.
2. Touch **[Video]** button. The video menu is displayed.



### Setting up the Screen Size

Touch the **[DVD Wide Screen Mode]** button to turn on or turn off the DVD wide screen mode.

The factory default setting is "off".

Note: Not all DVD discs support this function.

### Setting up the password for parental level control

The factory default pass code is "0000".

1. In Main Menu Touch **[Settings]** button. Touch **[Others]** button on the display. Touch the **[Set Password]** ---- and a numerical key pad will appear.



Input a new password and confirm. The password is set.

### Note:

When a disc with view restrictions is inserted, you will be prompted to input this password. The disc will not be viewable until the correct password is entered.

### Set rating for parental level control

1. Select Others screen while in Setting mode. Touch

**[Parental Control]** button. Touch the desired rating for level control. Use this table to set the parental level.

Kid Safe	Kid Safe
G	General Audiences
PG	Parental Guidance Suggested
PG-13	Parents Strongly Cautioned
PG-R	Parental Guidance Restricted
R	Restricted
NC-17	No One 17 And Under Admitted
Adult	Only Adult

- The contents that the parental level restricts vary with the country code.

**Note:** The rating can be selected only under the password unlocked status, and the limits can be set only under the password locked status.

### Watching to a Disc

1. To load a disc:

Insert the disc into the center of the insertion slot the label side facing up.

#### ⚠ CAUTION

For your safety, the driver should not insert or eject a disc while driving.

### Note:

- Never insert foreign objects into the disc insertion slot.
- If the disc is not inserted easily, there may be another disc in the mechanism or the unit may require service.
- 8cm (single play) discs cannot be used.

2. Disc starts playing automatically.

#### ⚠ WARNING

Some videos may be recorded at higher than desired volume levels. Increase the volume gradually from the minimal setting after the video has started.

### Ejecting a disc

1. To eject the disc, open the front panel by pressing the Open button, then press the eject (image) button

The play mode then switches to the Tuner mode.

If the disc is left in the ejected position for 10 seconds, the disc is automatically reloaded.

### Note:

If you force a disc in before auto reloading, it may damage a disc.

## Showing DVD Player Mode Screen

After the disc is loaded, the play mode is automatically engaged.

Touch any place on the screen to display the DVD Video menu, touch the screen again to return to the playback screen. The display will return to the playback screen if you do not touch the screen for 10 seconds.



- 1 - Option button
- 2 - Show Cursor keys button
- 3 - Previous Chapter/Fast Backward button
- 4 - Play/Pause button
- 5 - Next Chapter/Fast Forward button
- 6 - Elapsed playing time
- 7 - Seek bar
- 8 - Total time
- 9 - Menu List button
- 10 - System time

- 11 - Bluetooth status indicator
- 12 - DVD playback information
- 13 - Shortcut button
- 14 - Repeat Switching button
- 15 - Audio Channel switching button
- 16 - Subtitle switching button
- 17 - Angle button
- 18 - Direct chapter or title searching button
- 19 - Information button

## Operate the DVD Player Menu

You can select the button items displayed in the DVD menu by directly touching them.

### Play/Pause Playback

1. Touch [ ] button to pause during playback.
2. Touch [ ] button again to resume playback.

### Skip (Search) a Chapter

1. Touch [ ] or [ ] button during playback.

Chapters are skipped down or up from current locations, as many times as the button is touched, and then playback starts.

### Skip use seek bar

Touch the spherical [ ] on seek bar and drag it to any position where you want to start playback.

### Fast Forward/Fast Backward

1. Touch [ ] or [ ] button and hold 2 seconds to start fast backward or fast forward during playback. The playback speed starts at 2x, then will increase to 4x, 8x, and 16x. Release the button will continue playing with normal speed.

### Note:

- No audio is reproduced during fast forward and fast backward operation.
- The fast forward and fast backward speed may differ depending on the disc.

### Search function

You can locate the beginning of a scene using the chapter numbers or title numbers recorded on the DVD Video disc.

1. Showing the DVD Video menu, touch [ ] button. The Key Pad screen appears with the chapter/Title number input mode.

Touching [ ] button turns the Key Pad to the chapter number input mode.

Touching [ ] button turns the Key Pad to the title number input mode.

- **Title**  
A large segment to divide the data area of the disc.
- **Chapter**  
A small segment to divide the data area of the disc.

- Input the number of the title/chapter that you want to play with the [0] to [9] key.
- Touch the [OK] button.



Playback starts from the scene of the input title number or chapter number.

#### NOTE:

\*If the input title/chapter number does not exist or searching with a title/chapter number is not allowed, the screen image will not change.

- Touch [Back] button to close the key pad.

### Repeat Playback

This operation plays back chapters recorded on the DVD-Video repeatedly.

- Showing the DVD Video menu, touch [Repeat] button.
- Touch [Repeat] button once for Repeat Chapter, again for Repeat Title.
- Touch [Repeat] button again to turn off the repeat playback.

### Using the Title Menu

On DVD discs containing two or more titles, you can select from the title menu for playback.



- Showing the DVD Video menu, touch [Title] button during playback.
- Depending on the disc, the title menu may not be called.
- Touch the title menu screen, then touch the Show Cursor keys button.
- Select the items in the title menu screen by directional buttons.
- Depending on the disc, items may not be selected with the directional buttons.
- Touch [OK] button to fix on the selected item.

- Touch [Back] button.

### Switching Audio

On discs in which two or more audios or audio languages have been recorded, you can switch among the audio languages during playback.

- Showing the DVD Video menu, touch [Audio] button during playback.

- Each time you touch the button, you can switch among audio languages.
- It may take time to switch among audio languages. Depending on the disc, up to 8 kinds of audio languages may be recorded. For details, see the mark of the disc:  
( Indicates that 8 audio languages have been recorded).

When the power is turned on and when the disc is changed to a new one, the language set as the factory default is selected. If that language has not been recorded on disc the language is specified on the disc.

Depending on the disc, switching may be completely impossible or impossible on some scenes.

### Switching Subtitles

On DVD discs in which two or more subtitle languages have been recorded, you can switch among the subtitle languages during playback.

- Showing the DVD Video menu, touch [Subtitle] button to select a subtitle during playback. Each time you touch the button, you can switch among subtitles.

- It may take time to switch among subtitles. Depending on the disc, up to 32 kinds of subtitles may be recorded. For details, see the mark of the disc: ( Indicates that 8 kinds of subtitles have been recorded).

Depending on the disc, switching may be completely impossible or impossible on some scenes.

- To turn off subtitles, repeat touching [Subtitle] button until subtitles are turned off.

### Displaying the playback status

Touch [Info] button on DVD Player mode screen, Playback status is displayed on screen.


### Play video files

This system can play video files stored on disc.

### Showing Video Files Player Mode Screen

- After a disc with video files is loaded, touch [Disc Video] button on MAIN MENU to show the video files player mode screen.
- Touch the screen of the playing video file to display Video files player menu, touch the screen again to return the playback screen. The display will return to

the playback screen if you do not touch the screen for 10 seconds.

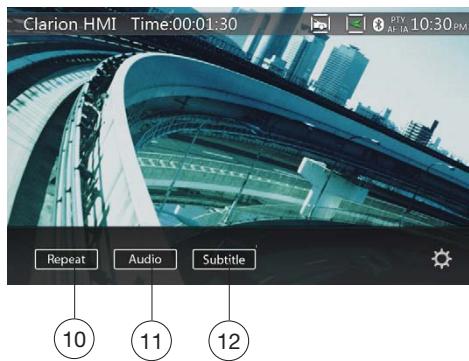

- 1 - Option button
- 2 - Previous Track/Fast Backward button
- 3 - Play/Pause button
- 4 - Next Track/Fast Forward button
- 5 - Elapsed playing time/Seek bar
- 6 - List Mode button
- 7 - System time
- 8 - Bluetooth status indicator
- 9 - Playback information
- 10 - Repeat button
- 11 - Audio button
- 12 - Subtitle button

## Operate the Video Files Player Menu

You can select the button items displayed in the Video files player menu by directly touching it.

### Play/Pause Playback

1. Touch [ ] button to pause during playback.
2. Touch [ ] button again to resume playback.

### Switch to Previous/Next File

1. Touch [ ] or [ ] button during playback to play previous/next file

### Skip using seek bar

Touch the ball on seek bar and drag it to any position where you want to start playback.

### Fast Forward/Fast Backward

1. Touch [ ] or [ ] button and hold 2 seconds to start fast backward or fast forward during playback. The playback speed starts at 2x, then will increase to 4x, 8x, and 16x. Release the button will continue playback with normal speed.

#### Note:

\*No audio is reproduced during fast forward and fast backward operation.

\*The fast forward and fast backward speed may differ depending on the disc.

### Repeat Playback

This operation plays back video files recorded on the disc repeatedly.

Repeat All is the factory default repeat setting.

1. Showing the video files player menu, touch [ Repeat ] button.
2. Touch [ Repeat ] button once for Repeat Track, again for Repeat Folder.
3. Touch [ Repeat ] button again for Repeat All.

### Switching Audio

Some video files will have two or more audio channels; you can switch among the audio channels during playback.

1. Touch [ Audio ] button during playback.
- Each time you touch the button, you can switch among audio languages.
- It may take time to switch among audio languages. Depending on the disc, switching may be impossible.

### Switching Subtitles

Some video files will have two or more subtitles have been recorded; you can switch among these subtitles during playback.

1. Touch the [ Subtitle ] button to select a subtitle during playback.
- Each time you touch the button, you can switch among subtitles.
- It may take time to switch among subtitles. Depending on the disc, switching may be impossible.

### Video Files List

Showing the Video files player menu; touch the [ ] button to display video files list screen.

Video files list operations is almost the same as the Disc Audio player mode. Please refer to CD Player Operations.

## Playable Video Disc Formats

---

This system can play video files stored on disc.

\*.avi files

- format: MPEG4 Visual Simple @L1
- Picture size: 720 x 480
- Audio format: MP3
- Audio sampling frequency: 32/44.1/48 KHz

\*.mp4 files:

- format: MPEG4 Visual Simple @L1
- Picture size: 720 x 405
- Audio format: AAC
- Audio sampling frequency: 32/44.1/48 KHz

\*.mpg files

- format: MPEG2
- Picture size: 720 x 480
- Audio format: MP3
- Audio sampling frequency: 32/44.1/48 KHz


# 8. CD PLAYER OPERATIONS

## Listening to a Disc/Ejecting a Disc

Please refer to Disc Video Player Operations -watching to a disc and Ejecting a disc.

## Showing CD Player Mode Screen

1. After the disc is loaded, the play mode is automatically engaged.
2. If the disc have been loaded , you can touch the **[Disc Audio]** button on main menu to display the CD player mode screen.

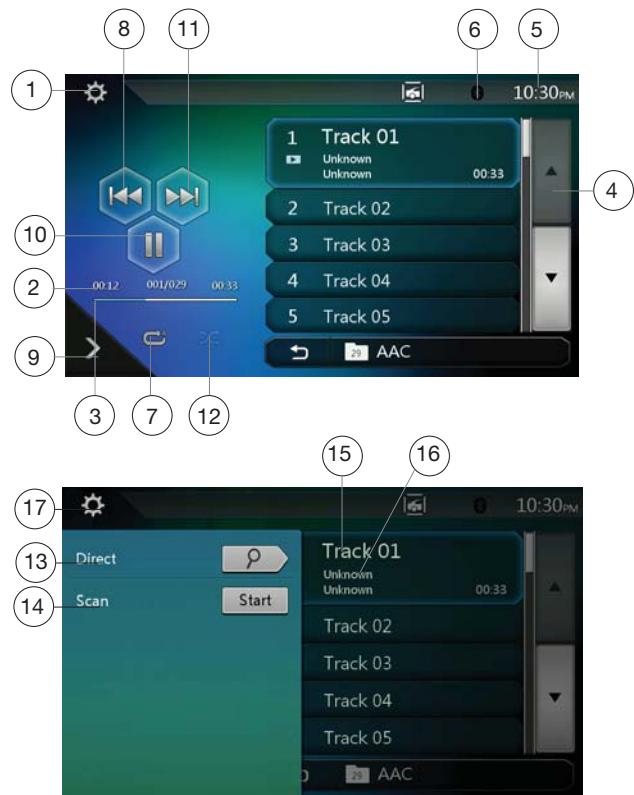

- 1 - Option button
- 2 - Elapsed playing time indicator
- 3 - Progress bar
- 4 - Page Turning button
- 5 - System time
- 6 - Bluetooth status indicator
- 7 - Repeat button
- 8 - Previous Track/Fast Backward button
- 9 - Shortcut button.
- 10 - Play/Pause button
- 11 - Next Track/Fast Forward button
- 12 - Shuffle button
- 13 - Direct Searching button
- 14 - Scan Start/Stop button

- 15 - Song Title
- 16 - Artist/Album Information
- 17 - Close option menu button

## Operate the CD Player Menu

You can select the button items displayed in the CD player menu by directly touching it in list.

### Play/Pause Playback

1. Touch **[■]** button to pause during playback.
2. Touch **[▶]** button again to resume playback.

### Switch to Previous/Next file or track

Touch **[◀]** or **[▶]** button during playback to play previous/next file.

- Touching **[▶]** button starts playback from the beginning of the next track.
- Touching **[◀]** button starts playback from the beginning of the current track. When this button is touched again within 5 seconds, playback starts from the beginning of previous track.

### Fast Forward/Fast Backward

1. Touch **[◀]** or **[▶]** button and hold more than 2 seconds to start fast backward or fast forward during playback. The playback speed starts at 2x, then will increase to 4x, 8x, and 16x. Release the button will continue playback with normal speed.

#### Note:

\* The fast forward and fast backward speed may differ depending on the disc.

### Repeat Playback

\* Repeat All is the factory default repeat setting.  
Touch **[]** button switch between Repeat Folder Repeat All and Repeat Track.

### Shuffle Playback

1. Touch **[]** button to shuffle the tracks during playback.
2. Touch this button again to turn off the feature.

### Selecting a track on the Track List Screen

This function allows you to select tracks from a displayed list.

1. Touch the track title on the display list. The selected track will start playing.
2. When the desired track is not displayed, touch and swipe the track list up or down.
3. Touch the desired track title button. The corresponding track is started playback.

## Scanning the Tracks

1. Touch  button to show **[Scan Start]** button.
2. Touch **[Scan Start]** button during playback.
- It will play from next track, and each track will display for 10 seconds.
- The **[Scan Start]** button will switch to **[Scan Stop]** button.
3. Touch **[Scan Stop]** button.
- It will continue playback from current track.
- **[Scan Stop]** button will switch to **[Scan Start]** button.
- \* The function will sequentially scan all tracks in the current folder one time. After the Scan feature stops, normal playback will continue.

## Searching with the Track Number

This operation allows searching using the track numbers recorded on the CDs.

1. Touch  button to show  button.
2. Touch  button. The numerical keypad will appear on the screen and touch  button.
3. Input the track number that you want to play back with **[0]** to **[9]** key and touch **[OK]** button.

Playback starts from the track of the input track number.

- If the input track number does not exist or searching with track number is not allowed, the screen image will not change.
- Touch the  button will close the numerical keypad.
- Touch  button will close the option window and display playback screen.



## Listening to Compressed Audio

This system can play audio files stored on disc.  
MP3/WMA/AAC

## Tag Display Function

This unit is an ID3 Tag compatible model.  
This unit supports the ID3 TAGs of the Version 2.4, 2.3, 1.1 and 1.0.  
In displaying, this unit gives priority to the Version 2.3 and 2.4 TAGs.

## Note:

- Some CDs recorded on CD-R/RW mode may not be usable.

## Displaying MP3/WMA/AAC TAG titles

Tag information can be displayed for compressed audio files containing Tag information.

Tag data: title, artist, album

## Precautions when creating MP3 disc

### • File extensions

1. Always add a file extension ".MP3" or ".mp3" to an MP3 file, and ".WMA" or ".wma" to a WMA and ".m4a" to a AAC file by using single byte letters. If you add a file extension other than specified or forget to add these file extension, the file cannot be played. In addition, if you use upper case and lower case letters (capital and small letters) mixed for file extensions, normal play may not be possible.

2. Files other than MP3/WMA/AAC data cannot be played.

Playing files with a format not supported will be skipped, and the scan, random and repeat playback mode may be canceled.

### • File and Disc Not Supported

Files and discs with following extensions are not supported: \*.AAC, \*.DLF, \*.M3U, \*.PLS, \*.MP3 PRO files, files with DRM, open session discs.

### • Logical format (File system)

1. When writing an MP3/WMA/AAC file on a disc, please select "ISO9660 level 1 or level 2 (without including expansion format)" as the writing software format. Normal playback may not be possible if the disc is recorded on another format.

2. The folder name and file name can be displayed as the title during MP3/WMA/AAC play.

### • Entering File and Folder Names

Names using the code list characters are the only file names and folder names that can be entered and displayed. Using any other character will cause the file and folder names to be displayed incorrectly.

### • Folder structure


1. A disc with a folder having more than 8 hierarchical levels will conflict with the ISO9660 and playback will be impossible.

### • Number of files or folders

1. The maximum allowable number of folders is 200 (including root directory); the maximum allowable number of files is 1500 (max. 200 per folder). This represents the maximum number of tracks that can be played back.
2. Tracks are played in the order that they were recorded onto a disc. (Tracks might not always be played in the order displayed on the PC).
- Some noise may occur depending on the type of encoder software used while recording.

- In case of a track recorded at VBR (variable bit rate), the display for the play time of the track may be slightly different from the actual play time. Also, the recommended value of VBR ranges from 32 kbps to 320 kbps.
- After disc selection, the play mode is automatically engaged.

## Playback MP3/WMA/AAC menu

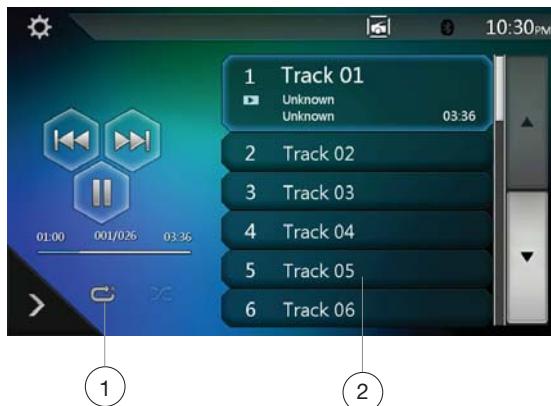

### 1. Repeat Playback

While playing MP3/WMA/AAC touch  button can switch between Repeat Folder, Repeat All and Repeat Track, Repeat Folder and Repeat All.

### 2. Current folder list

- Showing title of current folder.
- The number on the folder symbol is the number of files and folders in the current folder.
- Touch the title of current folder, playlist will show files and folders in upper folder.

\* Other operations about playing MP3/WMA/AAC are almost the same as CD Player mode.

### Stop Playback

1. Touch  button to stop playback.
2. Touch  button again to resume playback.

Playback resumes from the start of the folder which the playing track is in.

\* Other operations about playing MP3/WMA/AAC are almost the same as CD Player mode.

# 9. USB AUDIO OPERATIONS

This system can play audio files (MP3/WMA/AAC/FLAC) stored in a USB memory which is recognized as "USB Mass Storage Class device". You can use your USB memory as an audio device by simply copying desired audio files into it.

**Note:**

- This system will not operate or may operate improperly with some USB memory.
- Files protected with any DRM cannot be played.

## Notes on Using USB Memories

### General notes

- When no supported files are on the USB device, nothing displays in the file list.

### Notes on the Audio files

- This system can play MP3/WMA/AAC/FLAC files stored in the USB memory.

#### MP3 files:

- format: MPEG1/2 Audio layer3
- bit rate: 8k ~ 320kbps
- sampling frequency: 8/12/16/24/32/44.1/48KHz
- file extension: .mp3

#### WMA files:

- format: Windows media Audio standard L3 profile
- bit rate: 32 ~ 192kbps
- sampling frequency: 32/44.1/48 KHz
- file extension: .wma

#### AAC files

- format: Advanced Audio Coding LC-AAC,HE-AAC
- bit rate: 32 ~ 320Kbps
- sampling frequency: 32/44.1/48 KHz
- file extension: .m4a

#### FLAC files

- format: Free Lossless Audio Codec
- quantization bit rate: 16 or 24 bits
- sampling frequency: 44.1~192 KHz
- file extension: .flac

### Notes on the folder structure

- The folder hierarchy must be within 8 hierarchical levels. Otherwise, playback may be impossible.
- The maximum allowable number of folders is 65535 (including root directory and folders with no MP3/WMA/AAC/FLAC file).
- The maximum allowable number of files in a folder is 65535.
- You can store the MP3/WMA/AAC/FLAC files together in a folder.

- The system may become slow if the files or folders exceed the limitation above.

### Notes on the Tag titles

MP3: title, artist, album

WMA: title, artist, album

AAC: can not display tag information.

FLAC: title, artist, album

## Select USB Audio Mode

Connect your USB memory with MP3/WMA/AAC/FLAC files to the USB connector. The system will automatically detect the connected device, and the **[USB Audio]** button on main menu will be enabled.

- When a USB memory device is already connected, touch the **[USB Audio]** button to select the USB Audio mode.


The system changes to the USB Audio mode and starts playback from the previous position or from the beginning.

**Note:**

This system has two USB connectors and can connect two USB.

You can select the desired USB by touching the list of USB root menu.

This system indicates the USB device as "My USB1", "My USB2" on the list.

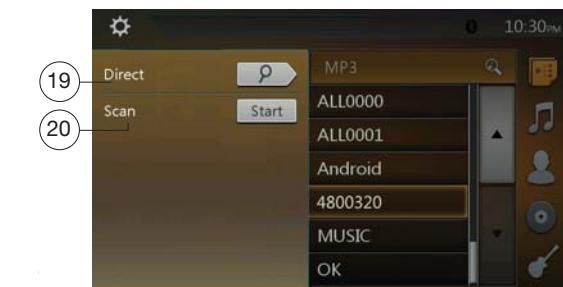

- 1 - Option button
- 2 - Play/Pause button
- 3 - Previous Track/Fast Backward button
- 4 - Next Track/Fast Forward button
- 5 - Repeat button
- 6 - Shuffle button
- 7 - Audio files in list
- 8 - Folders in list
- 9 - Page turning button
- 10 - System time
- 11 - Bluetooth status indicator
- 12 - Album Art
- 13 - Shortcut button
- 14 - Current ID3 info area
- 15 - Elapsed playing time indicator/Seek bar
- 16 - Playback status information
- 17 - Alphabet search button
- 18 - Category list
- 19 - Direct button
- 20 - Scan button

## Playing Audio Files in USB Memory

### Play/Pause Playback

1. Touch the [ ] button to pause during playback.
2. Touch the [ ] button again to resume playback.

### Switch to Previous/Next file

Touch the [ ] or [ ] buttons during playback to play previous/next file.

- Touch the [ ] button to start playback from the beginning of the next track.
- Touch the [ ] buttons to start playback from the beginning of the current track; when this button is touched again within about 5 seconds, playback starts from the beginning of previous track.

### Fast Forward/Fast Backward

Touch the [ ] or [ ] button and hold more than 2 seconds to start fast backward or fast forward during playback. The playback speed starts at 2x, then will increase to 4x, 8x, and 16x. Release the button will continue playback with normal speed.

#### Note:

\* The fast forward and fast backward speed may differ depending on the audio files.

### Repeat Playback

- Repeat All is the factory default repeat setting.
- Touch the [ ] button once for Repeat Track, again for Repeat Folder, Repeat All.

### Shuffle Playback

1. Touch the [ ] button to shuffle the tracks in playing folder during playback.
2. Touch this button again to turn off the feature.

### Alphabet Search

Touch the [ ] button to search with alphabet in current list.

### Album Art work

If MP3 audio file contains album art image in ID3, the picture will be displayed in this area.

### ID3 Information Area

This area display ID3 information of playing file.

### Skip Using Seek Bar

Touch [ ] on seek bar and drag it to any position where you want to start playback.

### Select a Folder on the Display List

Touch the folder title on the display list, the display list will display files and folders in the selected folder.

### Selecting a Track on the Display List

This function allows you to select tracks from a displayed list.

1. Touch the track title on the display list. The selected track will start playing.
2. When the desired track is not displayed, touch and swipe the track list up or down.
3. Touch the desired track title button. The corresponding track will playback.

### Scanning the Tracks

1. Touch [ ] button to show [Scan Start] button.
2. Touch [Scan Start] button during playback.
  - It will play from next track, and each track will play for 10 seconds.
  - The [Scan Start] button will switch to [Scan Stop] button.
3. Touch [Scan Stop] button.
  - It will continue playback from the current track.
  - [Scan Stop] button will switch to [Scan Start] button.
- \* The function will sequentially scan all tracks in the current folder one time. After the Scan feature stops, normal playback will continue.

### Searching with the Track Number

This operation allows searching to use the track numbers in playing folder.

1. Touch the [ ] button to show the [ ] button.
2. Touch the [ ] button. The numerical keypad will appear on the screen.
3. Input the track number that you want to play back with the [0] to [9] keys and touch the [OK] button.

Playback starts from the track of the input track number.

- If the input track number does not exist or searching with a track number is not allowed, the screen image will not change.
- Touch the [Back] button to close the numerical keypad.
- Touch the [ ] button to close the option window and display playback screen.



# 10. USB VIDEO OPERATIONS

This system can play USB video files (MP4, 3GP etc.) stored in a USB memory which is recognized as "USB Mass Storage Class device". You can use your USB memory as an video device by simply copying desired video files into it.

## Note:

- This system will not operate or may operate improperly with some USB memory.
- Files protected with any DRM cannot be played.

## Notes on Using USB Memory Devices

### General notes

When no supported files are on the USB device, nothing displays in the file list.

### Notes on the folder structure

The limitations on the folder structure are the same as those in the USB Audio Player mode.

### Notes on the Tag titles

The limitations on the Tag titles are same as those in USB Audio Player mode.

## Select USB Video Mode

Connect your USB memory device with video files to the USB connector. The system will automatically detect the connected device, and the **[USB Video]** button on main menu will be enabled.

- When an USB memory device is already connected

Touch the **[USB Video]** button on main menu to select the USB Video mode.

The system changes to the USB Video mode and starts playback from the previous position or from the beginning.

**Note:** This system has two USB connectors and can connect two USB device.

You can select the desired USB device by touching the list of USB root menu.

This system indicates the USB device as "My USB1", "My USB2" on the list.

## Playing Video Files in USB Memory

If the video is playing, touch the screen of the playing video to display the Operation buttons.

- \* The display will return to the playback screen, if you do not touch the screen for 10 seconds.

## Playable Video Format

\*.mp4 files

- format: MPEG4 Visual  
MPEG4 AVC (H.264)
- Picture size: 720 x 480 (MPEG4 Visual)  
1920 x 1080 (MPEG4 AVC)
- Audio format: AAC
- Audio sampling frequency: 32/44.1/48 KHz

\*.m4v files

- format: MPEG4 Visual  
MPEG4 AVC (H.264)
- Picture size: 720 x 480
- Audio format: AAC
- Audio sampling frequency: 32/44.1/48 KHz

\*.mpg files


- format: MPEG2
- Picture size: 720 x 480
- Audio format: MP3
- Audio sampling frequency: 32/44.1/48 KHz

\*.3gp files

- format: MPEG4 Visual  
H.263
- Audio format: AAC, AMR
- Audio sampling frequency: 8/16/32/44.1/48 KHz

### Note:

The above-mentioned File form is not guaranteeing all of what can reproduce.

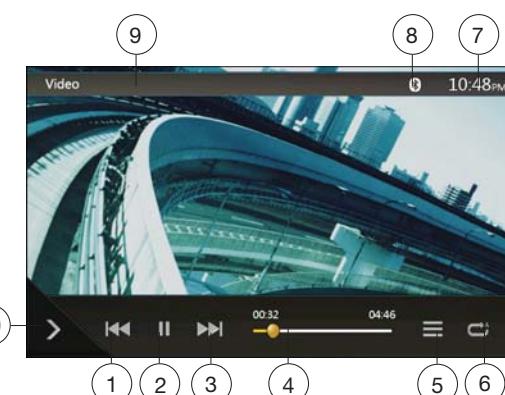

1 - Previous Track/Fast Backward button

2 - Play/Pause button

3 - Next Track/Fast Forward button

4 - Elapsed playing time indicator/Seek bar

5 - Menu List

6 - Repeat button

7 - System time

8 - Bluetooth status indicator

9 - Playback information

10 - Shortcut button

## Play/Pause Playback

1. Touch the [ ] button to pause playback.
2. Touch the [ ] button to resume playback.

## Switch to Previous/Next file

Touch the [ ] or [ ] button during playback to play the previous/next file.

- Touch the [ ] button to start playback from the beginning of the next track.
- Touch the [ ] button to start playback from the beginning of the current track; when this button is touched again within 5 seconds, playback starts from the beginning of previous track.

## Repeat Playback

\* Repeat All is the factory default repeat setting.


Touch the [ ] button once for Repeat Track, again for Repeat Folder, again for Repeat All.

## Skip Using Seek Bar

Touch the [ ] on the seek bar and drag it to any position where you want to start playback.

## Switching USB Video Menu

Touch the [ ] button to pause playback and switch the screen to the USB Video List.

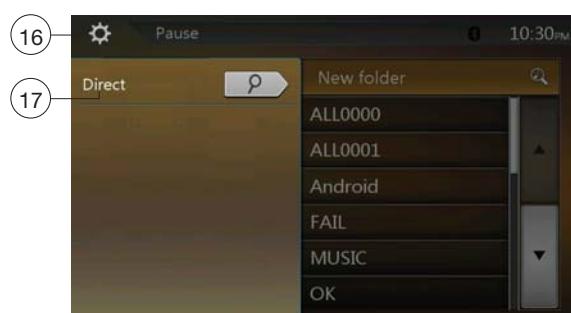

- 1 - Option button
- 2 - Play/Pause button
- 3 - Previous Track/Fast Backward button
- 4 - Next Track/Fast Forward button
- 5 - Repeat button
- 6 - Shuffle button
- 7 - Video files in list
- 8 - System time

9 - Bluetooth status indicator

10 - Playback status information

11 - Album Art

12 - Shortcut button

13 - Current file information area

14 - Elapsed playing time indicator/Seek bar

15 - Alphabet search button

16 - Direct button

17 - Scan button

## Play/Pause Playback

\*On the USB Video menu screen, playback status is pause.

Touch the [ ] button to resume playback. The screen will go to video screen automatically.

## Switch to Previous/Next file

Touch the [ ] or [ ] button during playback to play previous/next file.

- Touch the [ ] button to start playback from the beginning of the next track.
- Touch the [ ] button to start playback from the beginning of the current track; when this button is touched again within 5 seconds, playback starts from the beginning of previous track.

## Repeat Playback

\* Repeat All is the factory default repeat setting.

Touch the [ ] button once for Repeat Track, again for Repeat Folder, again for Repeat All.

## Shuffle Playback

1. Touch the [ ] button to shuffle the tracks in the playing folder during playback.

2. Touch this button again to turn off the feature.

## Alphabet Search

Touch the [ ] button to use the alphabet to search the current list.

## Current File Information Area

This area displays information of the current video file: file name, number of current files/total number of files in the current folder, elapsed playing time/total time of current file.

## Skip Using Seek Bar

Touch [ ] on seek bar and drag it to any position where you want to start playback.

## Select a Folder on Display List

This operation is the same as in the USB Audio mode.

## Selecting a Track on the Display List

This operation is the same as in the USB Audio mode.

## Scanning the Tracks

This operation is the same as in the USB Audio mode.

## Searching with the Track Number

This operation is the same as in the USB Audio mode.

# 11. iPod OPERATIONS

iPod/iPhone can be connected by using the Lightning™ connector only can connect 8-pin cable, and Bluetooth connection, you can enjoy its audio sound.

## Note:

- This system will not operate or may operate improperly with unsupported versions.
- For detailed information on the playable iPod/iPhone models, see our home page: [www.clarion.com](http://www.clarion.com)

## Notes on Using an iPod/iPhone

- Do not connect an iPod/iPhone to this unit with a headphone connected to the iPod/iPhone.
- Set the language setting of the iPod/iPhone to English before connecting your iPod/iPhone. Some characters of the other languages may not be displayed correctly in this system.

### • Precautions on battery consumption:

If the iPod/iPhone is connected to this unit when the internal battery of the iPod/iPhone has run down, this function may not operate correctly. You must connect the iPod/iPhone after charging the battery if it has run down.

## iPod Audio Menu Operations

Connect your iPod/iPhone to the USB connector. The system will automatically detect the connected device and the iPod Audio button will be enabled for operation on the Main Menu screen.

## Note:

1. This system has two USB connectors, please connect to the USB with the label of "iPod/iPhone". By connecting another USB cable, iPod/iPhone can't play back the music.

2. When an iOS device is connected via USB and Bluetooth at the same time and in the iPod mode, the iOS device is controlled through the USB connection.

3. When an in the iPod mode and operate the audio player or internet radio other than the iPod function, there is a case that iPod doesn't playback correctly. Please don't operate the audio player or internet radio other than Pandora® when in the Pandora mode.

4. When an iOS device is connected by Bluetooth, and the iPod mode is selected, the volume level is controlled by both iOS device and the unit.

5. When an iOS device is connected by Bluetooth, Album art image is not displayed.




The playback starts, from where the iPod/iPhone has been paused.

- When the iPod/iPhone is already connected.

Touch the [ ] button on the Main Menu screen. The system changes to the iPod mode, and starts playback from the previous position.

## iPod Audio ID3 Mode Screen

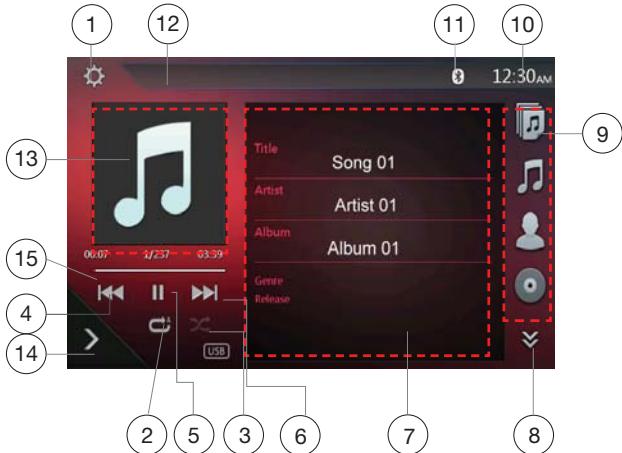

- 1 - Option button
- 2 - Repeat button
- 3 - Shuffle button
- 4 - Previous Track/Fast Backward button
- 5 - Play/Pause button
- 6 - Next Track/Fast Forward button
- 7 - ID3 Information
- 8 - Next Page [▼] /Previous Page [▲] button
- 9 - Category list
- 10 - System time
- 11 - Bluetooth status indicator
- 12 - Playback status indicator
- 13 - Art work
- 14 - Shortcut button
- 15 - Progress bar

## Play/Pause Playback

1. Touch the [ ] button to pause during playback.
2. Touch the [ ] button again to resume playback.

## Switch to Previous/Next file

- Touch the [ ] or [ ] button during playback to play previous/next file.
- Touch the [ ] button to start playback from the Touch of the next track.
- Touch the [ ] button to start playback from the beginning of the current track; when this button is touched again within 5 seconds, playback starts from the beginning of the previous track.

## Fast Forward/Fast Backward

Touch the [ ] or [ ] button and hold more than 2 seconds to fast backward or fast forward during playback.

### Note:

\*The fast forward and fast backward speed may differ depending on the audio files.

## Repeat Playback

\* depend on iPod version.

1. Touch the [ ] button once for Repeat Track, again for Repeat All, again for Repeat Off.

## Shuffle Playback

1. Touch the [ ] button to shuffle the tracks in the playing folder during playback.
2. Touch this button again to turn off the feature.

## Album Art work

If current audio file contains album art image in ID3, the picture will be displayed in this area.


## ID3 Information Area

This area displays ID3 information of the playing file: song title, artist information, album information (Genre, playlist and release time).

## Category List

Select different song categories to play. The category is same as on the iPod/iPhone.

## iPod Audio Playlist Mode Screen

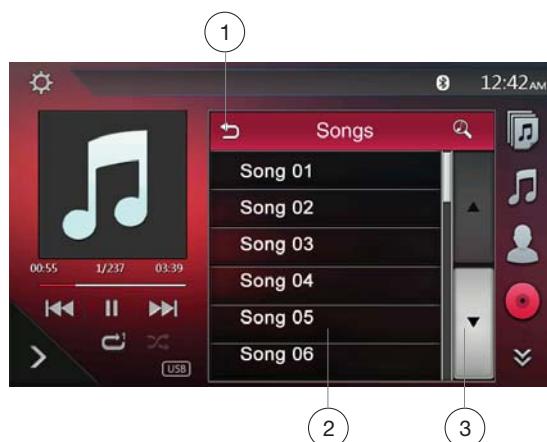


1 - Back to parent folder

2 - Playing list

3 - Page turning buttons

- In the ID3 information mode screen, touch the ID3 info area to switch the playing list, and in the playing list mode screen, touch the [ ] button to go back to the parent folder. If the list is in root folder, touch it to close the list.

## iPod Audio List Mode Screen

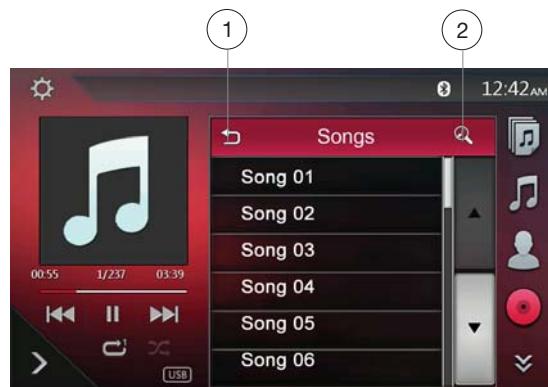

1 - Back to parent folder

2 - Alphabet search button

- Touch the [ ] button to go back to the parent folder. If the list is in root folder, touch it to close the list.
- Touch the [ ] button to use the alphabet to search the current list

## iPod Audio Bluetooth Mode

When your iPod/iPhone is connected via Bluetooth to this unit, you can also enter iPod Audio mode. The operation is same as the normal iPod Audio mode.




# 12. Pandora® OPERATIONS

If you have any issues with the Pandora application on your mobile phone, please direct them to [pandora-support@pandora.com](mailto:pandora-support@pandora.com).

## Selecting the Pandora Mode

1. Turn on the Pandora function of your iPod/iPhone/Android.
2. Connect your iPod/iPhone/Android via Bluetooth to the unit.
3. When the iPod/iPhone/Android is connected, touch the **[Pandora]** icon on the Main Menu screen.
- Pandora mode now playing on screen/Pandora mode information screen

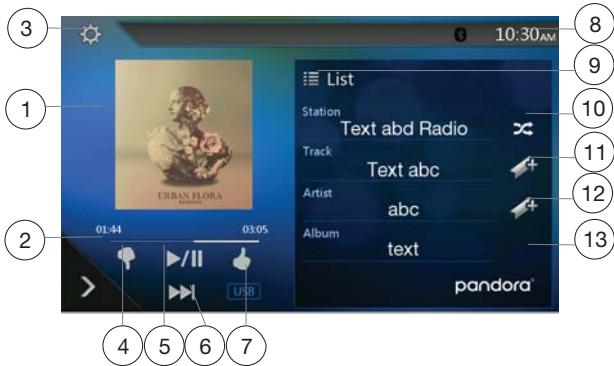

1 - Art work  
 2 - Progress bar  
 3 - Settings button  
 4 - Thumbs down  
 5 - Play/Pause button

Touch this button Thumbs-down current track and play next track.

6 - Next track button

Use to control playback and pause.

(1). Touch the button during playback. Playback pauses.

(2). To resume playback touch the button again.

7 - Thumbs up

8 - System time

9 - List button

Touch this button to show List Screen.

10 - Current station name

11 - Current title

Touch icon to store current title to track favorites list.

12 - Current artist

Touch icon to store current artist to artist favorites list.

13 - Current album name

• Skipping a track (Pandora mode)

Touch the **[▶]** button during playback, tracks are skipped and start playback from the beginning of the next track.

### Note:

- Some track are not able to be skipped.

- If skip limit has been reached(Skip 6 tracks in 1H), this function will not available.

### • Track rating

Touch the **[👎]** or **[👍]** button to Thumbs down or Thumbs up current track, and the button will light up.

### Note:

- Touch the **[👎]** button will skip to next track (if the skip limit has not been reached).

- Some track are not able to be rated (i.e. audio ads and station content). The thumb buttons will disabled.


### • Bookmarking

Touch the **[✚]** button to store the current the title or artist to the track favorites list.

### Note:

- Some track are not able to be bookmarked (i.e. audio ads). In this case the bookmark buttons will disabled.

### • Pandora Mode Station List

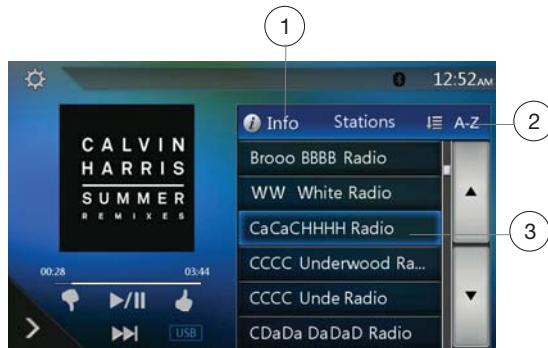

1 - **[Info]** button

Touch this button to display the Information Screen.


2 - **[A-Z]** button

Touch this button to sort the list by first letter, touch again to sort the list by date.

3 - Station list, touch to select station to play.

When the desired station is not displayed, touch and swipe the station list up or down.

### • Pandora Mode Setting screen

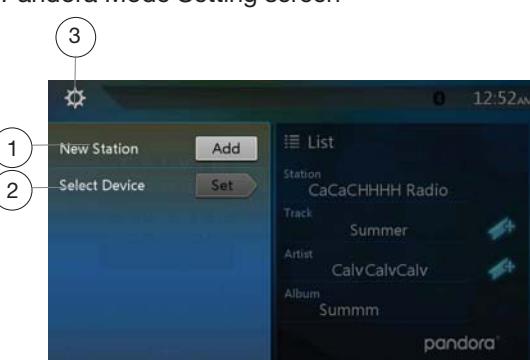

- 1 - Add a new Station
- 2 - Select a device
  - This “Select Device” key is used when connecting iPhone by the USB and connecting the Android by Bluetooth. By default, the USBconnection has priority.
- 3 - Close the setting screen.

## **Pandora® Bluetooth Mode**

When your mobile phone is connected to the unit via Bluetooth. You can also enter the Pandora mode. The operation is the same as the normal Pandora mode.



### 1 - BT mode

When connected via Bluetooth. This icon will change from USB to BT

#### **Note:**

1. Pandora internet radio may not be available in all areas due to government restrictions.
2. When the Pandora mode starts, this system chooses the previously connected device (Android or iOS). When both Android (BT), iPhone (BT or USB) are connected at the same time, and the “Do not show again” setting is not checked, a popup will display to select the device.
3. When connecting the mobile phone by Bluetooth or USB when in the Pandora mode, there is a case the change device button will not work correctly. We recommend that after finished with the Pandora mode, then connect the other mobile phone.
4. When using Pandora and operating an audio player or internet radio other than Pandora, there is a case that Pandora won't playback correctly. Please don't operate the audio player or internet radio other than Pandora when in the Pandora mode.
5. During Pandora playback in the Pandora mode with the Bluetooth connection, the volume level is controlled also on the mobile phone side. (Both iOS and Android devices)

# 13. Bluetooth AUDIO PLAYER OPERATIONS

Some Bluetooth phones have audio features, and some portable audio players support the Bluetooth feature. These devices will be called as “Bluetooth audio players” in this manual. This system can play audio data stored in a Bluetooth audio player.

**Note:**

- Set the volume level of Bluetooth audio player to maximum when playback.
- This system will not operate or may operate improperly with some Bluetooth audio players.
- For detailed information on the playable Bluetooth audio players, see our home page: [www.clarion.com](http://www.clarion.com)

## Selecting the Bluetooth Audio Mode

1. Touch the [BT Audio] button to select the Bluetooth Audio mode.

The system changes to the Bluetooth mode. If the connection with a Bluetooth audio player has been already established, you may select the Music function.

2. Press the MENU button on the Operational Panel to return to the Main Menu.
- When a connection with a Bluetooth audio player has been established, the [BT] icon is displayed at the top of the screen.



## Bluetooth Audio Player Settings

You can confirm various settings regarding the Bluetooth interface features.


1. Touch the [Settings] button to display the information on the screen.
2. When you finish confirming the Bluetooth information, touch the [Settings] button to return to the previous screen.



## Registering Your Bluetooth Audio Player (Pairing)

You can register up to 5 Bluetooth audio players. If your mobile phone Bluetooth version is under 2.0. Please input PIN code “0000”.

1. Turn on the power of the Bluetooth audio player you wish to register.
2. Touch the Device button [+] to display the Device Select screen.

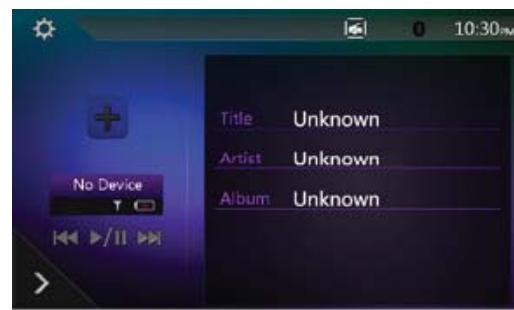

3. Touch the [+] button to display the Inquiring Device screen.



4. Touch your desired device button and touch the [Pair] button to register for the Bluetooth audio player. Then select an image of this device.



And select a type of this device.



When the pairing operation completes, the registered Bluetooth audio player is set as the current device, after selecting the favorite icon, the display returns to the device list screen. Touch the button, the display will return to the Bluetooth audio mode screen.



#### • To delete the Bluetooth audio player registration

1. Touch the button and then push the button to delete the device.

A confirmation screen is displayed.


2. Touch the button to confirm delete.

### Selecting the Bluetooth Audio Player

To change the current Bluetooth audio player to the other device which is already registered, perform the following operation.

1. Touch the device button to display the Device Select screen.
2. Touch the currently connected device button, then touch the button to disconnect the active device.
3. Touch the desired device button you wish to use. Touch the button to select it as your active device. The corresponding phone is set as the current telephone.
4. Touch the button to return to the previous screen.

### Controlling the Bluetooth Audio Player

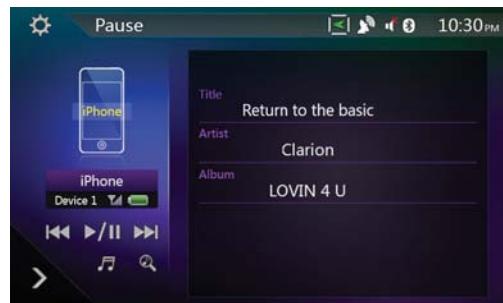

#### Note:

- Occasionally, depending on the environment, playback sounds may be fragmented, or noises may be generated.

### Playing Music

After the connection with a Bluetooth audio player is established, the play mode is automatically engaged.

- When playback is not started for some devices, touch the button manually.

### Pausing Playback

1. Touch the button during playback.

### Playback Pauses

2. To resume playback, touch the button. Playback resumes.

### Skipping a Track Searching

3. Touch the or button during playback.


### Stopping Playback

4. Touch the button during playback. Tracks are stopped, touch the button to playback the first track.

### Show Track List

5. Touch the button to show the current track list.

Touch the button to show all of the lists. You can playback any tracks by touching the items in the list.

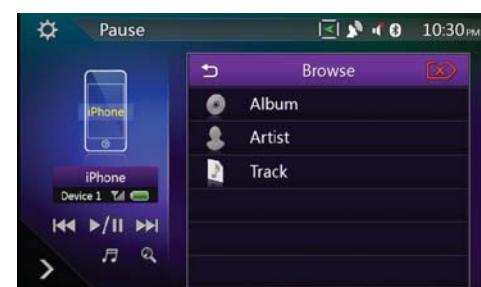

# 14. Bluetooth TELEPHONE OPERATIONS

When the connection to your Bluetooth phone is established, the following functions are available on this unit:

- Listening to your telephone calls on the car speakers.
- Answering an incoming call.
- Making a call using the 10-Key pad screen.
- Making a call using the phone book data in the selected phone.
- Making a call using the history data of the dialed/received calls.

**Note:**

- Some phones may not be able to transfer the Phone Book data to the head unit.
- The Phone Book data transmission may take a while. The operations of sending calls are disabled during the data transmission.

## Select the BT Phone Mode

1. Touch the [TEL] button to select the Bluetooth Telephone mode.  
The Telephone screen is displayed.
2. Press the MENU button on the Operational Panel to return to the Main Menu.
- When no Bluetooth phone is connected, the icon [BT] is displayed at the top of the screen.



- When the connection with a Bluetooth phone has been established, the [BT] icon and signal level indicator are displayed at the top of the screen.



## Bluetooth Telephone Settings

You can confirm various settings regarding about the Bluetooth interface features.

1. Touch the [BT] button to display the information on the screen.
2. Select the setting for the desired item. See the following sections for detail.
3. When you finish confirming the Bluetooth information, touch the [BT] button to return to the previous screen.



### Setting Automatic Connection

The system automatically reconnects the cellular phone after the connection is lost or the system is restarted.

- The factory default setting is “ON”. Touch the [On] or [Off] button of the Automatic Connection item to set the function ON or OFF.

### Setting Automatic Answer

If a call comes in, answer automatically after 5 seconds.

- The factory default setting is “OFF”. Touch the [On] or [Off] button of the Automatic Answer item to set the function ON or OFF.

### Setting Microphone Gain

You can adjust the input level of the microphone in 16 levels.

- Touch the level indicator button of the Microphone Gain item to adjust the input level.

**Note:**

- The input level of the microphone can be affected by its surroundings. Adjust the level if the person on the other end of the telephone has a reception problem.

## Registering Your Phone (Pairing)

You can register up to 5 phones. The registering method is same as "Registering your Bluetooth audio player".

If your mobile phone Bluetooth version is under 2.0. Please input PIN code "0000".

1. Turn on the power of the phone you wish to register.
2. Touch the Device button [+] to display the Device Select screen.



3. Touch the [+] button to display the Inquiring Device screen.



4. Touch your desired Phone button to select the button for the phone to be registered, and touch the [Pair] button to register for the Bluetooth phone.
- You cannot select the Phone button of which another phone is already registered. Select a blank Phone button.
5. If entering the Pass Key code is prompted on your phone, enter the Pass Key code set in this unit.
- You can change the Pass key setting of this unit from the Bluetooth Info screen under the Telephone Settings screen.



When the pairing operation completes, the registered phone is set as the one, and the display returns to the Telephone screen.

- To delete the phone registration
- 1. Touch the [Disconnect] button to delete the device. A confirmation screen is displayed.
- 2. Touch the [Yes] button to confirm delete.

## Select the Phone

To change the current phone to the other device which is already registered, perform the following operation.

1. Touch the [+] button to display the Device Select screen.
2. Touch the currently connected device, then touch [Disconnect] button to disconnect the active device.
3. Touch the desired Device button you wish to use. Touch the [Connect] button to select it as your active device. The corresponding phone is set as the current phone.
- If the power of the phone is not turned on, turn it on.
- The phone may prompt to acknowledge the Bluetooth connection or to enter the Pass Key code of this unit. Perform these operations according to the message displayed.

4. Touch the [Back] button to return to the previous screen.

## Get the Phone Book Data

Sending the Phone Book data from the phone enables you to make a call using the Phone Book function from this unit.

## Telephone Operations

### Making a call using the 10-Key pad

1. Touch the [Dialer] button to display the 10-Key pad screen.
2. Enter the telephone number by using the 10-Key pad displayed on the screen.



3. Touch the (Send) button to call the entered number.

- The following Telephone Interrupt screen is displayed during phone call.



- Touch the button to talk by using the phone and canceling the hands-free function (Private Mode). To return to the hands-free mode, touch the button again.
- Touch the button to mute the microphone. You can hear the person you're calling but they can't hear you.
- Touch the button to hold the current phone call, now you can answer the other incoming call. Touch again to talk with previous call.

If during a call with a third-party call, you can keep the current call to answer a third party or hang up the current call to answer a third party. You can also ignore the third-party calls.



4. When the call is finished, touch button to hang up.

**Note:**

- Depending on some phones, the Telephone Interrupt screen may be closed and the connection with this system may be disconnected when entering the Private mode.

## Making a Call Using the Phone Book

You can use the Phone Book data obtained from the phone to make a call from this unit.

**Note:**

- Before using this function, the Phone Book data must be sent from the phone.
- Only the Phone Book items with at least one telephone number registered in the captured Phone Book data are displayed on the Phone Book screen.

- Touch the button to display the Phone Book screen.
- Touch the desired name button you wish to dial.
- Swipe the list up and down to scroll the list.
- Touch the button to call the specified number. The Telephone Interrupt screen is displayed, and calling starts.
- When the call is finished, touch the button to hang up.

## Making a Call Using the History

The system will save the Dialed/Received calls record data in the memory. You can confirm it and use it to make a call from this unit.

- Touch the button. The History List screen is displayed.
- The items are sorted by Dialed, Missed and Received calls.
- Swipe the list up and down to scroll the list.
- Touch the desired History item key you wish to dial.
- Touch the button to call the specified number. The Telephone Interrupt screen is displayed, and calling starts.
- When the call is finished, touch the button to hang up.

## Answering an incoming call

When a call comes in, the following Telephone Interrupt screen appears.




You can answer the incoming call on this system by the following operation.

- Touch the button to answer the call.
- When the call is finished, touch the button to hang up.

# 15. TUNER OPERATIONS

## Listening to the Tuner

1. Touch the [Tuner] button on the main menu display. The tuner mode screen is displayed.
2. Touch the [FM1/FM2/FM3/AM] button to select the radio band. Each time the button is touched, the radio reception band changes in the following order: FM1->FM2->FM3->AM->FM1...

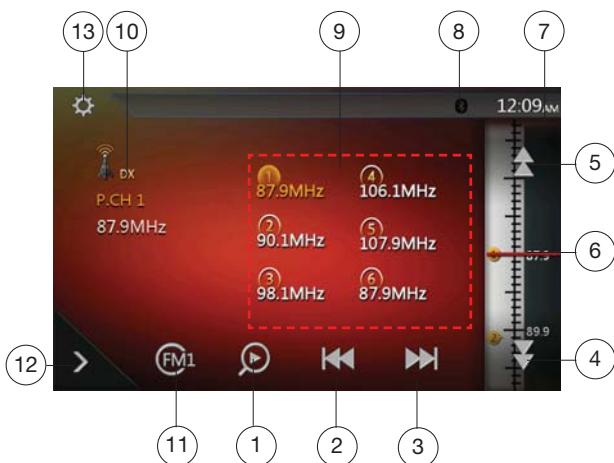

- 1 - Preset Scan button
- 2 - Seek down button
- 3 - Seek up button
- 4 - Step down button
- 5 - Step up button
- 6 - Frequencies display
- 7 - System time
- 8 - Bluetooth status indicator
- 9 - Preset channel list
- 10 - DX/Local indicator
- 11 - Band button
- 12 - Shortcut button
- 13 - Option button

## Seek Tuning

1. Touch the [FM1/2/3/AM] button to select the radio band (FM or AM).
2. Touch the [◀◀] or [▶▶] button
  - When the [▶▶] button is touched, the station is searched in the direction of higher frequency.
  - When the [◀◀] button is touched, the station is searched in the direction of lower frequency.

## Step Tuning

1. Touch the [FM1/2/3/AM] button to select the radio band (FM or AM).
2. Touch the [▲] or [▼] button in frequency menu to tune up or down by one step.

## Recalling a preset station

1. Touch the [FM1/2/3/AM] button to select the desire band (FM or AM) on the tuner.

2. Press the preset station (1 to 6) on Preset list.

## Manual Memory

1. Touch the desired band button to select the band you wish to store.
2. Tune to a station you want to store using the seek tuning, step tuning, or preset tuning.
3. Touch and hold the desired Preset button you want to store for about 2 seconds.

## Auto Store

The Auto Store is a function for storing up to 6 stations that are automatically searched sequentially. If the number of receivable stations cannot reach to 6, the previous stored station remains.

1. Touch the [FM1/2/3/AM] button to select the desired band. (FM or AM)
2. Touch the [⚙️] button, and then touch the [Start] button to start the Auto Store.

A beep sounds and the stations with good reception are stored automatically to the preset list.

## Notes:

1. After auto store, the previous stored stations will be overwritten.
2. The unit has 4 bands, but FM3 and AM can store by Auto Store function.



## Preset Scan

The Preset Scan receives the stations stored in the preset memory in order. This function is useful when searching for the desired station in memory.

1. Touch the [FM1/2/3/AM] button to select the desired band. (FM or AM)
2. Touch the [▶▶] button to start the Preset Scan. The unit starts scanning each station for 10 seconds sequentially. But if the station stored is not a valid station; the scanning time is only 2 seconds.
3. When the desired station is tuned in, touch the [▶▶] button again to stay in that station.

## DX/Local Setting

The DX/Local setting changes the tuner sensitivity in order to separate closely spaced stations. This feature is useful in areas that have many radio stations in close proximity.

# 16. SiriusXM® Satellite Radio OPERATIONS

Only SiriusXM® brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

## Activating Your SiriusXM Subscription

After installing your SiriusXM-Connect Vehicle Tuner and antenna, power on your head unit and select SiriusXM mode. You should be able to hear the SiriusXM preview channel on Channel 1. If you cannot hear the preview channel, please check the installation instructions to make sure your SiriusXM Connect tuner is properly installed.

After you can hear the preview channel, tune to Channel 0 to find the Radio ID of your tuner. In addition, the Radio ID is located on the bottom of the SiriusXM Connect Vehicle Tuner and its packaging. You will need this number to activate your subscription. Write the number down for reference.

**Note:**

**The SiriusXM Radio ID does not include the letters I, O, S or F. In the USA, you can activate online or by calling SiriusXM Listener care:**

- Visit [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow)
- Call SiriusXM Listener Care at 1-866-635-2349
- For Canadian Subscriptions, please contact:
- Visit [www.siriusxm.ca/activatexm](http://www.siriusxm.ca/activatexm)
- Call XM customer Care at 1-877-438-9677

**As part of the activation process, the SiriusXM satellites will send an activation message to your tuner. When your radio detects that the tuner has received the activation message, your radio will display: "Subscription Updated". Once subscribed, you can tune to channels in your subscription plan. Note, the activation process usually takes 10 to 15 minutes, but may take up to an hour. Your radio will need to be powered on and receiving the SiriusXM signal to receive the activation message.**

## Selecting a Satellite Radio Mode

Touch the SiriusXM button on the Main Menu display. The system changes to the SiriusXM Satellite Radio mode. The SiriusXM mode screen is displayed.



1. Band select button
2. Signal status
3. Option Setting button
4. Current Channel Number / Category Name / Preset Number
5. Preset List Button
6. Channel List Button
7. Category List Button
8. List scroll buttons
9. Channel List
10. Channel up button
11. Channel down button
12. Direct Channel Tuning button
13. TuneMix button
14. Channel Name / Artist Name / Song Title / Content Info

## Displaying the SiriusXM Radio ID

Touch the SiriusXM button on the main menu display. The SiriusXM Radio ID is required for activation and can be found by tuning to Channel 0 as well as on the label found on the SiriusXM Connect tuner and its packaging.

You can also find it by touching the [Option Setting] button to enter the Setting menu.

## Channel Selection by Up/Down Button

1. Select a channel with the [] buttons. Only channels that can be received are selected. Channels that are locked and channels not covered by the subscription will be skipped. The receiver tunes to the next available channel below or above the current channel.

## Channel Selection by Channel Number

1. Touch the [Direct Channel Tuning] button to enter channels directly.
2. Enter the number of your desired channel by touching the [0] to [9] buttons. If you enter a wrong number, you can cancel it by touching the [Clear] button.
3. Touch the [OK] button. The radio will be tuned to the channel you entered.

## Tuning to Channels from the Channel List

1. Touch the [Channel List] button on the SiriusXM Menu display to enter channel list preview mode.
2. Touch and swipe the category list up or down.
3. You can select any channels in the list directly.

## Tuning to Channels from the Preset Channel List

A total of 6 SiriusXM channels for each band can be stored in the tuner's memory. You can access the presets by touching the Preset button. This allows you to store your favorite satellite radio channels in the memory for later recall.

1. Touch the [Preset List] button on the SiriusXM Menu display to enter preset list preview mode. You can select the desired channel by touching the preset list.
2. To store the current channel as a preset, touch and hold a preset button for more than 2 seconds to save the channel to that preset button.

## Tuning to Channels from the Category List

Satellite Radio allows you to select broadcast channel category (contents).

1. Touch the [Category List] button on the SiriusXM Menu display to enter category list preview mode.
2. Touch and swipe the category list up or down.
3. Touch the desired category item button to enter channel lists belonging to this category.
4. Select the desired channel by touching it on the list.


5. Touch the [Return] button to go back to category list.

### Note:


"All Chan" category includes all channels available with your subscription, including locked channels which are displayed with an "(L)".

## Parental Control Lock / Unlock

The Parental Control feature allows you to limit access to any SiriusXM channels, including those with mature content. When enabled, the Parental Control feature requires you to enter a passcode to tune to the locked channels. Information on setting up the passcode and locking channels can be found below.

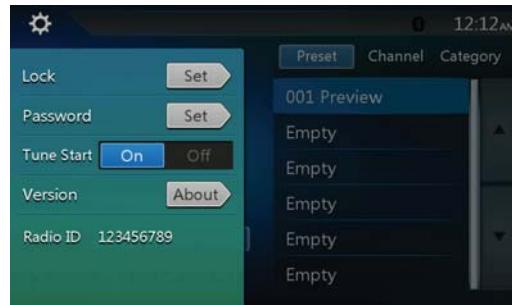

1. Touch the [Option Setting] button to enter setting page.
2. Touch the [Set] button in "Lock" item to enter passcode screen, enter the right passcode to enter the lock list.

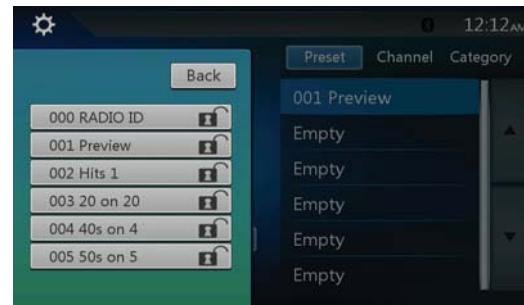

3. Touch and swipe the channel list up or down.
4. Touch and hold the channel item, and it will be locked or unlocked alternately.

## Setting the Password

1. Touch the [Option Setting] button to enter setting page.
2. Touch the [Set] button in "Password" item to set a new passcode following the screen indicator. If you enter a wrong number, you can cancel it by touching the [Clear] button.

**Note:**

You must input the correct passcode to enter the lock list. When you try to tune to a locked channel by the direct tune keypad, it will display the password keypad. Only entering the correct code can tune to that channel, otherwise it will go back to the previous channel.


The default passcode is "0000".

**Replay**

The Replay feature allows you to pause, rewind and replay live SiriusXM Satellite Radio programming.

Operation of the Replay feature can be found below.

1. Touch the [Play/Pause] button to start Replay mode.
2. In Replay mode you can use the buttons below to control playback.

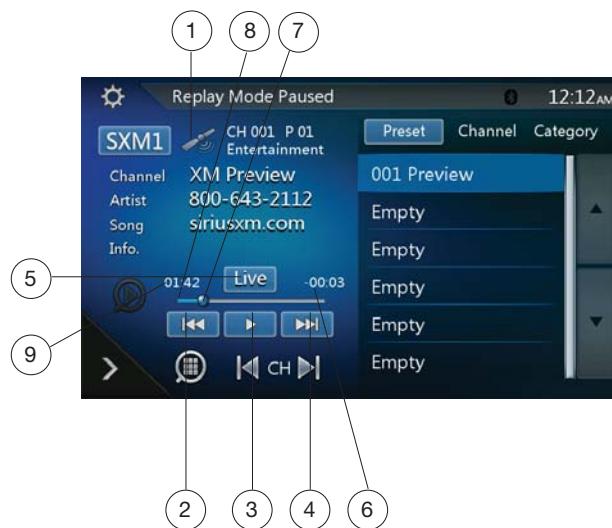

1. Playback Status.
2. Previous track/program.  
Fast Backward (long press).
3. Play/Pause Button.
4. Next track/program.  
Fast forward (long press).
5. Go to Live mode (Only displayed during Replay mode).
6. Remaining time to LIVE.
7. Buffered memory.
8. Playback position.
9. Current track play time .

**SmartFavorites**

SmartFavorites allow you to rewind and replay any missed programming from your current Band of Preset channels. Miss a music, news, talk or sports segment?

No Problem, because you can rewind and replay when you tune to one of your Preset channels and hear what you missed.

**Note:**

1. Compatible with SXV200 or later tuner models.
2. SXM1 band only is assigned as Smart Favorites for SXV200, and SXM1/SXM2/SXM3 bands for SXV300 or later.

**TuneStart™**

With the TuneStart™ feature turned ON, you will hear the beginning of the song when you tune to one of your Preset channels. It may take a minute or two for the feature to work after power up or after changing preset bands.

You can turn TuneStart On or Off in the following operation.

1. Touch the [Option Setting] button to enter the setting men.
2. Touch and slide to select "On" or "Off" in "TuneStart" item.

**Note:**

1. Compatible with SXV200 or later tuner models.
2. TuneStart will only work for channels in the SXM1 band with a SXV200, and channels in the SXM1/SXM2/SXM3 bands with a SXV300 or later in SXM1/SXM2/SXM3 bands for SXV300 or later.

**TuneMix™**

TuneMix™ plays a unique blend of songs from your Preset music channels from the current SiriusXM Preset Band, allowing you to build a custom channel from as few as two to as many as 6 music channels. You can even skip songs you don't want to hear. Operation of the TuneMix Feature can be found below.

1. Touch the [TuneMix] button to start playback with the [TuneMix] button highlighted.
2. You can operate the buttons for the Replay function while listening to TuneMix.
3. To cancel the TuneMix feature, touch the [TuneMix] button again.

**Note:**

1. Compatible with SXV300 or later tuner models.
2. When there are not enough channels or tracks, the [TuneMix] button is grayed out.

# 17. HDMI MODE

## Wire Connection of HDMI Mode

iPhone 5, iPhone 5s, iPhone 5c, iPhone 6, iPhone 6 Plus, iPhone 6s, iPhone 6s Plus, iPhone SE, iPhone 7 and iPhone 7 Plus can be connected by using the connector cable supplied with the respective device and HDMI cable (sold in the market) and digital AV adapter


**Note:**

The following are wiring examples.


Depending on the device, it might be able to connect to the Clarion device directly with the CCA-771.

Depending on the adapter or device, audio and/or video noise might be experienced.


(1) Connection with the iPhone 5, iPhone 5s, iPhone 5c, iPhone 6, iPhone 6 Plus, iPhone 6s, iPhone 6s Plus, iPhone SE, iPhone 7 and iPhone 7 Plus

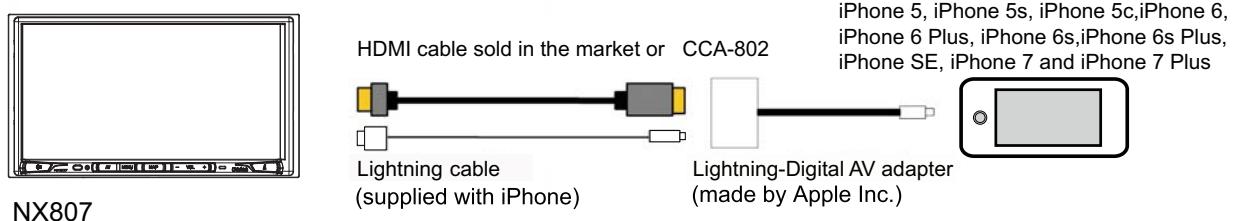

(2) Connection with the Android Phone

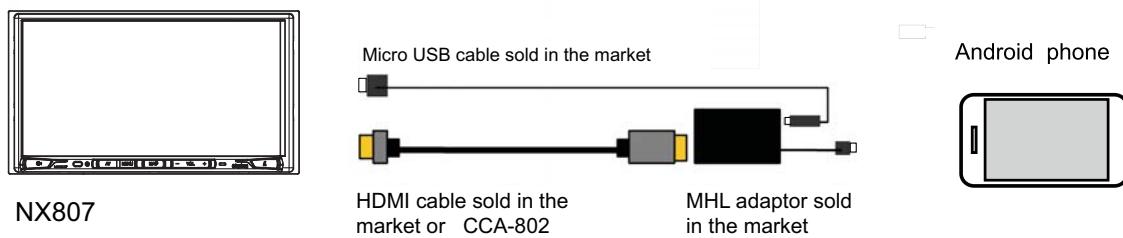

(3) Connection with the equipment with HDMI output

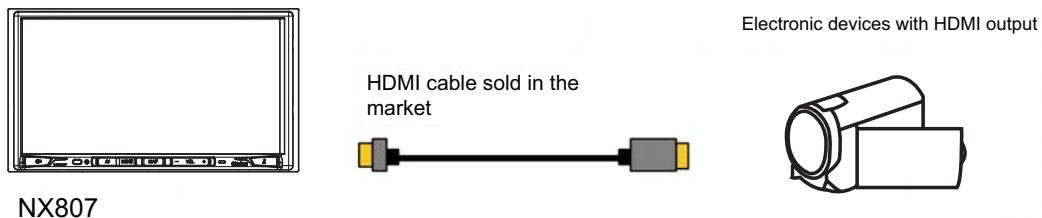


## Select HDMI Source



Touch the HDMI menu button to display the screen of the connected device.

This HDMI mode is only indicative or a mirror image the screen of the iPhone, Android. You cannot operate by the touch screen of NX807.

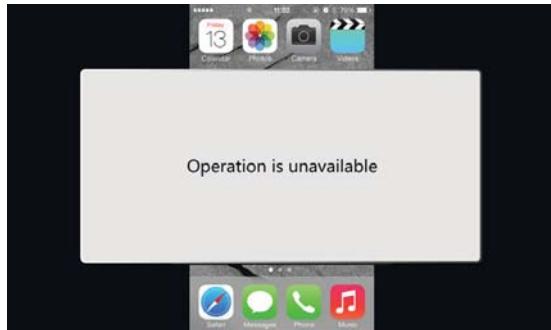

**Note:**

Depending on the application and model of the mobile phone, a black frame may appear around the screen.

## 18. Apple CarPlay

### To start Apple CarPlay:

Apple CarPlay is immediately started when you connect iPhone to iPod/iPhone USB cable. Apple CarPlay UI is automatically displayed in any situation except Note.1.

\*Note1: Original navigation guidance is active, NX807 continues navigation guidance. Won't change to Apple CarPlay UI.



\*Note2: Other USB cables are not supported for Apple CarPlay.

## To go to Apple CarPlay screen: (by Main menu and Shortcut menu)

---

1. When you touch “Apple CarPlay” icon, “CarPlay” screen is displayed.
2. When you touch “TEL” icon, “CarPlay telephony” screen is displayed.
3. When you touch “iPod Audio” icon, “CarPlay now playing” screen is displayed and start playback music.

The indicator displays as follows.

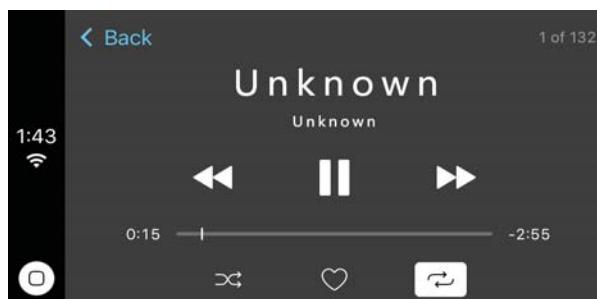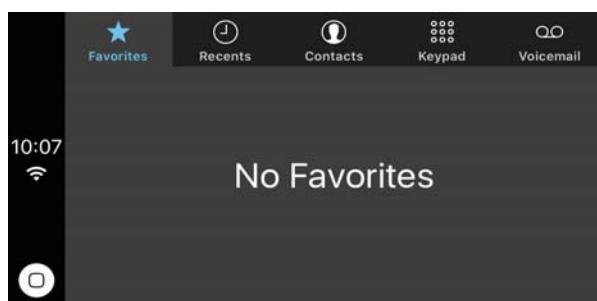



## To move to Apple CarPlay screen: (by hard button)

---

1. When you press and hold “MAP” button for 2 seconds, “CarPlay maps” screen is displayed.
2. When you press “AV” button, “CarPlay now playing” screen is displayed if active source is CarPlay.
3. When you press “VOICE” button, “Siri” screen is displayed.

The indicator displays as follows.



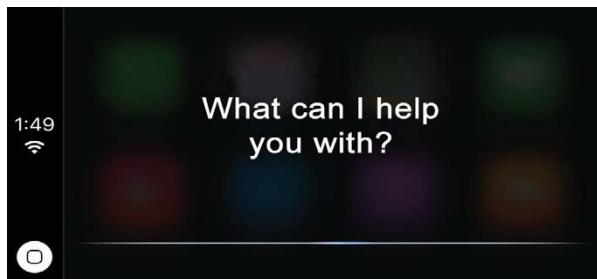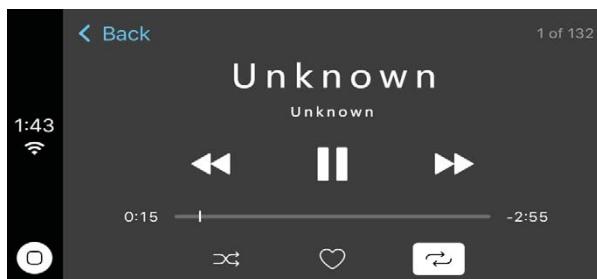

### **To return to original screen:**

1. Press “MENU” button, Main menu screen is displayed.
2. Press “MAP” button, original navigation screen is displayed.
3. Press “AV” button, original screen is displayed if original audio source is active.

The indicator displays as follows.



## 19. AUX

External peripheral devices, such as game consoles, camcorders, navigation units, phones, etc. can be connected to the AUX connector on the back of this unit using the AV media cables.

### Switching to AUX IN

Touch the **[AUX]** button on Main Menu to select the mode. If the external device connected to the AUX input has an audio signal, the unit will broadcast audio of the external device. Press Menu button on Operational Panel to return to the Main Menu.

You cannot directly control external devices connected to AUX input.



## 20. CAMERA INPUT OPERATIONS

### Switching to Camera mode

Touch the **[Camera]** button on Main Menu.

The LCD will display the external camera video. The screen will display "No Video Signal" message, if a valid camera is not connected to this device.

Press MENU button on Operational Panel to return to the Main Menu.



### Setting Camera audio

Select "ON" button in the Camera Audio setting of the General setting.

The audio from camera will be heard when reverse gear is engaged. The volume control is available but not indicated on the screen due to the safety.

Select the "MUTE" button to mute the audio while the reverse gear is engaged.

Select the "Off" button to play the audio while the reverse gear is engaged.

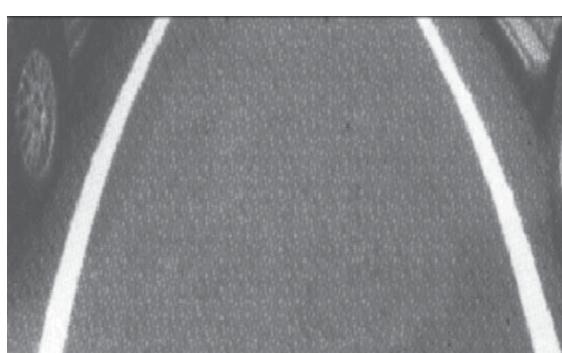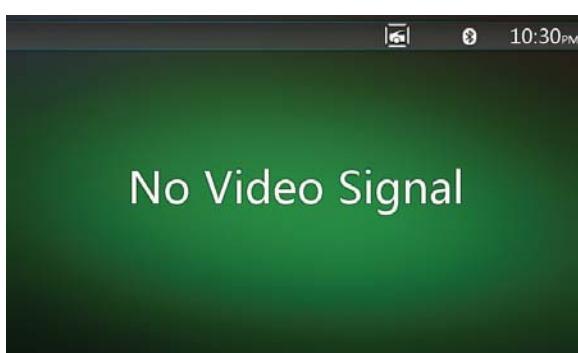

#### Note:

If the reverse cable is connected correctly to the car, the unit goes to camera mode automatically when the car is in reverse.

**As an additional safety feature, the audio from a camera with a built-in microphone can be heard through the NX807.**

# 21. REAR SOURCE OPERATIONS

If a monitor is installed in the rear zone and connected to the rear zone AV output, passengers in the back seat can watch the DVD/AUX video separately from front source.



1. Touch the button to access the front source.
2. Touch the button to close the rear source.

## Multi-Zone Operation

Independent sources can be played simultaneously on the unit. For example, a FM/AM console can playback on the front screen while DVD video is available to rear passengers.

### Access Rear-Zone

1. Touch the Rear button on Main Menu to access the Rear Source.
2. Select a source to play.


### Exit Rear-Zone

Touch the 2-Zone off button to close the Rear Source.

#### Note:

1. If the source is selected as the front, the source in rear can't be selected.
2. If the source is selected as the rear, the source in front can't be selected.
3. Touch the Front button to access the main menu but not close the Rear Source.

## DVD Video in Rear

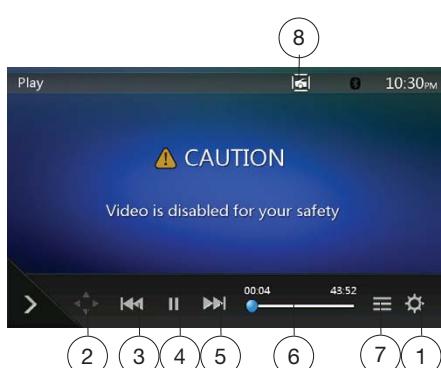

- 1 - Option button
- 2 - Show Cursor keys
- 3 - Previous Chapter/Fast Backward button
- 4 - Play/Pause button
- 5 - Next Chapter/Fast Forward button
- 6 - Elapsed playing time
- 7 - Menu List button
- 8 - Front/Rear button

If the screen displays Rear Source, touch Front/Rear button to switch to Front Source.

If the screen displays Front Source, touch Front/Rear button to switch to Rear Source.




## DVD Video Rear Source Control Info Mode.



Touch BACK button to return.

## DVD Video Rear Source Control Direct Mode.

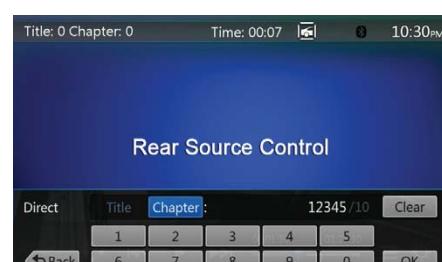

NOTE: More detail please refer to DVD Video Front source.

## AUX Video in Rear

video separately from front source.

AUX



NOTE:

More detail please refer to AUX Front source.

## 22. FULL DIGITAL SOUND SYSTEM

The NX807 has a Digital (Optical) output which allows it to connect to Clarion's high fidelity Full Digital Sound System.

Clarion's Full Digital Sound System is a break through in audio technology.

Unlike traditional sound systems, the signal is kept digital all the way to the speaker thus delivering an uncompromised high fidelity experience.

For more information, visit our website at [www.clarion.com](http://www.clarion.com).

The following are components of the Clarion Full Digital Sound System:



- Z3 : Full Digital Sound Processor, Tweeters and Commander
- Z7 : Full Digital Speaker
- Z25W : Full Digital Subwoofer

For detail connection, operation and setting, please read the user manual of the Z3.

\* Z3, Z7 and Z25W are sold separately.

\* To connect to the Z3 Digital Sound Processor, an optical cable is needed.

### System Example

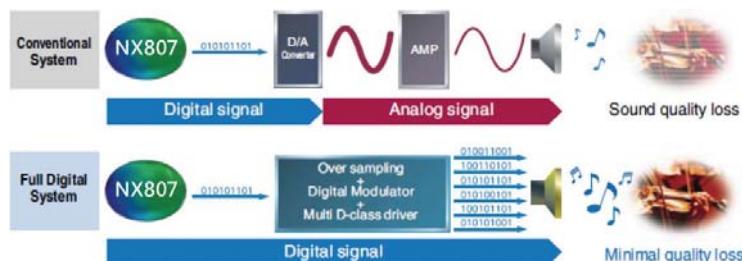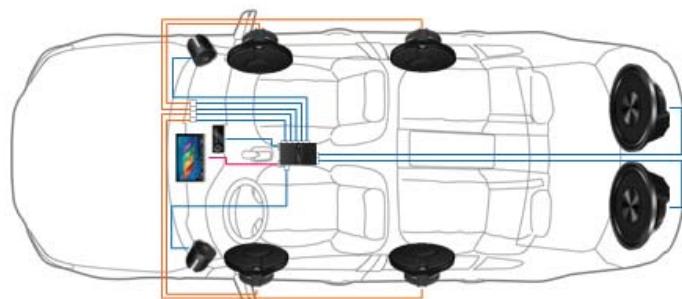

# 23. SETTING OPERATIONS

Touch [  ] button on the Main menu screen.  
The Setting menu screen will be displayed.

## General Setup Menu



**System Language:** Set the Language for the system screen.

**Shortcut Menu:** Touch the Set button to go to the Shortcut Menu screen. Drag the buttons in the upper area and drop them the shortcut menu on the bottom in order to make your customizations.



**Time:** Set system clock.



**24-Hour Format:** Set the time display mode.  
**Beep:** Turn on or turn off the beep confirmation sound.

**Bluetooth:** Set the Bluetooth On or Off.

**BT Device:** Connected device name.

**BT Auto Connect:** The system automatically reconnects the cellular phone after the connection is lost or the system is restarted.

**BT Auto Answer:** If a call comes in, answer automatically after 5 seconds.

**MIC Gain:** You can adjust the input level of the microphone in 16 levels.

Touch the level indicator button of the Microphone Gain item to adjust the input level.

**Wallpaper:** Choose the desired wallpaper.

There are three optional images, which you can import from USB. Select "Imported 1/2/3" and touch [Import].

The format should be jpeg of less than 5M bytes.



**Illumi Color:** Set the illumination color on the panel.

**Tel Speaker:** There are two options, Left and Right. For example, if current setting is Right, when BT phone is coming in, only right speaker can hear the phone.

**Steering Wheel:** Change the position of Apple CarPlay home button.

**Camera Audio:** There are three options, Off, On and Mute.

**Version:** Display the software version information.

### Note:

- Time and 24-Hour Format can be adjusted when set the system time not to be synchronized with GPS local time.

## Video Setup Menu





**DVD Wide Screen Mode:** Set the DVD wide screen mode On or Off.

**Dimmer:** Set Dimmer value from 0 to 20.

**Dimmer Mode:** There are three options, Day, Night and Auto.

## Audio Setup Menu

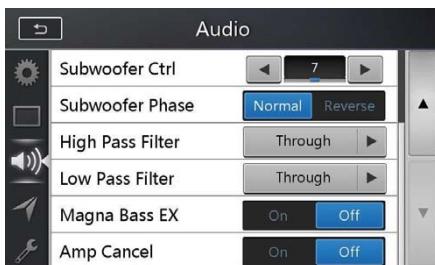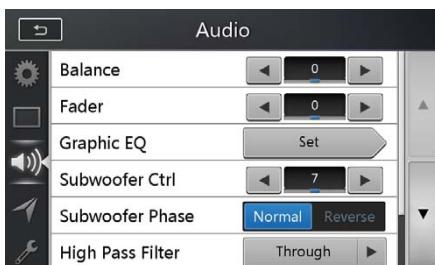

**Balance:** Choose the desired volume for the left and right speakers.

**Fader:** Choose the desired volume for the front and rear speakers.

**Graphic EQ:** Choose the desired mode: Bass Boost, High Boost, Natural, Vocal, Impact and Flat.

**Subwoofer Ctrl:** Choose the desired subwoofer gain from 0 to 14.

**Subwoofer Phase:** Choose the Subwoofer Phase normal or reverse.

**High Pass Filter:** Choose the frequency for the high pass filter or through. The frequencies include 60Hz, 90Hz and 120Hz.

**Low Pass Filter:** Choose the frequency for the low pass filter or through. The frequencies include 60Hz, 90Hz and 120Hz.

**Magna Bass EX:** Choose the loudness On or Off.

**Amp Cancel:** Selecting ON turns off the internal amplifier in the NX807.

### Note:

Optional cable (sold separately) is necessary when you use Audio line out.

## Navigation Setup Menu



**GPS Time:** Set the system time to be synchronized with GPS local time or not.

**Navi Interrupt:** There are three choices: On/Popup/Off. “On”: The navigation screen will cover the AV screen when reaching a key point. “Popup”: A small turn info window will pop up in the top of the AV screen to indicate the key point. “Off”: Turn off this function.

**Voice Guidance:** There are three choices: On/Mute/Off.

On: Voice guidance will interrupt any audio currently playing. While interrupting, the volume level cannot be altered.

Mute: Voice guidance will interrupt any audio currently playing. While interrupting, the volume level can be altered.

Off: Disable the navigation voice guidance.

## Others Setup Menu



**Set Password:** Set the password for the DVD parental control.

**Parental Control:** Set the rating of the age. It contains Kid Safe/G/PG/PG-13/PG-R/R/NC-17/Adult.

**Audio Language:** Set the Language for the DVD Audio.

**Subtitle Language:** Set the Language for the DVD subtitle.

**Blinking LED:** Set blinking LED On or Off.

**Source Level :** Set the each source gain.

**Audio Signal :** Select the audio output Analog or Optical, Sampling Rate 48kHz or 96kHz, Volume out Fix or Variable.

**Screen Calibrate:** The function of it is to select the TS Calibrate YES or NO.

**Factory Default:** The function is to select to load factory default or not.

## Set the Anti-Theft Code

1. If your unit is unlocked, hold the [  ] button more than 2 seconds, then the Anti-Theft setting mode will display. Users can change anti-theft code.

Touch [YES] button, the numerical keypad is displayed. Enter the new password twice, then anti-theft code is set and your unit is secured.

When the Anti-theft is "On", you need to enter the correct Anti-theft code to turn the unit on. If you enter wrong code three times, the unit is locked, and must be unlocked by the professionals.

2. If your unit is secured, hold the [  ] button more than 2 seconds, then the Anti-Theft setting mode will display. The numerical keypad is displayed, enter the right code to unlock.

### Note:

*If the anti-theft code is lost or forgotten, a charge will be incurred at the owner's expense by a Clarion service station to unlock the NX807.*

# 24. TROUBLESHOOTING

## General

Problem	Cause	Measure
Power does not turn on. (No sound is produced.)	Fuse is blown.	Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.
	Incorrect wiring.	Consult your installation center.
Nothing happens when buttons are pressed.  Display is not accurate.	The microprocessor has malfunctioned due to noise, etc.	Press the reset button with a thin rod.  <b>Note:</b> <i>When the Reset button is pressed, turn off the ACC power.</i> * When the Reset button is pressed, frequencies of radio stations, titles, etc. stored in memory are cleared.
The remote control unit does not work.	Direct rays of the sun fall on the light-receptive part of the remote control unit.	When direct rays of the sun fall on the light-receptive part of the remote control unit, it may not work.
	The battery of the remote control unit is dead or there is no battery in the remote control unit.	Check the battery of the remote control unit.

## DVD Player

Problem	Cause	Measure
Disc cannot be loaded.	A disc is already loaded.	Eject the disc before loading the new one.
	There is foreign matter already in the disc slot.	Remove the foreign matter, or consult a service station.
Sound skips or is noisy.	Disc is dirty.	Clean the disc with a soft cloth.
	Disc is heavily scratched or warped.	Replace with a disc in good condition.
Sound is bad directly after power is turned on.	Condensation may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with the power on.
Video images are not displayed.	The parking brake is not engaged.	Check that the parking brake is engaged.
Disc cannot play with the display "PARENTAL VIOLATION" shown.	Feature exceeds set parental level.	Release the view limitation or change the parental level. See the subsection "Setting up the parental level"

**USB Device**

Problem	Cause	Measure
USB device cannot be inserted.	The USB device has been inserted with wrong direction.	Reversing the connection direction of the USB device, try it again.
	The USB connector is broken.	Replace with a new USB device.
USB device is not recognized.	The USB device is damaged.	Disconnect the USB device and reconnect. If the device is still not recognized, try replacing with a different USB device.
	Connectors are loose.	
No sound heard with the display "NO FILE" shown.	No MP3/WMA file is stored in the USB device.	Store these files properly in the USB device.
Sound skips or is noisy.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.
The video image of iPod/iPhone is disturbed.	The TV Signal setting of the iPod/iPhone is not set correctly.	Set the TV Signal setting (NTSC/PAL) of the iPod/iPhone correctly.

**Bluetooth**

Problem	Cause	Measure
Cannot pair the Bluetooth enable device with the car audio system.	The device does not support the profiles required for the system.	Use another device to connect.
	The Bluetooth function of the device is not enabled.	Refer to the user manual of the device for how to enable the function.
The audio quality is poor after connection with a Bluetooth enabled device.	The Bluetooth reception is poor.	Move the device closer to the car audio system or remove any obstacle between the device and the system.

## SiriusXM Advisory Messages

Advisory Name	Description
Check Antenna	<p>The radio has detected a fault with the SiriusXM antenna. The antenna cable may be either disconnected or damaged.</p> <p>Verify that the antenna cable is connected to the SiriusXM Connect Vehicle Tuner. Inspect the antenna cable for damage and kinks. Replace the antenna if the cable is damaged.</p> <p>SiriusXM products are available at your local car audio retailer or online at <a href="http://www.shop.siriusxm.com">www.shop.siriusxm.com</a></p>
Check Tuner	<p>The radio is having difficulty communicating with the SiriusXM Connect Vehicle Tuner. The tuner may be disconnected or damaged.</p> <p>Verify that the SiriusXM Connect Vehicle Tuner cable is securely connected to the radio.</p>
No Signal	<p>The SiriusXM Connect Vehicle Tuner is having difficulty receiving the SiriusXM satellite signal.</p> <p>Verify that your vehicle is outdoors with a clear view of the sky.</p> <p>Verify that the SiriusXM magnetic mount antenna is mounted on a metal surface on the outside of the vehicle.</p> <p>Move the SiriusXM antenna away from any obstructions.</p> <p>Inspect the antenna cable for damage and kinks.</p> <p>Consult the SiriusXM Connect Vehicle tuner installation manual for more information on antenna installation. Replace the antenna if the cable is damaged. SiriusXM products are available at your local car audio retailer or online at <a href="http://www.shop.siriusxm.com">www.shop.siriusxm.com</a></p>
Subscription Updated	<p>The radio has detected a change in your SiriusXM subscription status.</p> <p>Press the "Enter" button to clear the message.</p> <p>In the U.S.A., visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> or call 1-866-635-2349 if you have questions about your subscription. In Canada, visit <a href="http://www.siriusxm.ca">www.siriusxm.ca</a> or call 1-877-438-9677 if you have questions about your subscription.</p>
Channel Not Available	<p>The channel that you have requested is not a valid SiriusXM channel or the channel that you were listening to is no longer available. You may also see this message briefly when first connecting a new SiriusXM Connect vehicle tuner.</p> <p>Visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> for more information about the SiriusXM channel lineup.</p>
Ch Unsubscribed	<p>The channel that you have requested is not included in your SiriusXM subscription package.</p> <p>Visit <a href="http://www.shop.siriusxm.com">www.shop.siriusxm.com</a> or call 866-635-2349 if you have questions about your subscription. In the U.S.A., visit <a href="http://www.siriusxm.com">www.siriusxm.com</a> or call 1-866-635-2349 if you have questions about your subscription or would like to subscribe to this channel. In Canada, visit <a href="http://www.siriusxm.ca">www.siriusxm.ca</a> or call 1-877-438-9677 if you have questions about your subscription or would like to subscribe to this channel or would like to subscribe to this channel.</p>

Channel Locked	The channel that you have requested is Locked by the radio Parental Control feature. See the Parental Control Lock/Unlock section, page 41 for more information on the Parental Control feature and how to access locked channels.
----------------	--

## TFT Screen

Problem	Cause	Measure
The image is not displayed.	The parking brake is not engaged.	Check that the parking brake is engaged.
The display is dark.	The Dimmer control is too low.	Adjust the Dimmer properly.
	The operating condition is not good.	The temperature inside the vehicle may be 0°C or lower. Set to an appropriate temperature (25°C or so) and check it again.
	The headlight of the vehicle is lit	The display is made dark at night to prevent the glare (When the headlight of the vehicle is lit in the daytime, the display gets dark).
There are red, green, and blue points in display.	-----	This is not a failure, but a phenomenon peculiar to a liquid crystal panel (The liquid crystal panel is produced according to technology with very high precision. Note that, though there are effective pixels of 99.99% or more, pixel missing or normally lit pixels account for 0.01%).

## 25. ERROR DISPLAY

If an error occurs, one of the following displays is displayed. Take the measures described below to solve the problem.

### **DVD/CD Player**

---

Display	Cause	Measure
<b>BAD DISC</b>	A disc cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
<b>Invalid Disc</b>	A disc is loaded upside-down inside the DVD deck and does not play.	Eject the disc then reload it properly.
<b>PARENTAL VIOLATION</b>	Parental level error.	Set the correct Parental level.
<b>Region code error</b>	Region code error.	Eject the disc, and replace correct region code disc.

# 26. SPECIFICATIONS

## FM Tuner

Frequency Range: 87.9 MHz to 107.9 MHz  
 Usable Sensitivity: 8 dB $\mu$ V  
 Stereo Separation: 25 dB (1 kHz)  
 Frequency Response: 30 Hz to 14 kHz

PBAP (Phone Book Access Profile)  
 SPP (Serial Port Profile)

Power Class: 2

## AM Tuner

Frequency Range: 530 kHz to 1,710 kHz  
 Usable Sensitivity: 30 dB $\mu$ V

## USB

Specification: USB 1.1/2.0 (FS)  
 Playable Audio format:  
 MP3,WMA,AAC,FLAC  
 Playable Video format:  
 AVI,MP4,MPG/MPEG,3gp

## DVD Player System

Digital Versatile Disc System with CDDA capable  
 Usable discs:  
 DVD video disc, Compact disc  
 Frequency Response: 20 Hz to 20 kHz  
 Signal/Noise Ratio: 88 dBA (1 W Ref)  
 Distortion: 0.05%  
 Video system: NTSC/PAL

## General

Power source voltage:  
 14.4 VDC (10.8 to 15.6 V allowable)  
 Ground: Negative  
 Current consumption: 4.0 A @1 W  
 Auto Antenna Rated Current: 500 mA less

## Audio/Video Input

Audio input voltage:  $\leq 2$  V<sub>rms</sub>  
 Video input voltage: 1.0 V<sub>p-p</sub>@75 $\Omega$   
 Audio input sensitivity (at 2 V output)  
 High: 325 mV<sub>rms</sub>  
 Mid: 650 mV<sub>rms</sub>  
 Low: 1.3 V<sub>rms</sub>

## Note:

- Specifications and design are subject to change without notice for further improvement.

## Audio/Video output

Video output voltage: 1.0 V<sub>p-p</sub> @75 $\Omega$   
 Screen Size: 6.95" wide type  
 Pixels: 1,152,000  
 Resolution: 800 x 480 x 3 (RGB)


**Power Output:**  
 19W RMS x 4 Channels at 4 $\Omega$   
 and  $\leq 1\%$  THD+N



**Signal to Noise Ratio:**  
 83 dBA(reference 1 W into 4 $\Omega$ )

## Bluetooth

Specification: Bluetooth Ver 4.0  
 Profile: HFP1.5 (Hands Free Profile)  
 HSP1.0 (Headset Profile)  
 A2DP (Advanced Audio Distribution Profile)  
 AVRCP1.2,1.3,1.4 (AV Remote Control Profile)

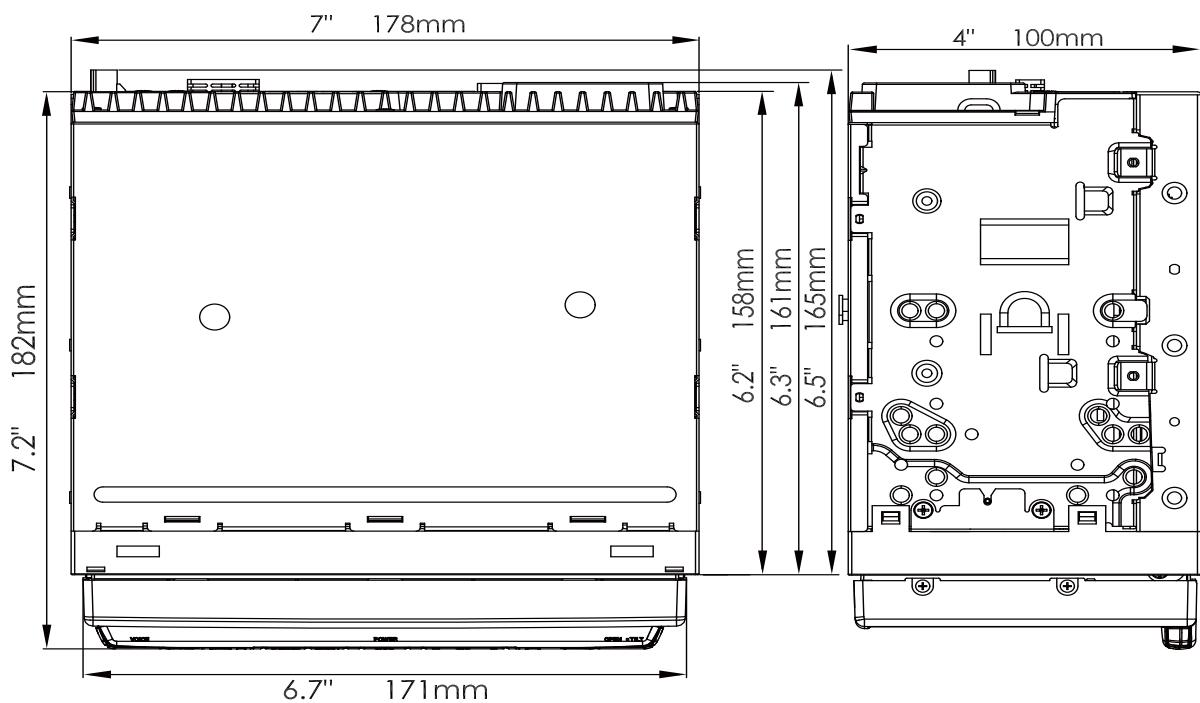


NX807 dimensions:


NX807 weight: 2.74 kg

## 27. WIRE CONNECTION GUIDE

**Note:**

- Before installing, be sure to disconnect the negative cable of the car battery.
- In the optional devices, the RCA cables and the Connector cables are separately-sold items.
- When connect the HDMI and USB cable, be sure to fix with the clamp.

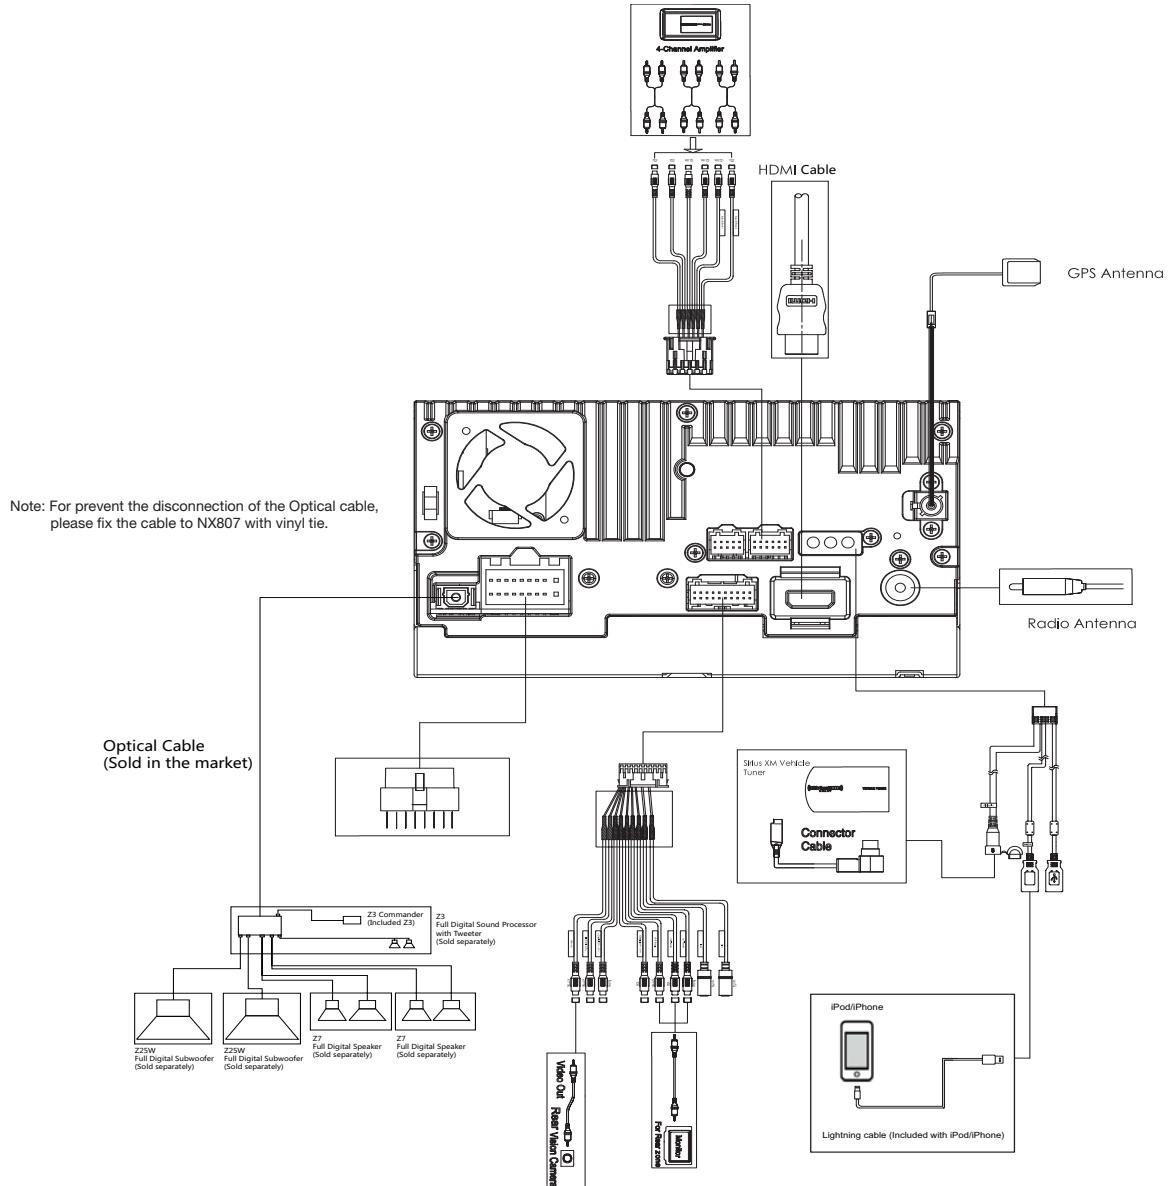

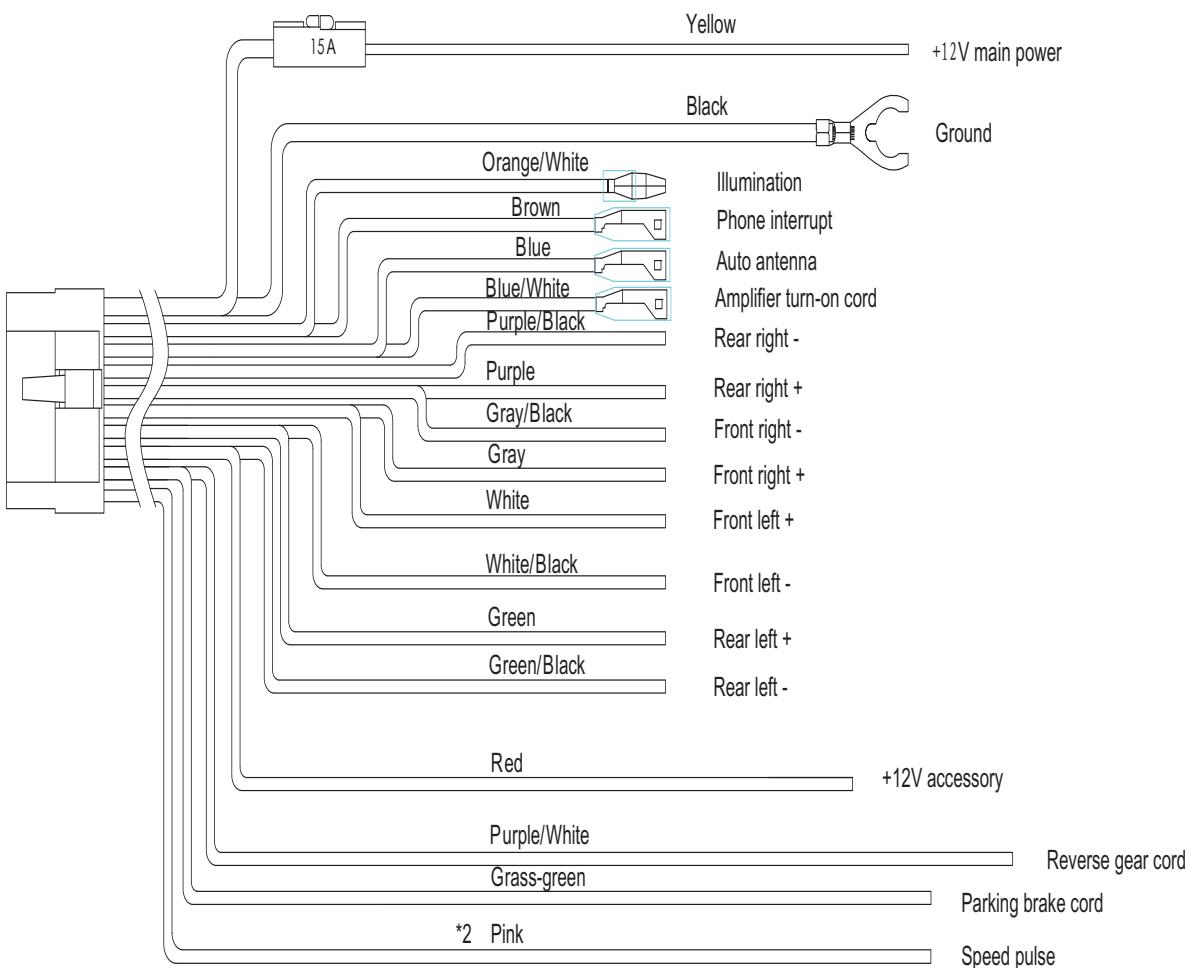

### Note:

\*1: Connecting the PHONE INTERRUPT terminal

The phone interrupt will mute the audio if the lead receives a negative or ground signal.

\*2: This product is connected here to detect the distance the vehicle travels.

Always connect the vehicle's speed detection circuit. Failure to make this connection will increase errors the vehicle's location display.

It is strongly suggested that the speed pulse wire be connected for accuracy of navigation and better performance.

2016/10

# Clarion Co., Ltd.

---

All Rights Reserved. Copyright © 2017: Clarion Co., Ltd.