



# FM Wireless Transmitter

## Operating Instructions



**- FOR HOUSEHOLD USE ONLY -**

## IMPORTANT SAFEGUARDS

### Signal Word Definitions

**NOTE:** These are definitions only and may not pertain to the product purchased.

**DANGER** - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

**WARNING** - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

**CAUTION** - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury or product/property damage. It also alerts against unsafe practices.



### READ ALL INSTRUCTIONS BEFORE USE.



**CAUTION--** To reduce the risk of personal injury or product/property damage:

- This product is not a toy. Keep out of the reach of small children and pets.
- Do not subject the product to violent shocks, extreme temperatures, or lengthy periods of direct sunlight.
- Do not place the product near or immerse the product in water or other liquids.
- Do not place the product near sources of heat sources.
- Do not attempt to examine or repair this product yourself. This product has no user-serviceable parts. Only qualified service personnel should perform any servicing; take the product to the electronics repair shop of your choice for inspection and repair.

#### Battery Handling and Usage:

**WARNING:** Only adults should handle batteries. Do not allow a child to use this product unless the Battery Compartment Cover is securely attached to the Battery Compartment in accordance with all product usage instructions.

- Follow the battery manufacturer's safety and usage instructions.
- Keep batteries away from children and pets.
- Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries.

- Insert the batteries observing the proper polarity (+/-) as indicated inside the battery compartment. Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Remove spent or discharged batteries from the product.
- Remove the batteries when the product will not be used for an extended period.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.
- **Battery Disposal:** Spent or discharged batteries must be properly disposed of and recycled in compliance with all applicable laws. For detailed information, contact your local solid waste authority.

#### **IMPORTANT INFORMATION REQUIRED BY THE FCC**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesirable operation. (3) Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio elevation reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

## Features and Controls



## Battery Installation

1. Open the Battery Compartment by pressing in the tab on the Battery Compartment Cover and removing it.
2. Insert two "AAA" alkaline batteries (not included) into the Battery Compartment, observing the proper polarity (+/-) as indicated inside the Battery Compartment.  
**CAUTION:** Use "AAA" alkaline batteries only.
3. Reattach the Battery Compartment Cover.  
**CAUTION:** To prevent product damage, remove the batteries when the product will not be used for an extended period.

## To Use

1. Connect the Audio Input Cord of the unit to the headphone jack or line out jack (preferred, if available) of a compatible portable audio device (e.g., CD or MP3 player).
2. Press the Power Button on the unit to turn it on; the red LED will illuminate indicating it is on.
3. Set the FM Band Selector on the unit to either: "88-92," "92-98," or "98-108," depending on which portion of the FM frequency band in the area has the fewest strong radio station signals; this will minimize interference.
4. Turn on the portable audio device and set the volume to a medium level.
5. Turn on the vehicle's radio and set it to a medium volume.
6. Slowly tune the radio through the FM band range selected in Step 2 until the audio from the portable audio device can be heard through the vehicle's speakers.  
**NOTE:** For best performance, fine-tune the unit using the Fine Tuning Wheel located on the side.  
**Tip:** It may take some time to find and fine-tune an open frequency on the radio, so it may be helpful to save the frequency to a radio preset (if available) to avoid having to repeat that process.
7. Adjust the volume of the portable audio device and/or the vehicle radio to a distortion-free level.

Item #C1700170  
Model #SF-140  
RA #951800

©2007 All Rights Reserved

Distributed By:  
Rite Aid Corp.  
Harrisburg, PA 17105

Made in China