

PDWX-800CD Quick Start Guide



Thank you for purchasing our 8 inch screen WIFI digital photo frame! We hope you enjoy the novel way of sending and displaying all digital photos!

Please read this manual thoroughly before operating the device, and keep it properly for future reference. This manual will help you use many exciting and useful functions, making it more interesting for you to view this WIFI digital photo frame which allows you to view digital photos, music and videos from the memory card. It also enables direct upload of photos, music and videos from smart phone. You will be able to use multiple transition effects to create slides or display one photo at a time without computer, digital camera or cable connection. Let's start to display your everyday fine photos, favorite music and videos in your WIFI digital photo frame.

Start Guide

Step 1: Connect to power supply

Connect the power plug to the DC port on the device, and the WIFI digital photo frame will start automatically

Step 2: Set WIFI photo frame language and time zone according to the guide

Please start setting based on the following guide after the WIFI digital photo frame shows the start-up page.

Choose available WIFI and input password

4, After WIFI connection is successful, you can scan QR code or search “uphoto go” on APP market to download this APP

5, Launch the mobile APP. You can choose to create a new account and use the account to scan the QR code on the photo frame or input photo frame device mode to bind the digital photo frame. After the binding is successful, you can send photos, music and videos from your smart phone to the WIFI digital photo frame.

How to operate the APP for smart phones

1, Scan QR code or go to the APP market to download “uphoto go” APP

2,

Launch the APP and you can create a new account. If you already have an account, please log in directly.

By scanning QR code or inputting device number, you can bind your cell phone to the photo frame. After the binding is successful, you can send photo right away.

4, Click photo frame and choose the photo you'd like to send from local album or click the camera to shoot a fresh photo. If you'd like to bind another photo frame, please click the return arrow on the top left corner. After the photo is successfully uploaded, the window will pop up prompt on updated content;

5, It allows sending up to 9 photos at a time

6, If one smart phone is bound to many photo frames, you can also send photos to multiple photo frames bound at the same time

7, In system setting, you can see multiple options and adjust them

How to use WIFI digital photo frame

The main menu is presented in the figure above. You can click the icons on the panel to access different functions, including album, music, video, calendar, weather and setting.

Album

When clicking “Album”, local album and cloud album will be displayed. If SD card is inserted, SD card will be displayed

There will be the following button options after selecting photo

Play single—click this icon to display the full photo.

Play all—click this icon to loop playback the photos in local album

Cut—choose the range to cut. Hold the screen with two fingers to zoom in or zoom out the cutting range.

Rotate—click this icon to adjust the photo to a suitable angle

Delete—delete current photo

Information—view current photo information

Click the arrow on the top left corner to exit the slide and to display different categories.

Music

Click music icon on the main interface to activate music player (support playing SD card or cloud music and USB disk music).

Select local music playlist. Click the function icon on the bottom to switch between play modes/previous/pause/next. Click the volume button to adjust the sound volume. You can also set to full screen mode.

Video

Click video icon on the main interface to activate video player (support playing SD card or USB disk videos)

Select local video playlist. Click the function icon on the bottom for previous/pause/next. Hold the right of the screen with your finger and slide up or down to adjust the sound volume. Click the left of the screen and slide up or down to adjust the screen brightness. Hold the screen with your finger and slide left or right to fast forward or playback the video.

Click return button to exit video play and to display different video place categories.

Click the return button on the top left corner to exit to the main interface

Calendar

Calendar can be viewed by clicking the calendar icon on the main interface, and switch between months by clicking the left and right arrows.

Weather

After connecting to the Internet, it will automatically identify and display the weather forecast for your city in 3 days to come.

Setting

Many choices are provided to customize your own WIFI digital photo frame on the setting interface

User Account

Click to add new user and it will pop up prompt “please scan and download the “album smart phone APP to bind”. Meanwhile, photo frame device QR code or device number will appear. Launch the smart phone end upphoto go APP and click to add photo frame. Choose to

scan device screen QR code or input device code. After the binding is successful, you can write down a new device name.

Click binding photo frame on smart phone end uphoto go App to view and display upload interface. Click upload icon to show camera, photo, video, music, cancel and other options. Camera, photo, video and music will be displayed in the corresponding cloud album, cloud music and cloud video after the upload is successful.

WIFI Setting

It is allowed to choose to turn on or off WIFI function via this functional setting. When WIFI is on, the photo frame will automatically scan and display nearby WIFI available. Select an available WIFI and input password, and your photo frame is connected to WIFI.

Customization

Language: 9 languages are available

Screen saver: set screen saver time

Screen saver type: includes fluorescent and album

Display mode: choose full screen, normal or stretch for images displayed on screen

Screen saver mode: activate or deactivate screen saver mode to adjust relevant setting

Play interval: adjust the image play time.

Play effect: adjust the image play effect.

Brightness: slide left or right to adjust device brightness

Voice: slide left or right to adjust device sound volume

Alarm

Adjust alarm time from the alarm setting. Add new alarm time via the + symbol on the top right corner.

Time Zone

Automatic date and time: activate or deactivate automatic date and time

Set date: set date manually

Set time: set time manually

Select time zone: select the needed time zone manually

24-hour system: activate or deactivate 24-hour system option

Storage

Display the local storage and cloud storage space information

About

The device name can be revised. It displays device number, software version, MAC address, check update and restore factory setting.

Update system or restore factory setting online. Once you choose to restore factory setting, all data or setting will be cleared

Important Safety Precautions

Please always obey these basic safety precautions when using the WIFI digital photo frame. It will reduce the risk of fire, electrocution and injury.

Warning: to reduce risk of fire or electrocution, please do not expose the product to rain or moisture.

Warning: to avoid electrocution, please do not dismantle the outer cover. There is no part repairable to the user inside the device. Please leave all services to eligible personnel.

FCC Caution.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.