



Portable Picture and Video Player

User Manual

Contents:

| | |
|--------------------------------|----|
| What's Included | 2 |
| Interface Features | 3 |
| Getting Started | 4 |
| Modes | |
| Clock Mode..... | 5 |
| Calendar Mode | 5 |
| Picture Mode | 6 |
| Music Mode | 7 |
| Video Mode | 8 |
| Photo & Music Mode | 9 |
| Folder Mode | 9 |
| Settings | |
| Language Set | 10 |
| Clock Set | 10 |
| Picture Set | 11 |
| Alarm Set | 12 |
| StartUp Set | 12 |
| Video Set | 12 |
| Default Set | 13 |
| Version | 13 |
| Technical Specifications | 14 |




What's Included:

1. Machine Picture and Video Player
2. AC Power Adapter
3. Remote Control
4. USB Cable
5. Audio/Video Cable
6. User Manual



Interface Features:

- 1. Stand
- 2. Battery cover
- 3. 4 in 1 Card slot
- 4. USB Host
- 5. Headphone Jack
- 6. A/V Output
- 7. CF Card slot
- 8. Power On/Off switch
- 9. DC Jack
- 10. Up
- 11. Down
- 12. Right
- 13. Left
- 14. Enter
- 15. Panel On/Off switch
- 16. Mute
- 17. Menu

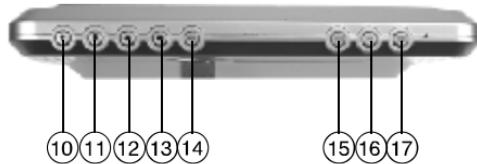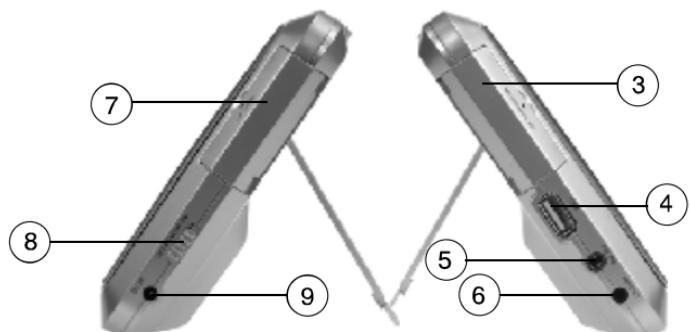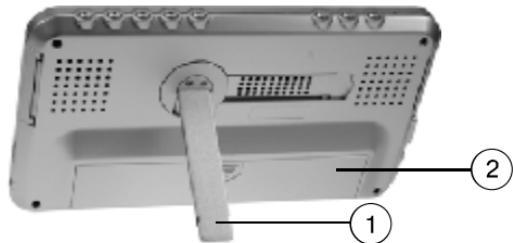

User Manual

3

Getting Started

The machine reads photo, video, and music files directly from removable storage media such as Secure Digital (SD) memory cards, Compact Flash (CF) memory cards, and USB flash drives. For a list of supported memory card types, see the Technical Specifications section. The multimedia player can be powered by the included AC adapter or a set of six AA batteries. Alkaline or rechargeable batteries are recommended. Please note that batteries are not charged automatically when the device is connected to the AC adapter. Rechargeable batteries must be charged in a separate battery charger (not included).

Connect the mini plug of the AC adapter to the DC IN socket at the side of the player and plug the adapter into a wall socket.

Remove the protective cover sheet on the LCD display.

Pull out the battery isolation tab in the battery compartment of the remote control unit.

Insert a memory card or USB device containing the photo, video, and music files you wish to enjoy. For a list of supported file types, see the Technical Specifications.

Turn the unit on using the switch on the right side. By default, the media player will start up in Picture mode. (The startup screen can be changed in the Setup menu). To view photos or videos or to listen to music, press the menu button on the remote or on top of the device, then use the arrow buttons to navigate to the appropriate icon. For example, highlight the video icon if you wish to view videos. Press Enter to select the mode you have highlighted. Each mode is described in separate sections of the user manual.

Modes

Clock Mode

The clock mode allows the machine to be used as a convenient and easy to read digital clock. The time will be displayed at the top of the screen. The current date is shown on the left side of the screen, and the time and date settings of the alarm are shown on the right side. Information on setting the clock and using the alarm can be found in the **Setup Menu** section.



Calendar Mode

In the Calendar Mode the screen will display the current month, as well as the time and alarm settings. You can view other months by pressing the up and down arrow buttons on the remote control or top panel. Changes to the time and alarm settings must be made in the **Setup Menu**.



Picture Mode

In Picture Mode, the machine will automatically begin a continuous slide show of the jpg picture files on the inserted memory card or USB device. To pause the slide show, press the Enter button. This will display a menu bar on the bottom of the screen, where several options are available:



Play/Pause - Pictures are shown in a continuous slide show. Pressing the Enter button repeatedly while this icon is highlighted will switch the unit between Play and Pause.

Stop - The slide show is stopped and the jpg files are displayed in File Mode.

Rotate - The currently displayed photo is rotated 90 degrees with each press of the Enter button. This is useful when viewing a photo that was taken with the camera held in a vertical orientation.

Zoom - The photo is magnified on the screen. The user can zoom in to the center of the image in up to four steps.

Previous - The previous photo is shown.

Next - The next photo is shown.

Information - The file name and other technical information about the picture is displayed.

Thumbnails - Small thumbnail images of the photos are displayed.



Music Mode

Music Mode allows you to use your machine as a personal music player. Music can be listened to through the built-in speakers or with headphones (not included). When the player is switched to this mode it will automatically begin playing the MP3 and WMA music files found on the inserted memory card or USB device. The menu bar will be shown at the bottom of the screen. The following options are available on the menu bar:



Play/Pause - Pressing the Enter button repeatedly while this icon is highlighted will switch the unit between Play and Pause.

Stop - The device is stopped and music files are displayed in File Mode.

Previous - Plays the beginning of the previous song.

Reverse - Skips to an earlier point in the current song. Select Play when you reach the section you want to hear.

Forward - Skips to a later point in the current song. Select Play when you reach the section you want to hear.

Next - Plays the next song.

Information - The file name and other technical information about the song is displayed.

Title Information - The title, artist, album, year and genre of the song are displayed if available.

Play Mode - Play modes include Standard, Repeat one and Dir repeat. To change the play mode, highlight the current mode and press Enter. The modes function as follows:

Standard - All songs are played once.

 
Repeat one - The current song is played continuously.

Dir repeat - The current directory (folder) is played continuously.

Volume is controlled by pressing the plus or minus buttons on the remote control. Mute buttons on the remote control and on the top of the player can be used to mute the sound. To adjust the volume using the buttons on the top of player, press the Menu button twice (so that no icons are visible on the screen), then use the right and left arrow buttons to increase or decrease the volume.

Video Mode

Video Mode is used to play **all** types of supported video files. For a list of supported file types, see the Technical Specifications section. Video clips are played one after another until the end of the last clip is reached.



The menu bar appears at the bottom of the screen when the Enter, up or down buttons are pressed. The following options are available on the menu bar:

Play/Pause - Pressing the Enter button repeatedly while this icon is highlighted will switch the unit between Play and Pause.

Stop - The device is stopped and switched to File Mode.

Previous - Plays from the beginning of the previous video clip.

Reverse - Skips to an earlier point in the current video clip. Select Play when you reach the section you want to watch.

Forward - Skips to a later point in the current video clip. Select Play when you reach the section you want to watch.

Next - Plays the next video clip.

Information - The file name and other technical information about the video clip is displayed.

Zoom - The video image is magnified on the screen. The user can zoom in to the center of the image in up to four steps.

Photo and Music Mode

This mode will allow you to display a slide show of your photos with your music playing. The menu bar options are the same as those found in the Music Mode. The slide show cannot be paused in this mode.



Folder Mode

When entering the Folder Mode from the main menu bar, you can see the directories and all supported files (such as jpg, mp3, and avi) stored on the memory card or USB device. The left and right arrow buttons are used to navigate among the directories. It is also possible to select between multiple storage devices. For example, you can have an SD card, Compact Flash card and USB flash drive connected to the player at the same time. When a file is selected, the player will enter the mode that corresponds with the chosen file type. For example, if a jpg file is selected, the player will switch to Picture Mode and begin showing all photos on the memory device.

Settings

Press the up or down arrow buttons to choose from among the following setting menus.



Language Set

To change the display language, press the right arrow button to enter the language selection menu. Use the up or down arrow buttons to highlight the language you want and press Enter to select it. Press the left arrow button to exit this menu.



Clock Set

This is where you can set the time and date. Press the right arrow button to enter the menu. Highlight the number you want to adjust and press the up or down arrow buttons to change the number. Press the left or right arrow buttons to move to a different number. Continue until all numbers are correct. GMT allows you to set the difference between your time zone and Greenwich Mean Time. When finished, press Enter to exit this menu.



Picture Set

Press Enter to access the settings.


Slideshow Mode - Press the right arrow button to access a drop-down menu. Use the up or down arrow buttons to highlight Fast, Middle or Slow (the highlight is a yellow border around the word). Press Enter to select the slide show speed.

Picture Play Mode - Press the right arrow button to enter the menu. Use the up or down arrow buttons to select the style of transitions you prefer for the slide show. Press Enter to select. Press the left arrow button to exit this menu.

Picture Display Mode - Press the right arrow button to access a drop-down menu. Use the up or down arrow buttons to highlight Full or Smart. Full will display photos in the original shape. Smart takes advantage of the whole screen. Press Enter to select the display mode. Press the left arrow button to exit this menu.

Frame Direction - Press the right arrow button to access a drop-down menu. Use the up or down arrow buttons to highlight horizon or vertical. Select vertical if you want all of your photos turned 90 degrees. Press Enter to select the mode.

Press the left arrow button to leave the **Picture Set** menu.

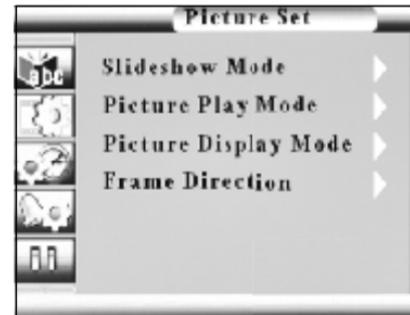

Alarm Set

The date and time of the alarm can be changed, as well as the ring style and mode - Off, Once or Day (daily). Just like in Clock Set mode, changes are made using the up and down arrow buttons.




StartUp Set

The StartUp Set menu determines which screen appears when the unit is first turned on. Press Enter to access the menu, then use the up or down arrow buttons to highlight your choice. Press Enter to move the asterisk, and then press the left arrow button to exit the menu.



Video Set

Options in the Video Set menu include Brightness, Contrast and Color Saturation. Press Enter to access the menu, and then use the left or right arrow buttons to adjust the settings. Press Enter again to exit the menu.

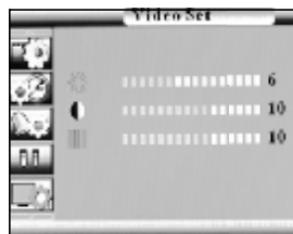

Default Set

In this menu, the player's default settings can be restored and the USB mode selected. Press Enter to access the menu. To restore the default settings, highlight Default Set and press Enter. The USB Mode can be set to Device or PC. Select Device if you want to be able to connect a USB device to the player and read the files stored on the device. Select PC if you want to use the supplied USB cable to connect the player to a computer. This allows you to transfer files between the computer and a memory card in the player. Highlight USB Mode and press Enter. Then use the up or down arrow buttons to highlight Device or PC and press Enter again. Press the left arrow button to exit the menu.



Version

This screen is for information only. It displays the version number of the firmware.

Technical Specifications

| | |
|-----------------------|---|
| Product: | 7.0" LCD Screen Picture and Video Player |
| Input Formats: | Secure Digital, Multi Media Card, Compact Flash, xD Picture Card, Memory Stick, Memory Stick PRO, Memory Stick PRO DUO and USB Flash. |
| File Format: | MPEG1 & 2, MPEG 4, DIVX, RMP4, XVID, MP3, WMA, JPEG, AVI. |
| Features: | Music Slide Show Mode Range of transitional Styles for Slide Show Variable speed for Slide Show. |
| USB Ports: | USB port (PC/Device) |
| Systems: | Win 2000/XP |
| Power Input: | External 9V DC Adapter or 6 x AA batteries |
| Output: | Headphone Jack for Private Listening Stereo Audio & Video Output (Composite Video) for TV |
| Weight: | 450g. (without batteries) |
| Dimensions: | 220 x 125 x 30 mm. |

FCC Notification:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT.

SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.