

USER MANUAL

IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

HOW TO OPERATE YOUR TRANSCEIVER

1. Remove screw and open battery door and snap in a g-volt battery.
(Alkaline batteries recommended)
2. Press the “PUSH TO TALK” Switch for transmitting.
3. Release “PUSH TO TALK” switch for receiving.
4. When transmitting, Speak clearly in a normal voice, holding the set about 3” from your mouth.
5. Best transmission and reception are obtained when the antenna is held in a vertical position, and fully extended.

HOW TO USE MORSE CODE FUNCTION

1. For transmitting a signal, Turn the “ON-OFF” switch to “ON” position.
2. While pushing the push to talk button, press the morse code button momentarily and release for desired signal.
3. When back to communications again, use normal push to talk operation.
- 4.

CAUTION

1. Your transceiver set has been fully adjusted prior to shipment from the factory and be sure not to touch the internal components other than battery.
2. When the sound becomes weak, it is time to change the Battery.
3. After use, always return the ON-OFF Switch to the OFF position.
4. Keep your set in dry and clean place.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.