


## IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.


### HOW TO OPERATE YOUR WALKIE TALKIES

1. Remove screw and open battery door and snap in a 9-volt battery, (Alkaline batteries recommended)
2. Turn the "ON-OFF" Switch to "ON" position.
3. Press the "PUSH TO TALK" switch for transmitting.
4. Release "PUSH TO TALK" switch for receiving.
5. When transmitting, speak clearly in a normal voice, holding the set about 3" from your mouth.
6. Best transmission and reception are obtained when the antenna is held in a vertical position.
7. Operation range-up to 300 feet, line of sight, in open area without obstruction & interference.

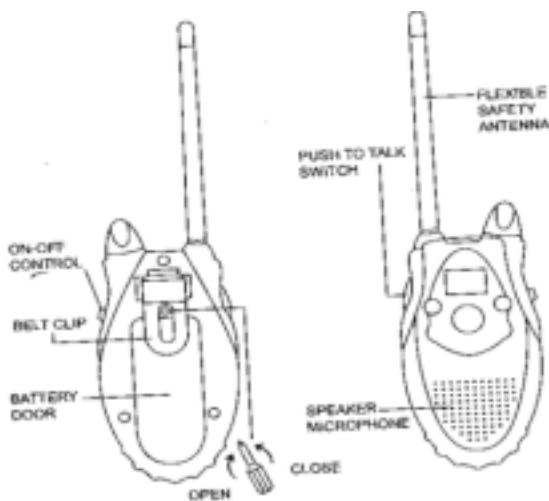

### HOW TO OPERATE YOUR TRANSCEIVER

1. Remove screw and open battery door and snap in a 9-volt battery.
2. Press the "PUSH TO TALK" switch for transmitting.
3. Release "PUSH TO TALK" switch for receiving.
4. When transmitting, speak clearly in a normal voice, holding the set about 3" from you mouth.
5. Best transmission and reception are obtained when the antenna is held in a vertical position, and fully extended.

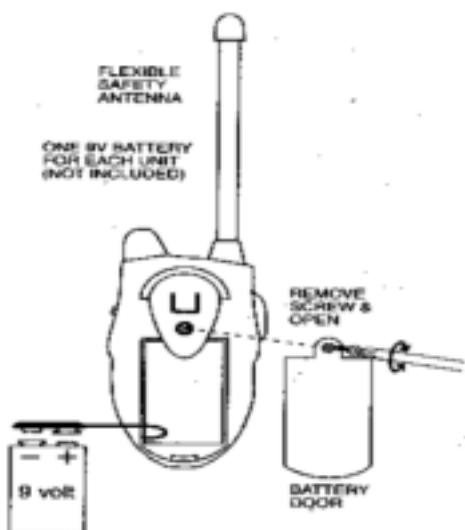

To replace, push the cover, note polarity of batteries, remove and replace with two new ones, never let a child use this product unless battery door is secure. Batteries and small objects and could be ingested. Keep all batteries away from small children.

**CAUTION:** To avoid battery leakage:

1. For best performance, always use new alkaline batteries.
2. Do not mix old and new batteries.
3. Always remove dead batteries.
4. Remove batteries before storing.
5. Do not mix alkaline, lithium, "standard", "heavy duty", or rechargeable nickel cadmium batteries.
6. Insert batteries correctly.
7. Always follow toy and battery manufacturer's instructions regarding use and disposal.

**CAUTION**

1. Your Walkie Talkie set has fully adjusted prior to shipment from the factory and be sure not to touch the internal components other than battery.
2. When the sound becomes weak, it is time to change the battery.
3. After use. Always return the ON-OFF Switch to the OFF position.
4. Keep your set in a dry and clean place.

**CAUTION**

1. Your transceiver set has been fully adjusted prior to shipment from the factory and be sure not touch the internal components other than battery.
2. When the sound becomes weak, ti is time to change the battery.
3. After use, always return the ON-OFF switch of the OFF position.

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.**