

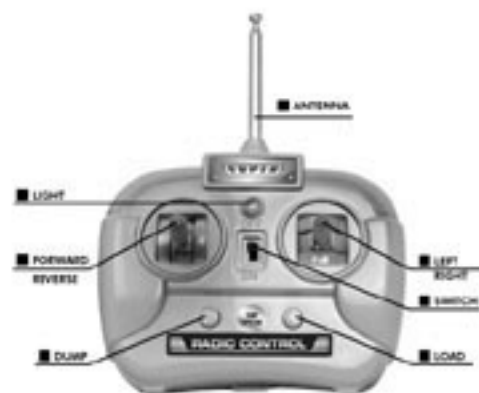


# RADIO CONTROL SCRAPER TRUCK INSTRUCTION


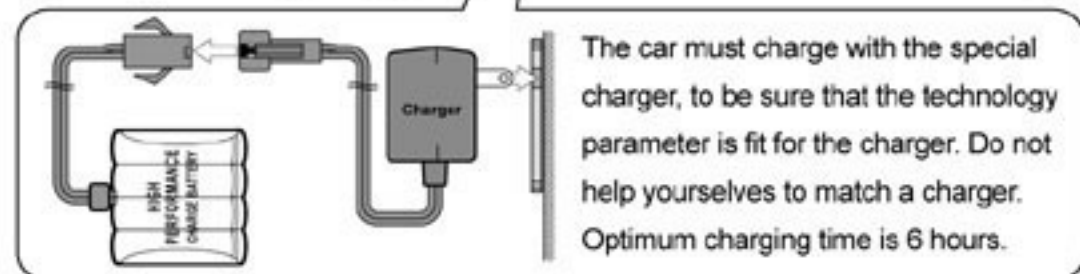


1. Open the cover put in the 9V battery, turn the switch to "ON".

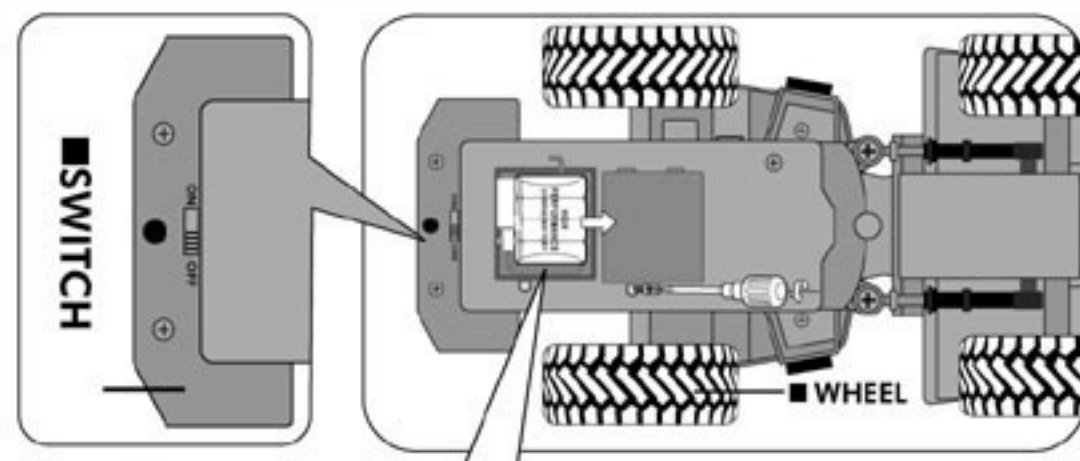

2. Open the battery cover with the screw driver, load 4 pieces "AA" batteries in the compartment. And take the switch to "ON".


☐ 3058    ☐ 3058-2    ☐ 3058-1  
☐ 3358    ☐ 3358-2    ☐ 3358-1

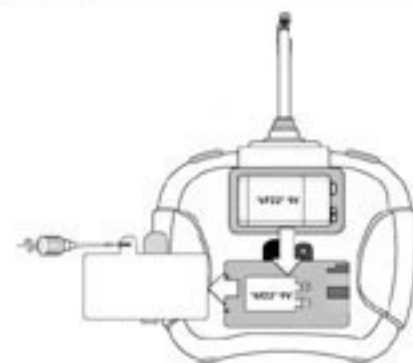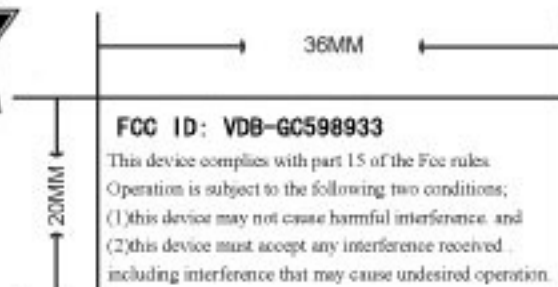

3. Turn the lever forward and backward, to control the scraper truck forward and backward.



4. Press the key to control the scraper up and down.

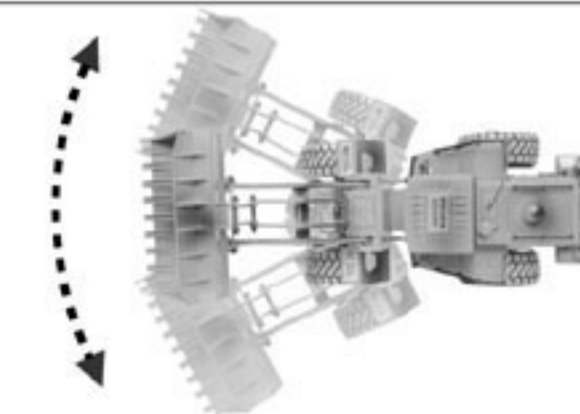

5. Turn the lever left and right let the scraper truck swing.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.





# Construction Digger

## INSTRUCTION

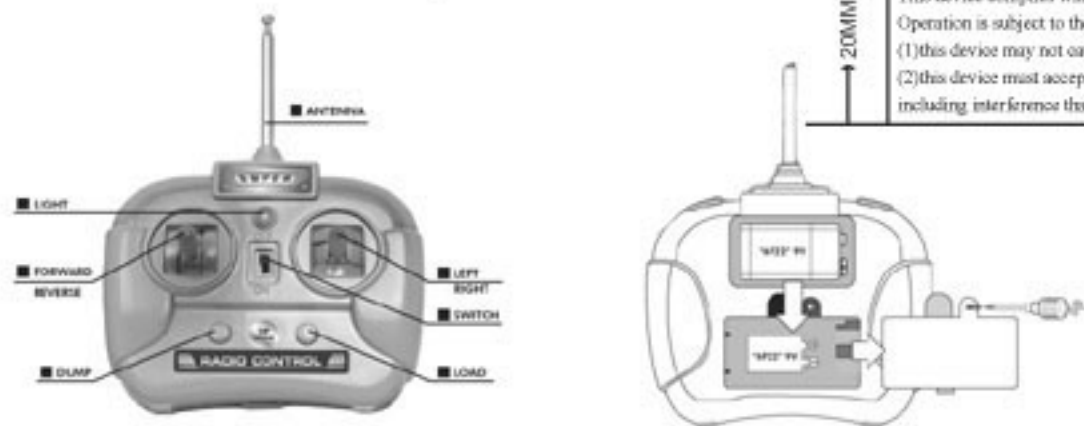

1. Open the cover put in the 9V battery, turn the switch to "ON".

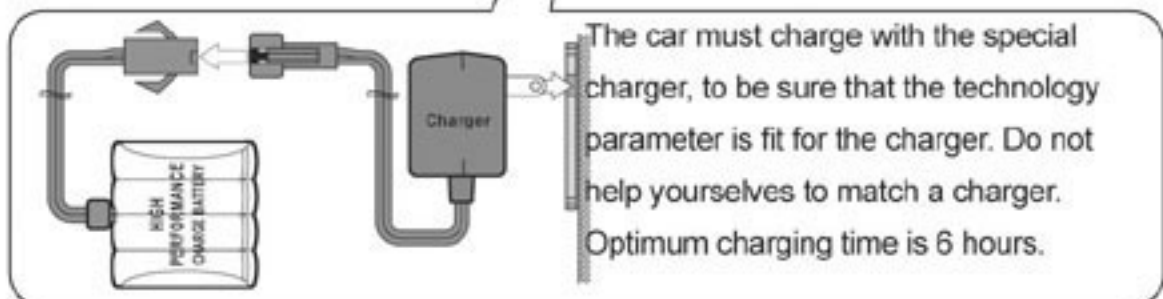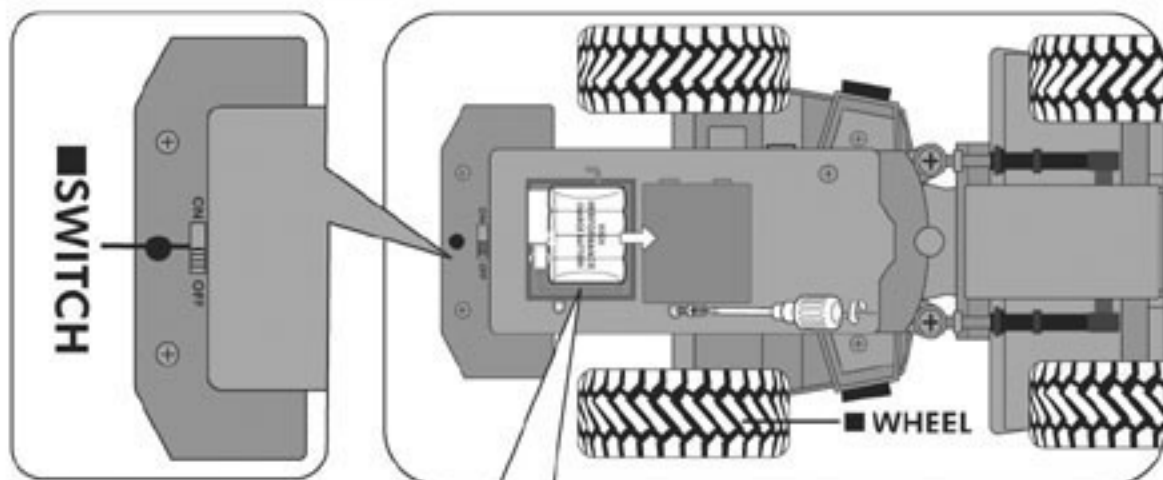

2. Open the battery cover with the screw driver, load 4 pieces "AA" battery in the compartment. And take the switch to "ON".

☐ 3068

☐ 3068-1

☐ 3068-2

☐ 3368

☐ 3368-1

☐ 3368-2

FCC ID: VDB-GC598933

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.



3. Turn the lever forward and backward, to control the roter truck forward and backward.



4. Press the key to control the roter up and down.



5. Turn the lever left and right let the roter truck swing.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help






**WARNING:**  
CHOKING HAZARD - Small parts  
Not for children under 3 years.

# RADIO CONTROL DUMP TRUCK INSTRUCTION

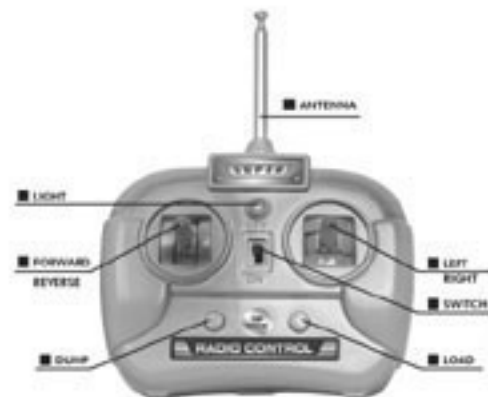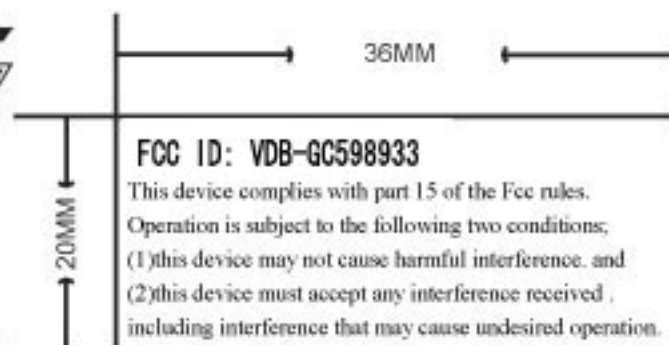

1. Open the cover put in the 9V battery, turn the switch to "ON".

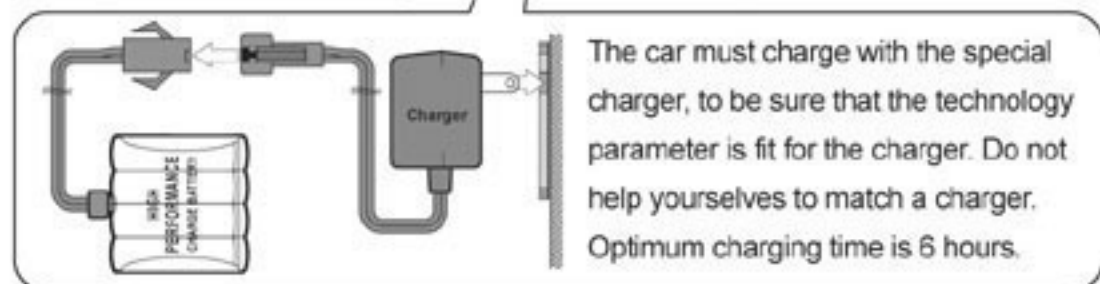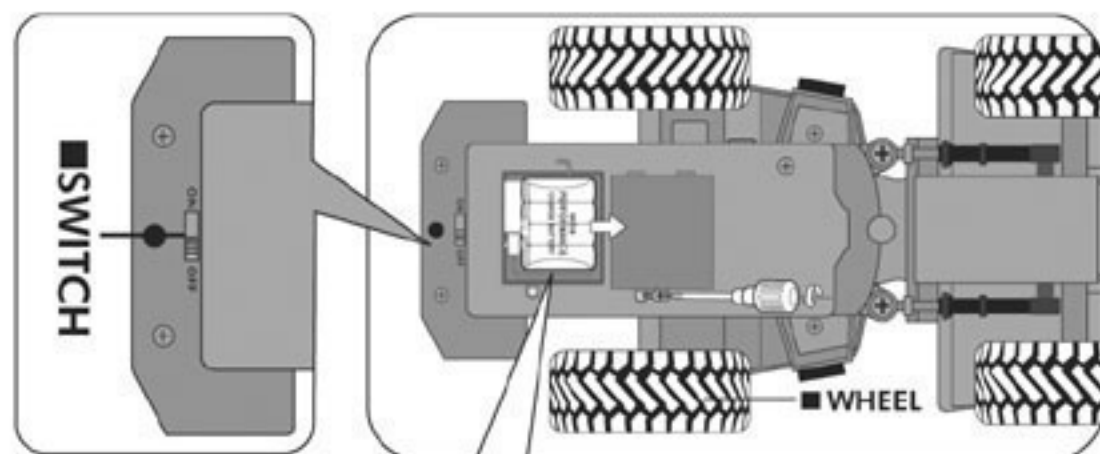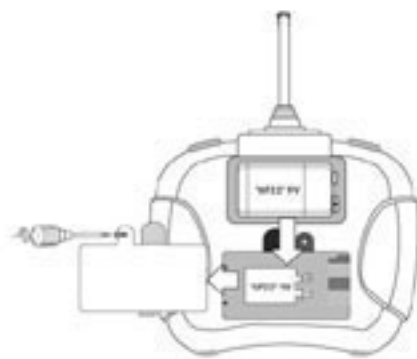

2. Open the battery cover with the screw driver, load 4 pieces "AA" battery in the compartment. And take the switch to "ON".

☐ 3078 ☐ 3078-1 ☐ 3078-2


☐ 3378 ☐ 3378-1 ☐ 3378-2



3. Turn the lever forward and backward, to control the dump truck forward and backward.



4. Press the key to control the dumper up and down.

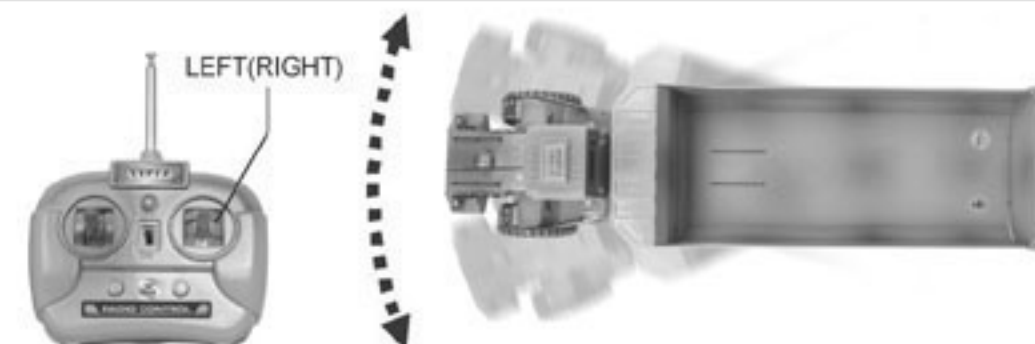

5. Turn the lever left and right let the dump truck swing.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.







# RADIO CONTROL AGITATOR TRUCK INSTRUCTION

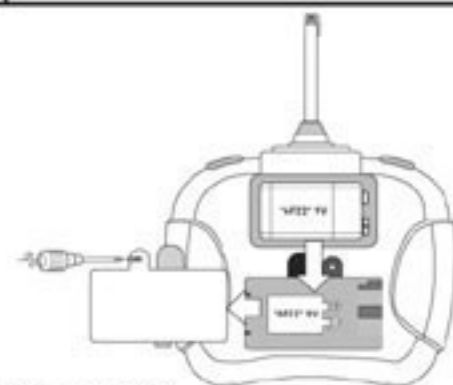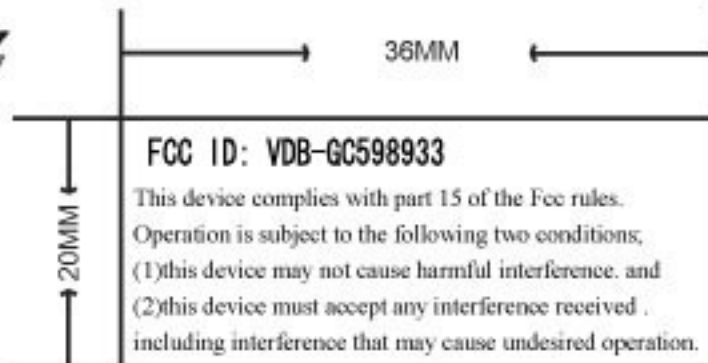

1. Open the cover put in the 9V battery, turn the switch to "ON".

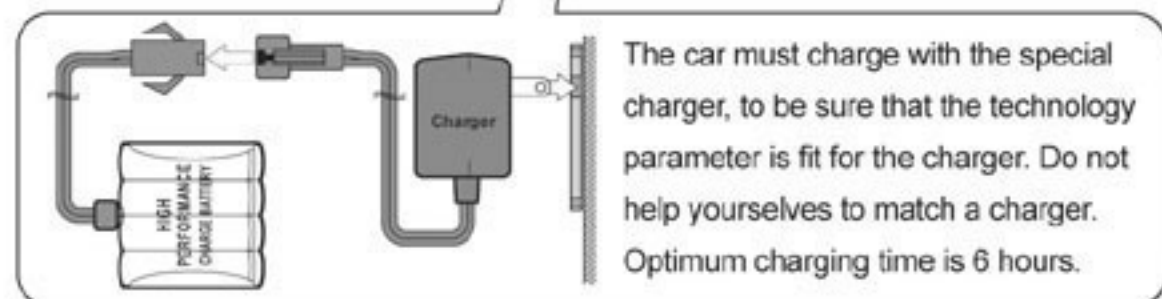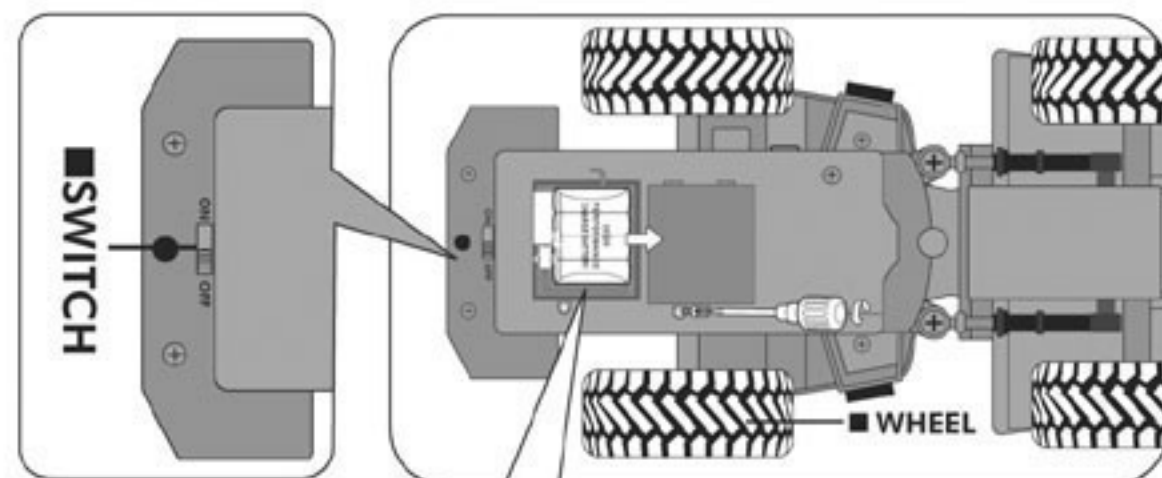

2. Open the battery cover with the screw driver, load 4 pieces "AA" battery in the compartment. And take the switch to "ON".

- |                               |                                 |                                 |
|-------------------------------|---------------------------------|---------------------------------|
| <input type="checkbox"/> 3098 | <input type="checkbox"/> 3098-1 | <input type="checkbox"/> 3098-2 |
| <input type="checkbox"/> 3398 | <input type="checkbox"/> 3398-1 | <input type="checkbox"/> 3398-2 |



3. Turn the lever forward and backward to control the agitator truck forward and backward.



4. Press the key to control the agitator up and down.

UPTURN  
DOWNWARDS



5. Turn the lever left and right let the agitator truck swing.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

