


IMPORTANT INFORMATION REQUIRED BY THE FCC

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

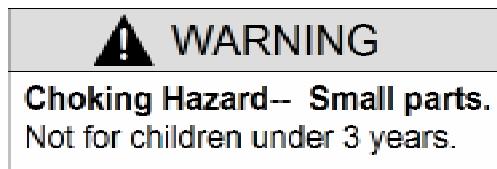

⚠ CAUTION-- To reduce the risk of personal injury or product/property damage:

- Do not immerse the product in water or other liquid.

Battery Handling and Usage

WARNING: Keep batteries away from children and pets.

- Do not mix a used battery with a new battery, or mix different chemistries or sizes of batteries.
- Insert the batteries observing the proper polarity (+/-) as indicated inside the Battery Compartment.
CAUTION: Failure to properly align the battery polarity can cause personal injury and/or property damage.
- Never throw batteries into a fire. Do not expose batteries to fire or other heat sources.

Installing Batteries of Light:

Slide the Power Switch to OFF. Open the Battery Compartment and place four "AAA" size alkaline batteries (not included) into the Battery Compartment according to the polarity indications. Close the Battery Compartment.

Replacing Light Switch Battery:

1. Remove the front of the Light Switch as described below.
2. Remove the spent battery and place a new A23, 12-volt, alkaline battery into the Battery Compartment, correctly observing the polarity indications.
3. Replace the front of the Light Switch with the Screws.

To Set Up

- *The Light may be operated without the Light Switch (see "To Use" section).*
- *Both the Light and Light Switch have a key hole for one mounting option. If desired, place the keyhole onto a screw or nail that will safely support the item.*

APPLICANT: ATICO INTERNATIONAL (ASIA) LTD.

FCC ID: VDDATICO01

1. Activate Light Switch battery:
 - a. Remove the Screw Covers from the Light Switch by turning them counterclockwise with a flathead screwdriver. Then, use a Phillips screwdriver to remove the Screws (see figure).
 - b. Lift the front of the Light Switch off the back. Pull the plastic tab out of the Battery Compartment and replace the front.
2. Place the Light and the Light Switch in the desired locations. Slide the Power Switch to  (ON - Light Switch Operation).



NOTE: Maximum range for the Light Switch is 98 ft (30 m) and large metal objects may interfere with the signal.

3. Press one end of the Light Switch to illuminate the Light and the other end to shut off the Light. If the Light does not respond, reposition the Light, the Light Switch, or both.

Mount Light and Light Switch Using Adhesives:

1. Stick two Mounting Adhesives onto the back of the Light and the Light Switch.
2. Firmly press the Light and Light Switch against the clean, desired mounting surfaces.

Mount Light Switch Using Screws and Anchors:

1. Remove the front of the Light Switch. Place the back of the Light Switch against the mounting surface. Mark the screw holes (two smallest holes in the back).
2. Drill two $\frac{1}{4}$ -inch holes where marked and insert Anchors into the holes.
3. Align the screw holes with the Anchors and secure with two Screws.
4. Replace the front of the Light Switch.

To Use

1. Slide the Power Switch to  (ON) or  (ON - Light Switch Operation).
2. If operating with the Light Switch, press one end of the Switch to illuminate the Light and the other end to shut off the Light.
3. To turn off the Light, slide the Power Switch to OFF. Turn off the Light when not using it for an extended period.

Item #A14C0606

WIC #559044

©2007 All Rights Reserved

Distributed By:

**East West Distributing Co.
Deerfield, IL 60015-4616**

Made in China

APPLICANT: ATICO INTERNATIONAL (ASIA) LTD.

FCC ID: VDDATICO01

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

APPLICANT: ATICO INTERNATIONAL (ASIA) LTD.
FCC ID: VDDATICO01