

USER GUIDE

Thank you for purchasing Hi-SPORT multifunctional bait boat!

1. Technical Specifications:

Electrical system: 12V DC

Range: 500 – 1000 meters depend on weather and environmental conditions.

Radio handset: 75Mhz

Batteries: 12V/10AH lead-acid for bait boat, Ni-MH AA 1500mAh 1.2V

Running time (at max speed): 2+ hours

2. Operation:

A.

**MOTOR TRIM: BALANCE THE TWO MOTOR'S SPEED
AND KEEP THE BOAT GOES STRAIGHT.**



- a. Go forward: push the right hand joystick forward.
- b. Go reverse: push the right hand joystick backward.
- c. Turn left: push the right hand joystick right.
- d. Turn right: push the right hand joystick left.

SEASOUL (CHANGZHOU) CO., LTD.

✉: A604, Construction Mansion, Hanjiang Road, Changzhou 213022, China
☎: +86 519 5195515, 5195516 ✉: +86 519 5195868 ✉: hi-sport@263.net

- e. Turn right: push the right hand joystick left.
- f. Open the left bait hopper: push the left hand joystick left.
- g. Open the right bait hopper: push the left hand joystick right.
- h. Release the left rig (hook): push the left hand joystick up.
- i. Release the right rig (hook): push the left hand joystick down.
- j. Motor trim: balance the motors' speed and keep the boat goes straight.
- k. Lights on/off: Turn on/off the lights from range.
- l. Lure hopper on/off: run the optional lure hopper in the back of the boat.

H. Return the boat to the bank side.

- a. Do not stop or pick up the boat by the aerial, as damage will occur.
- b. Switch off the boat, then the transmitter.

Fail-safe: The Range of the boat is 500m-1000m depend on weather and environmental conditions. In case the signal is weak, the boat will no longer go forward but make a big circle and come back to the range you can control.

Additional notes

- i) It is important that the transmitter is not turned off before the boat.
- ii) The transmitter should be protected from water at all times.

Guarantee

Seasoul offers you a 24 months warranty from the date of purchase. The guarantee covers any defects arising from the drive unit and the electrical and electronic parts of the boat, faulty material or workmanship. It does not cover batteries, damage arising from improper use, breakage, or normal wear of the boat or associated equipment. The guarantee is invalidated if repairs or modifications are undertaken by unauthorised persons.