

SLTV15MS3D


15

**WIDE TFT-LCD TV
Owner's Manual**

Please read this manual carefully before operating your set.

15" WIDE TFT-LCD TV

Owner's Manual

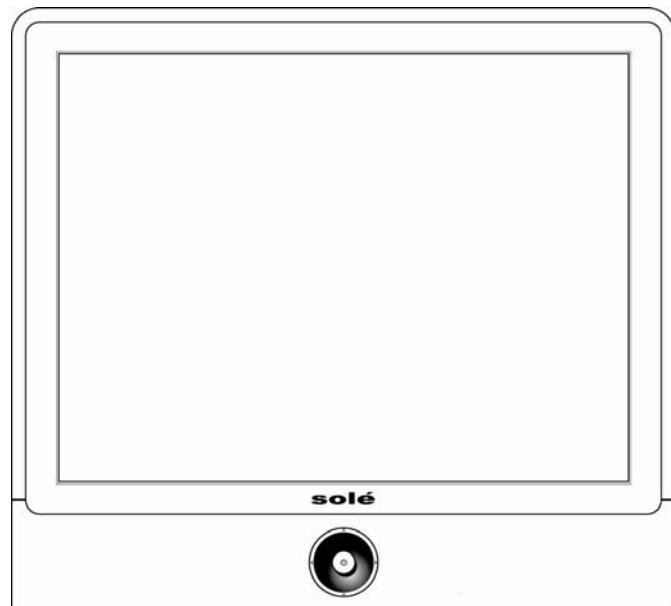



Thank you for buying our 15" LCD TV.

Please take the time to read this manual for the best performance of this TV.

Please keep this manual for future reference.

The present home appliance is certified and approved by EMC/EMI and can be used in all places including residency area.

Information in this manual is subject to change without prior notice.

Ver 1.00ASO

FCC Information

This equipment has been tested and found to comply with limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and radiates radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio Communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause unacceptable interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced Radio/TV technician for help.

Caution

Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SAFETY INSTRUCTIONS

Notes & Descriptions

To reduce the risk of fire, electrical shock and other injuries, keep these safety precautions in mind when installing, using and maintaining your TV.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

A warning that an apparatus with class I constructions shall be connected to a main socket outlet with a protective earth connection.



<Warning> : If you manipulate against the notice, it may cause serious injury or death to user.



<Caution> : If you manipulate against the notice, it may cause slight injury to user or appliance.



To preserve the Environment do not rubbish.

Warning	
	For added protection for this product during a lighting storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna.
	Do not attempt to touch its power cord with wet hands. If any electric pin is wet or dusty, remove the moisture or dust first before use.
	It is recommended to pull out the power cord unless you use it for a long time.
	Damaged power cord, plug or unfitted outlet may be very dangerous.
	Do not use the product close to any heat sources such as radiators, heat registers, stoves, or other products that produce heat.
	Do not cover or block vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product.
	Do not place the product on an unstable cart, stand, tripod or table. Placing the product on an unstable base can cause the product to fall, resulting in serious personal injuries as well as damage to the product.
	If you notice any smog or scorched smell from the product, unplug power cord and refer servicing to qualified service personal.
	To prevent fire or shock hazard, do not expose this product to dripping or splashing. No objects filled with liquids, such as vases, should be placed on the product.
	Do not use or place any combustible sprayer or inflammable substances close to the product.
	An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits.



Use a soft damp cloth and gently wipe the surface of the display panel.


 **Caution**



Turn off the main power and unplug the AC cord from the wall outlet before handling.



Ventilation should be always open and the set should be placed in a well-ventilated and wide enough place (a minimum distance away from a wall 10cm or more).

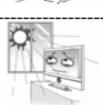

Select a place with no direct sunlight.

Available Temperature & Humidity

Operating Temperature	0 ~ 40°C
Storage Temperature	-10 ~ 50°C
Operating Humidity	10 ~ 80% RH
Storage Humidity	1- ~ 90% RH

For dot defect [dead pixel] of LCD :

TFT-LCD produced by using high-end semiconductor technology with precision of 99.9% above is used for this TV (2,359,296 pixels).

However the pixels of R.G.B. & White color seem to be bright sometimes or some of black pixels could be seen on the LCD. This is not from bad quality or functional problem and you can use it without any problem.

When used as a PC monitor :

Optimal Resolution : 1024 x 768 @ 60Hz

Contents

FCC Information	3
Caution	3
SAFETY INSTRUCTIONS	4
CHAPTER 1. Before Use	10
1-1. Accessories	10
1-2. Panels	11
1-2-1. Front Panels	11
1-2-2. Rear Panels	12
1-3. Remote Control	13
1-4. MENU Configuration	15
1-5. Insert Remote Control Batteries	16
CHAPTER 2. Connection	18
2-1. Preparation	18
2-2. Connecting Power	18
2-3. Connecting TV Antenna	18
2-4. Connecting Video / S-Video	19
2-5. Connecting DVD	19
2-6. Connecting HDMI	20
2-7. Connecting PC	21
2-8. Connecting Lineout (External Speaker)	21
2-9. Source Selection	22
CHAPTER 3. Remote Control	24
3-1. Use Remote Control	24
CHAPTER 4. TV Functions	27
4-1. Watching TV	27
4-2. V-CHIP	30
4-3. Closed Caption	33
4-4. Time Zone Setting	35
CHAPTER 5. Picture Mode	37
5-1. Picture Mode Setting	37
5-2. Picture Mode – <User> Setting	37
5-3. Image Scale Setting	38
CHAPTER 6. Sound Mode	40

6-1. Sound Mode Setting	40
6-2. Sound Mode – <User> Setting	40
6-3. Surround Sound Mode Setting	40
CHAPTER 7. Timer Setting	43
7-1. Sleep timer	43
7-2. Menu Timeout.....	43
CHAPTER 8. PC Functions.....	45
8-1. Preparation	45
8-2. Auto Adjustment	45
8-3. Phase	45
8-4. H/V Position.....	46
8-5. Image Scale Setting	46
CHAPTER 9. Option Setup	48
9-1. Menu Language.....	48
9-2. Factory Reset	48
9-3. Version Check	48
CHAPTER 10. Specifications.....	50
10-1. Dimensions.....	50
10-2. Specification	51
CHAPTER 11 Troubleshooting.....	53
11-1. Troubleshooting	53

CHAPTER 1. Before Use 10

1-1. Accessories 10

1-2. Panels 11

1-2-1. Front Panels 11

1-2-2. Rear Panels 12

1-3. Remote Control 13


1-4. MENU Configuration 15

1-5. Insert Remote Control Batteries 16


CHAPTER 1. Before Use

1-1. Accessories


Please make sure the following items are included with your LCD TV.
If any items are missing, contact your dealer.

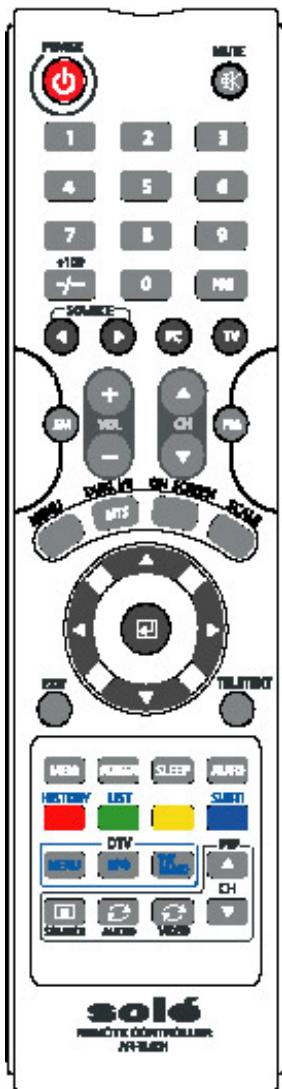


AAA-type battery(x2)

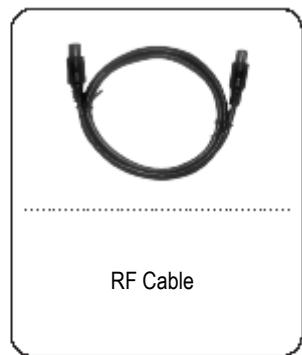

RF Cable

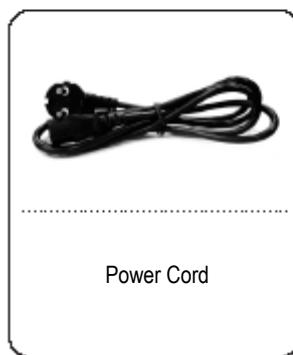

Power Cord

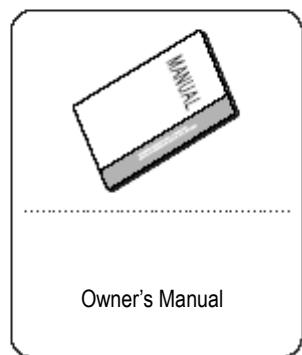



Owner's Manual



AC/DC 12V Adaptor

1-2. Panels

1-2-1. Front Panels

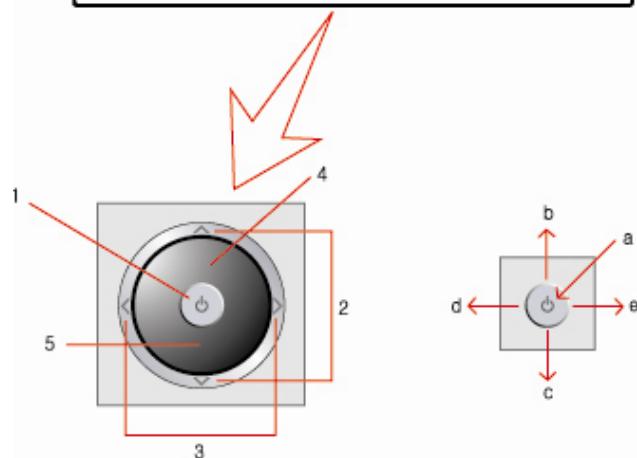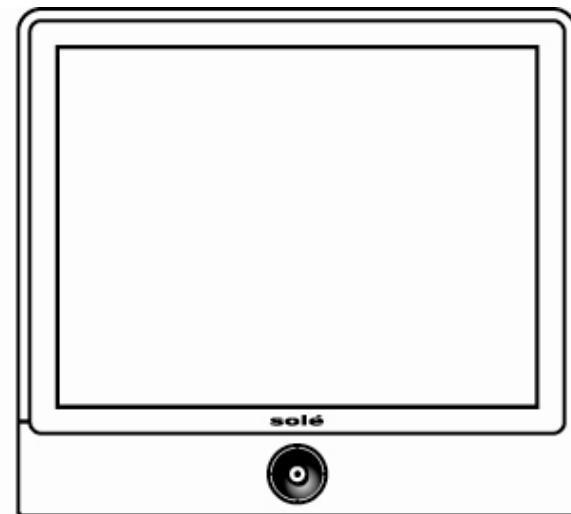


- 1. Power / Menu
- 2. Channel Button
- 3. Sound Control
- 4. Remote Control Sensor
- 5. LED

- a. Power-On/Off
- b. Auto / Move above Menu
- c. Source / Move under Menu
- d. Move previous Menu screen
- e. Display the Menu screen


※ Power button is jog stick type button and it operates different functions by pushing it to Up/Down/Left/Right.

1-2-2. Rear Panels

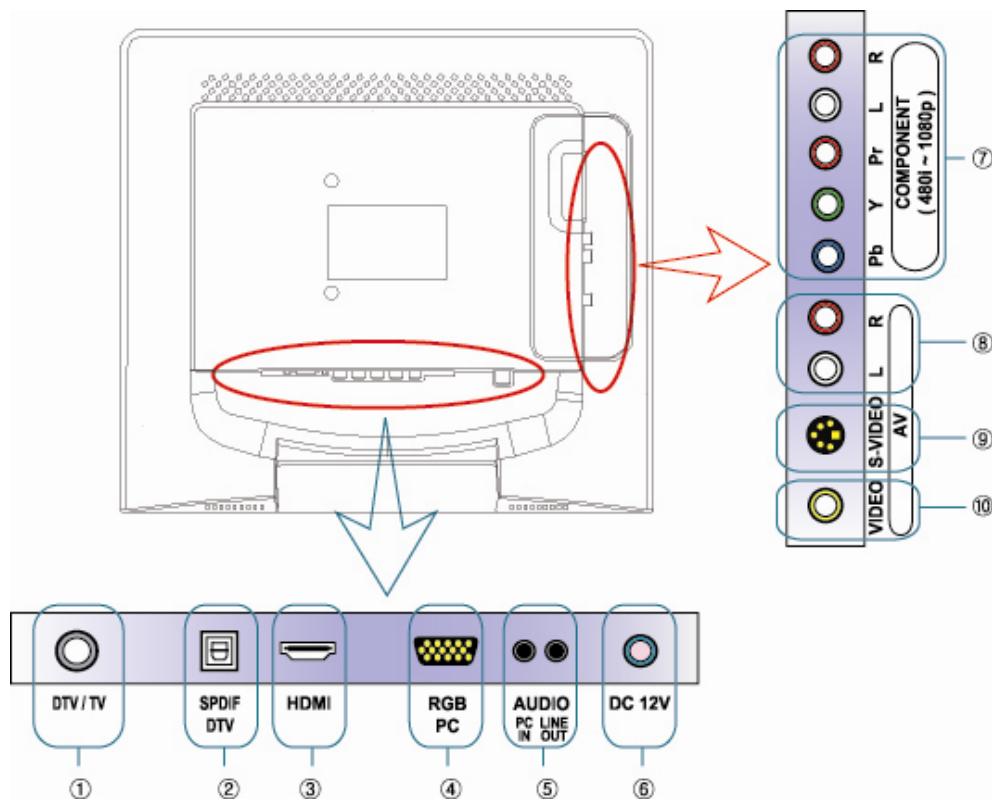

- ① DTV / Analog TV Antenna Input
- ② SPDIF (ATSC) Out
- ③ HDMI Input
- ④ PC Input
- ⑤ PC Audio Input / Lineout (External Speaker)
- ⑥ Power Input
- ⑦ Component Input (Video / Audio)
- ⑧ Audio L/R Input
- ⑨ S-Video Input
- ⑩ Video Input

1-3. Remote Control

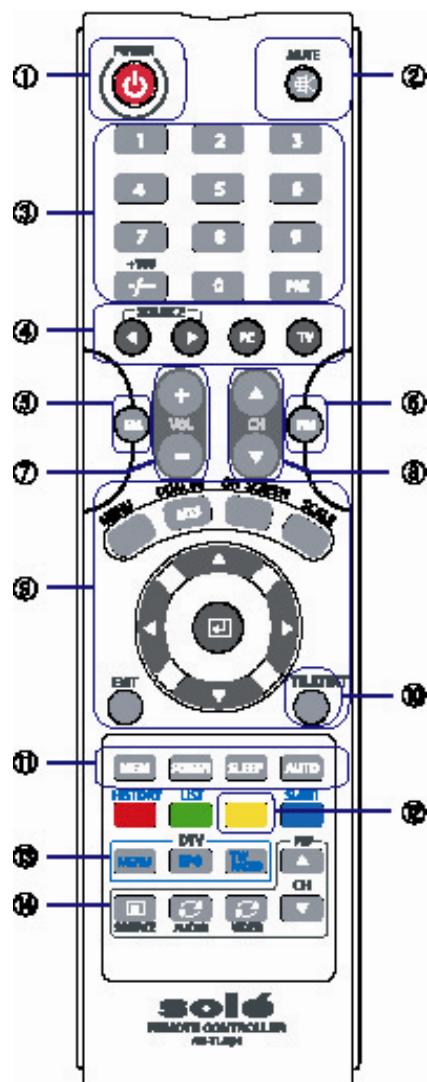

- ① Power On/Off
- ② Sound off Temporarily
- ③ Channel Selection Button
- ④ TV & Input Source Selection Button
- ⑤ Control Sound Mode
- ⑥ Control Picture Mode
- ⑦ Volume Control Button
- ⑧ Channel Control Button
- ⑨ Menu Control Button
- ⑩ Caption On/Off
- ⑪ TV Functions (Hot-key)
- ⑫ Set the still image (Freeze)
- ⑬ Electronic Program Guide
- ⑭ Not available

* The remote control provided is available up to 7m from the optical receiving part within Left/Right 30°.


Functions by remote control buttons

Button	Function	Button	Function
POWER	Power On/Off	MUTE	Sound off Temporarily
0 ~ 9	Numeric Buttons	+100, -/-	TV : Channel input (cable) for over CH 99 DTV : Hyphen for Digital channel
PRE	Previous Channel		
VOL + -	Set the volume	CH ▲ ▼	Select the channel
SOURCE	Select the Input Source (TV→DTV →VIDEO→S-VIDEO→RGB→HDMI→COMPONENT)		
PC	Select PC	TV	Select TV/DTV
SM	Select Sound Mode (Standard → Music → Movie → News → User)		
PM	Select Picture Mode (Standard → Soft → Dynamic → Movie1 → Movie2 → User)		
MENU	Display the Menu screen		
MTS	Change MTS to match the television broadcast signal for TV/DTV		
ON SCREEN	Display the current channel (or input source) information on the screen.		
SCALE	Select the screen size		
◀/▶ /▲ /▼ / ↺	Select a desired item on the screen		
EXIT	Exit Menu		
TELETEXT	Caption ON/OFF	MEM	Add/Remove TV channel
SCREEN	Not available		
SLEEP	Sleep Timer setting (Off ~ 180minutes)		
AUTO	Auto Adjustment for PC input source only		
Red Button	Not available	Green Button	Not available
Blue Button	Not available	Yellow Button	Set the still image.
DTV(MENU)	Not available	DTV(EPG)	DTV EPG : Not available
DTV(TV/RADIO)	Not available		
PIP(CH ▲ ▼)	Not available	PIP(SOURCE)	Not available
PIP(AUDIO)	Not available	PIP(VIDEO)	Not available

1-4. MENU Configuration


Most functions of the TV set can be controlled by MENU and selection buttons on the remote control, so learning how to operate them would be convenient for you.

1) Menu Configuration

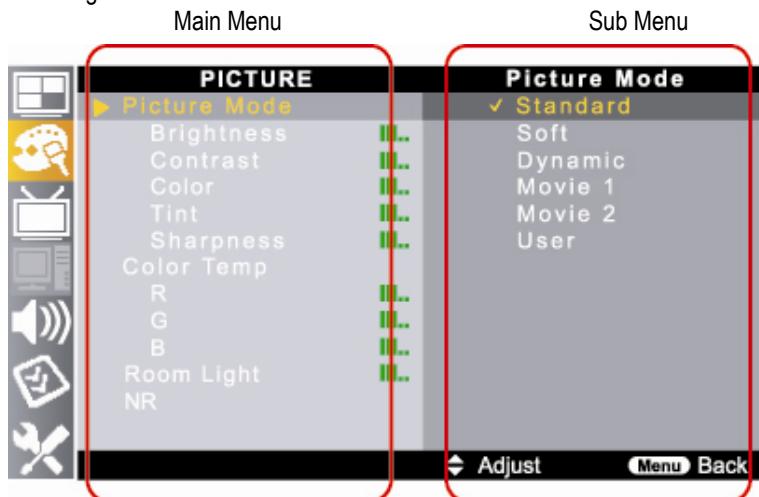

2) Using Remote Control

- ① Press **MENU** button on the remote control to display main menu.
- ② Press Menu control button (**▶**) to move to sub menu of a selected main menu.
- ③ Press **EXIT** button for turning off the menu screen.
- ④ To move among menus, use Menu control buttons (**▲/▼**).
- ⑤ To change a selected menu setting, use Menu control buttons (**▲/▼**).

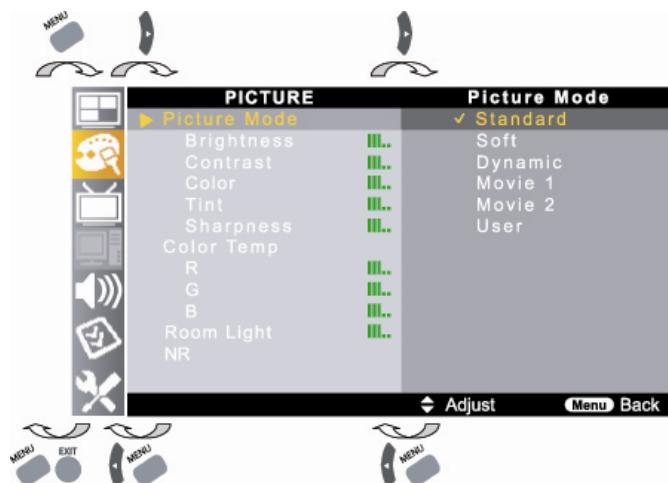

1-5. Insert Remote Control Batteries

- ① Remove the battery cover.
- ② Insert two "AAA" size batteries.
(Place the batteries with their terminals corresponding to the + / - indications in the battery compartment.)
- ③ Re-attach the battery cover.

CAUTION

- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they are worn out. Chemicals that leak from batteries that come in contact with skin can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control unit for an extended period of time, remove batteries from it.
- Keep batteries away from children and pets.

<u>CHAPTER 2. Connection</u>	<u>18</u>
<u>2-1. Preparation</u>	<u>18</u>
<u>2-2. Connecting Power</u>	<u>18</u>
<u>2-3. Connecting TV Antenna</u>	<u>18</u>
<u>2-4. Connecting Video / S-Video</u>	<u>19</u>
<u>2-5. Connecting DVD</u>	<u>19</u>
<u>2-6. Connecting HDMI</u>	<u>20</u>
<u>2-7. Connecting PC</u>	<u>21</u>
<u>2-8. Connecting Lineout (External Speaker)</u>	<u>21</u>
<u>2-9. Source Selection</u>	<u>22</u>

CHAPTER 2. Connection

You can connect many types of external equipment to your TV. To view external source images, select the input source from <SOURCE> on the remote control or on the TV.

2-1. Preparation

* Before connecting your TV to external equipments, please refer to following instructions.

Before Connection :

1. Please read the relevant operation manual (DVD player, etc.) carefully before making connections.
2. Refer to your external equipment operation manual for the signal type.
3. Whenever you connect an audio or video system to your TV, ensure that all elements are switched off.
4. When connecting an external device, match the color of the connection terminal to the cable.


2-2. Connecting Power

1. You can use the TV in USA (ATSC & NTSC area).
2. The TV automatically adjusts voltage.

Before connecting power, please check your power adapter type for wall outlet connection.

3. Power cable should be firmly connected to the wall outlet and DC adapter in order not to be pulled out or shake.

2-3. Connecting TV Antenna

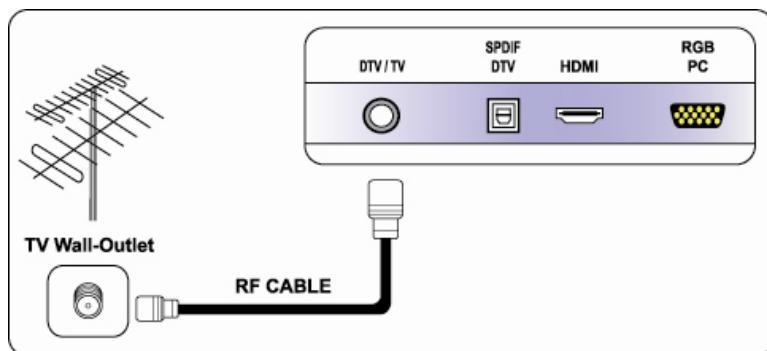

1. Connect RF cable to TV <ANTENNA> & <CABLE> input connector with an outdoor or wall outlet antenna output.

- For watching analog TV, please connect wall outlet with [Cable] input.
- For watching digital TV, please connect wall outlet with [Antenna] input.


2. Turn on the TV after all connection.

► Watching Analog TV & Digital TV

Analog TV signal has its channel number structure of 1, 2, 3, 4, 5, etc., but Digital TV signal has its channel number structure of 1-1, 2-1, 3-1, 4-1, 5-1, etc.


If you press TV button on the remote control, its input source changes from Analog to Digital or Digital to Analog.

2-4. Connecting Video / S-Video

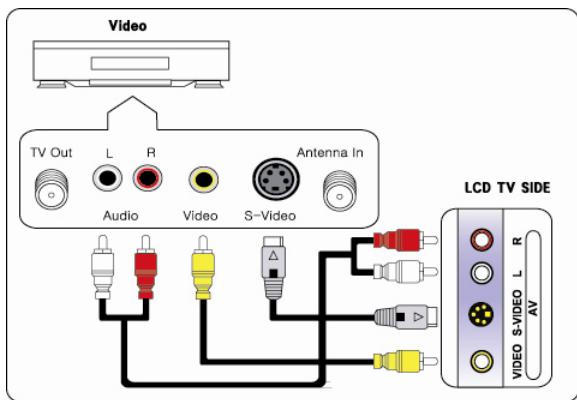


1. Connect Video/Audio cable and S-Video cable to video port of the TV and camcorder, game machines, VCR, DVD player or Set-Top box.
2. Cables must be connected to ports of the same colors.
3. Video & S-Video use same audio line, so if you connect different external equipments with video & S-Video, you can listen only one sound of two different equipment.
4. Press **SOURCE** button on the remote control and select Video or S-video.
Video, S-Video and audio cables are not included.

2-5. Connecting DVD

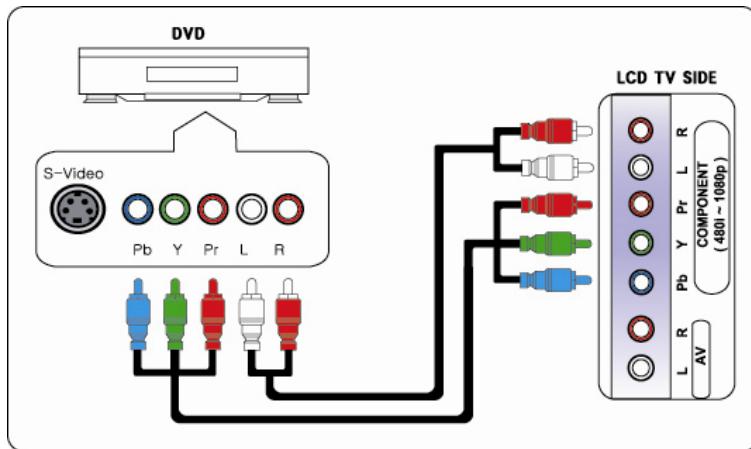

1. Connect component cable to component ports of TV and DVD player, VCR, Set-Top box or camcorder.
2. Cables must be connected to ports of the same colors.
Component and audio cables are not included.


2-6. Connecting HDMI

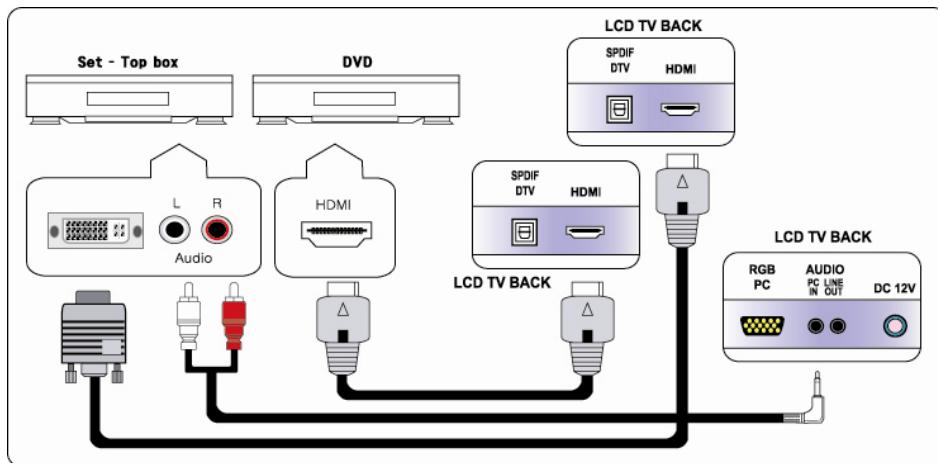

1. Connect HDMI cable to HDMI ports of TV and DVD player, VCR, Set-Top box or camcorder.
2. If you would like to connect DVI of external equipment to the TV, you must use specific DVI to HDMI cable.
HDMI and audio cables are not included.

► For watching digital (DVD, Camcorder, etc) signal ;


1. Press **Source** button on the remote control and select HDMI.
2. Go into SETUP menu (MENU-> SETUP-> PC/Settop Mode) and select <Settop>.

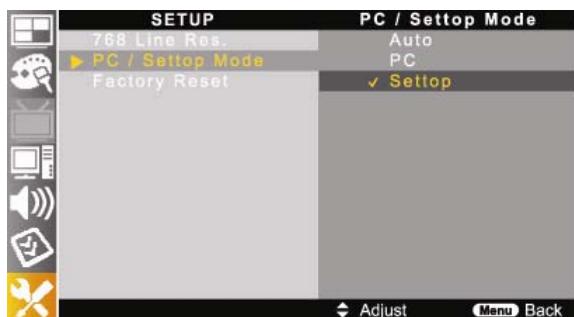

◊ **CAUTION :**

1. HDMI does not support PCM (Pulse Code Modulation) type.
(It does not support 5.1 CH Dolby Surround.)
2. If you select Dolby system on your AV equipment, there will be no sound.
3. HDMI supports up to Ver. 1.1.

2-7. Connecting PC

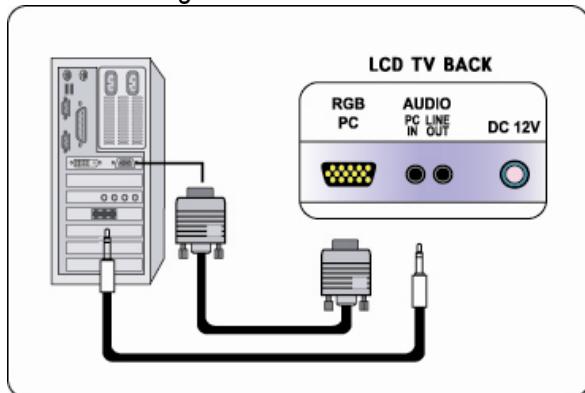

1. Connect D-Sub cable to D-Sub port on the TV and PC.
2. Connect audio cable to audio output of a PC (stereo jack) and PC audio input port of the TV.
D-Sub & stereo cables are not included.

◊ **NOTE :**


Optimal Resolution is 1024 X 768 @ 60Hz.

► For selecting PC input source;

1. Press **PC** or **Source** button on the remote control to select PC (RGB) source.

 **NOTE : Select PC mode on the menu (Menu->Setup->PC/Setup Mode).**


2-8. Connecting Lineout (External Speaker)

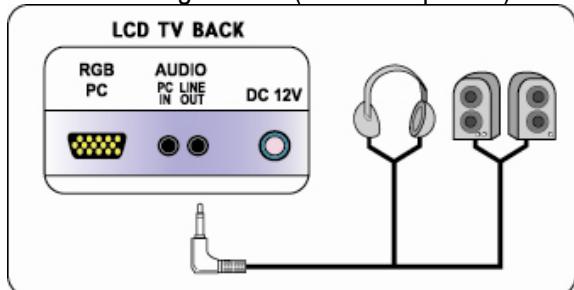

1. Connect External Speaker to the Lineout port of the TV.
2. Please use 8ohms impedance headphone or external speaker. Otherwise output volume may be too low or too loud.
3. In case of connecting to speakers, connect speakers with amps. If connected with speakers without amps, the output volume may be low.

2-9. Source Selection

1. Press **SOURCE** button on the remote control and select input source.
2. Each time **SOURCE** is pressed, source item toggles between <TV → DTV → VIDEO → S-VIDEO → RGB → HDMI → COMPONENT>.
3. If you would like to select input source without changing screen image, press SOURCE button and move to your wishes input source by pressing **◀/▶ /▲ /▼** buttons and enter **◀** to select.

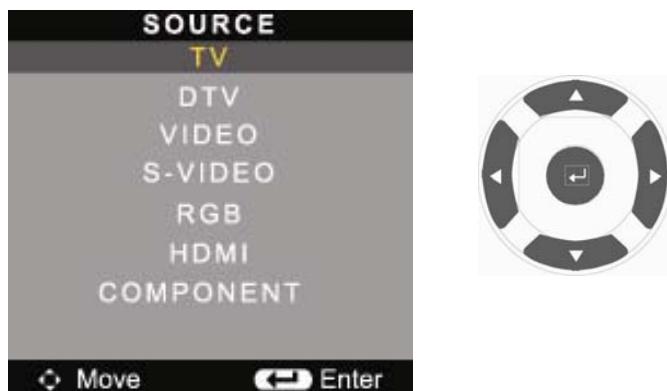

CHAPTER 3. Remote Control 24
3-1. Use Remote Control 24

CHAPTER 3. Remote Control

3-1. Use Remote Control

1) Changing Channels



- ① Using CH buttons (Δ/∇) on the remote control to change channels.
- ② Using remote control buttons $0-9$, $-$ (hyphen) to select channels.
- ③ Using CH button (Δ/∇) on the TV for changing channels.

2) Changing Volume



- ① Press $\text{VOL } (+/-)$ buttons on the remote control to increase/decrease the volume.
- ② $\text{VOL } (\blacktriangleleft/\blacktriangleright)$ buttons on the TV operates the same as $\text{VOL } (+/-)$ button on the remote control.

3) Mute




- ① Press MUTE button on the remote control and the sound is silenced.
- ② The muting feature can be released by pressing MUTE button again or one of the $\text{VOL } (\blacktriangleleft/\blacktriangleright, +/-)$ buttons.

4) +100 / CH Hyphen (-)



- ① Press this button on the remote control for selecting over CH 99.
- ② On the DTV mode, you can select each channel with this button.
Press main channel number \rightarrow CH hyphen \rightarrow sub channel number.

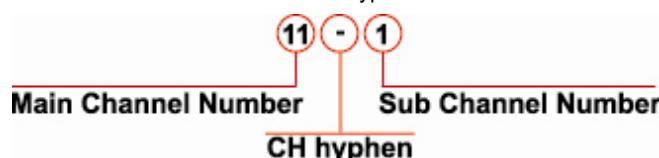

5) Previous Channel



- ① Return to the previous channel.

6) Source Selection



- ① To view external source images, select the input source from SOURCE on the remote control.
Toggle : TV \rightarrow DTV \rightarrow VIDEO \rightarrow S-VIDEO \rightarrow RGB \rightarrow HDMI \rightarrow COMPONENT

7) TV/DTV Selection



- ① To view analog TV or digital TV source image, select input source from TV on the remote control.
Toggle : TV \leftrightarrow DTV

8) PC Selection



- ① To select PC input source, press PC button on the remote control.

9) Sound Mode



- ① Press SM button on the remote control for displaying the sound mode setting menu
- ② Toggle : Standard \rightarrow Music \rightarrow Movie \rightarrow News \rightarrow User

10) Picture Mode



- ① Press PM button on the remote control for displaying the picture mode setting menu
- ② Toggle : Standard \rightarrow Soft \rightarrow Dynamic \rightarrow Movie1 \rightarrow Movie2 \rightarrow User

11) Menu

① Display the menu screen or go previous step.

12) MTS (Multi-channel Television Sound)

① The TV with MTS can receive mono/stereo/Secondary Audio Programs (SAP), which could be audio in another language.
MTS only operates while in TV mode.

13) On Screen

① Press **ON SCREEN** button on the remote control to display the current channel or input source information on display.
② Press the button again or wait for 5 seconds to remove the information.
There will be channel or input source type, station name, etc.

14) Scale

① Select the screen size.
② For TV, DTV, VIDEO, S-VIDEO, HDMI, COMPONENT
Toggle : Auto → Full → 16:9 → Zoom1 → Zoom2
③ For PC : Fill All → 1:1 → Aspect Ratio

15) ▲/▼ / ▶/◀ / ↺

① Select a desired item on the screen or adjust a selected item.

16) EXIT Button

① Turn off the menu screen.

17) Caption Button

① Display captions during closed-caption source.

18) Add / Remove Channel

① You may add or remove a channel as your need.
☞NOTE : If you remove a channel, it will be displayed in red color.

19) Sleep Timer

① Allow you to set a time when the TV automatically switches off.
② Each time you press this button, the remaining time setting switches by <Off ~ 180minutes>. This display will disappear after a few seconds, and the sleep timer automatically starts counting down.

20) Auto Adjust

① Automatically adjust the PC image screen.

22) Freeze (Yellow color button)

① Set the still image.
② Press again to return to normal screen..



CHAPTER 4. TV Functions 27

<u>4-1. Watching TV 27</u>
<u>4-2. V-CHIP 30</u>
<u>4-3. Closed Caption 33</u>
<u>4-4. Time Zone Setting 35</u>

CHAPTER 4. TV Functions

4-1. Watching TV

1) Preparation

Perform the following steps before you press **POWER** button on the remote control.

- ① Check whether the TV antenna cable is properly connected.
- ② After checking the power voltage (110V or 220V), connect power cord to the adapter.

2) Turning on the TV

- ① Press **POWER** on the TV or on the remote control button.
- ② Power indicator will be green color after a few seconds.
- ③ Each pressing the button turns on or off the TV.

3) Antenna Setting (Air / Cable)

Make sure what kind of connection is made with your TV when selecting <AIR> or <CABLE>



- ① Press **MENU** button on the remote control and move to <TV - CH Mode>.
- ② Press **▲/▼/◀/▶** buttons to move <CH Mode> item.
- ③ Press **▲/▼** buttons to select <AIR> or <CABLE>

4) Changing Channel

- ① Press CH buttons (**▲/▼**) on the remote control to change channels.
- ② Press numeric buttons (0~9) to go to a desired channel directly.
- ③ Press **▲/▼** buttons on the TV to change channels.



5) Channel Scan

Auto Scan makes the TV look for all channels viewable in the set area.

Depending on the reception condition, it may take more than 10 minutes to complete memorizing channels.

- ① Press **MENU** button on the remote control and move to TV menu by pressing **▲/▼/◀/▶** buttons.
- ② Press **◀/▶** buttons to move <Auto Scan-START>.
- ③ Press **◀** button to start channel searching.



6) Add / Remove Channel

You can set channel selection add or remove as your need.

- ① Move to a channel to add or remove by pressing numeric button (0~9) or CH button.
- ② Press **MENU** button on the remote control and move to <TV - CH Memory> by pressing **▲/▼/◀/▶** buttons.
- ③ Press **▲/▼** buttons to add or remove the selected channel.
- ④ Press **EXIT** button to return to the normal screen.




- ⑤ Also, it can be set with **MEM** button on the remote control.



7) Channel Swap

This function allows you to swap from stored channel to your desired channel.

- ① Move to a stored channel which you wish to swap to desired channel.
- ② Press **MENU** button on the remote control and move to <TV – CH Swap> by pressing **▲/▼/◀/▶** buttons.
- ③ Press **▲/▼** buttons to change desired channel from stored channel on the <Swap CH> item.
- ④ Press **EXIT** button to return to the normal screen.

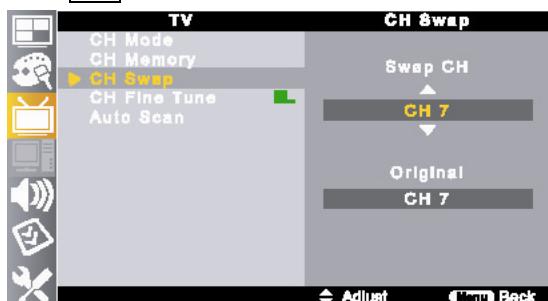

NOTE If your desired channel already has stored channel, the stored channel swaps to desired channel.

This function is available only analog TV not digital TV source.

8) MTS (Multi-channel Television Sound)

The TV has a feature that allows reception of sound other than the main audio sound for the TV program.

The TV with MTS can receive mono, stereo and Secondary Audio Programs (SAP).



- ① Each press **MTS** button on the remote control, MTS item toggles as broadcasting system.
- ② Also, it can be set in OSD menu if JOG button is used.

③ Support Language : English, Spanish, French



9) Signal Strength

You can check digital broadcasts signal strength on the OSD menu.

- ① Press **MENU** button on the remote control and move to <TV – Signal Strength>.
- ② The strength of the digital signal is displayed.
- ③ The signal strength information is based on the current channel.




- ④ If necessary, adjust the direction of the antenna to obtain the maximum signal strength.
- ⑤ If the signal strength is not good enough, the TV image will be displayed as cross stripes.

10) CH Fine Tune

If a searched channel is unclear or sounds abnormally, use <CH Fine Tune> function to adjust it.

- ① Press **MENU** button on the remote control and move to <TV – CH Fine Tune> by pressing **▲/▼/◀/▶** buttons.
- ② Select optimal signal status by pressing **▲/▼** buttons.
- ③ Press **EXIT** button to return to normal screen.

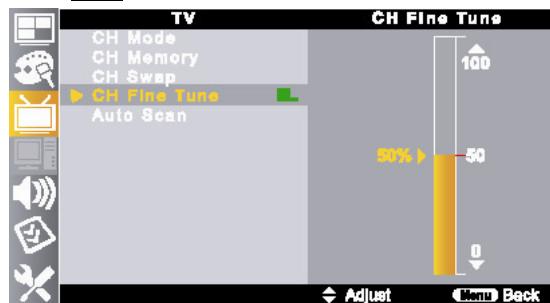

- ④ CH Fine Tune function is available only when receiving analog broadcasting.

4-2. V-CHIP

Parental Control can be used to block specific channels, ratings and other viewing sources.

The Parental Control Function (V-Chip) is used to block program viewing based on the ratings sent by the broadcasting station. The default setting is to allow all programs to be viewed.

Viewing can be blocked by choosing the type of the program and the categories. It is also possible to block all programs viewing for a time period. To use this function, the following must be done :

1. Set ratings and categories to be blocked.
2. Specify a password
3. Enable the lock


1) V-Chip rating and categories

Rating guidelines are provided by broadcasting stations. Most television programs and television movies can be blocked by TV Rating and/or Individual Categories. Movies that have been shown at the theaters or direct-to-video movies use the Movie Rating System (MPAA) only.

2) Ratings for Television programs including made-for-TV movies :

◆ TV-G (General audience)	◆ TV-PG (Parental guidance suggested)
◆ TV-14 (Parents strongly cautioned)	◆ TV-MA (Mature audience only)
◆ TV-Y (All children)	◆ TV-Y7 (Children 7 years older)


3) Personal Identification Number (PIN) Setup

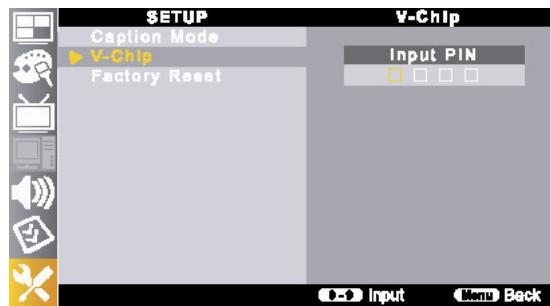

- ① Press the **[MENU]** button.
- ② Press the **[▲ /▼ /◀/▶]** buttons to move to <V-Chip>.
- ③ The message <Input PIN> will appear. Enter your 4 digit PIN number.
The <V-Chip> screen will appear.
- ④ Press the **[▲ /▼]** buttons to move to <Change PIN> and press the **[◀]** button.
- ⑤ The Change PIN screen will appear. Choose any 4 digits for your PIN and enter them.
The default PIN number for a new TV set is <0-0-0-0>.
The <Confirm PIN> screen appears.
- ⑥ Re-enter the same 4 digits. When the Confirm screen disappears, your PIN has been memorized.
- ⑦ Press the **[EXIT]** button to return to the normal screen.



4) How to Enable / Disable the V-Chip Function

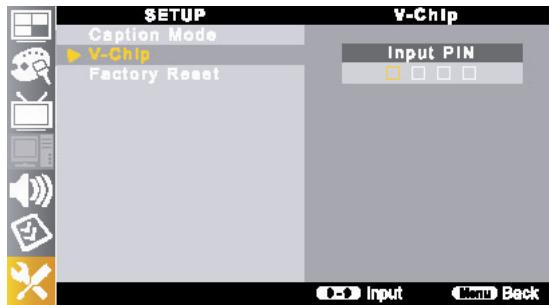


- ① Press the **[MENU]** button.
- Press the **(▲/▼/◀/▶)** buttons to move to <V-Chip>.
- ② The message <Input PIN> will appear. Enter your 4 digit PIN number.
The <V-Chip> screen will appear.
- ③ To enable the V-Chip feature, press the **◀/▶** buttons to move to <On>.
- ④ Press the **[EXIT]** button to return to the normal screen.




5) How to Setup Restrictions using the "TV Guideline"

- ① Press the **[MENU]** button.
- Press the **(▲/▼/◀/▶)** buttons to move to <V-Chip>, then press the **◀** button.
- ② The message <Input PIN> will appear. Enter your 4 digit PIN number.
The <V-Chip> screen will appear.

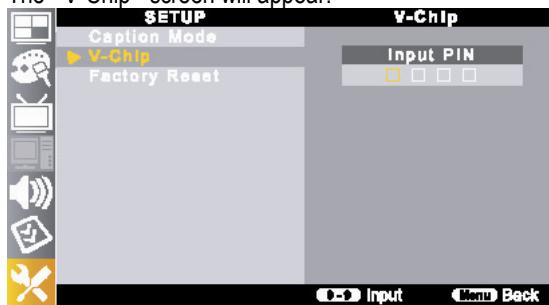

- ③ Press the **(▲/▼)** button to move to <TV Guideline>, then press the **◀** button.
The <TV Guideline> screen will appear.

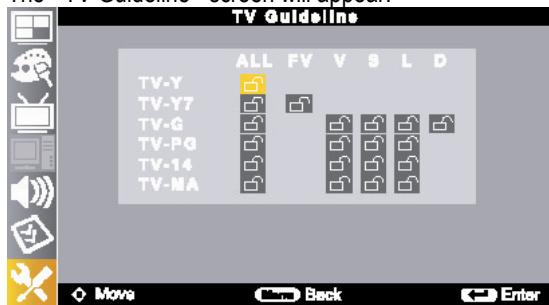

- ④ You can independently lock the TV (FCC) ratings. The blocked TV (FCC) ratings are indicated by a . Press the **▲/▼/◀/▶** buttons and the **◀** button to activate the appropriate restrictions for TV (FCC) Rating

system.

⑤ Press the **EXIT** button to return to the normal screen.

NOTE

- ▶ These categories consist of two separate groups: <TV-Y> and <TV-Y7> (young children through age 7), and <TV-G> through <TV-MA>(everybody else).
- ▶ The restrictions for these two groups work independently: If a household includes very young children as well as young adults, the TV parental guidelines must be set up separately for each age group.

TV (FCC) Age-Based Rating	Important Notes about Parental Locks
TV-Y (All children)	The themes and elements in this program are specifically designed for a very young audience, including children from ages 2 ~ 6.
TV-Y7 (Directed to older children)	Themes and elements in this program may include mild physical or comedic violence, or may frighten children under the age of 7.
TV-G (General audience)	It contains little or no violence, no strong language, and little or no sexual dialog or situations.
TV-PG (Parental Guidance suggested)	The program may contain infrequent coarse language, limited violence, some suggestive sexual dialog and situations.
TV-14 (Parents strongly cautioned)	This program may contain sophisticated themes, sexual content, strong language and more intense violence.
TV-MA (Mature audience only)	This program may contain mature themes, profane language, graphic violence and explicit sexual content.

TV (FCC) Content Category	Content
V	Violence
S	Sexual Content
L	Offensive Language
D	Dialog Sexual Innuendo
FV	Fantasy or Cartoon Violence

6) How to Setup Restrictions Using the "MPAA Rating"

The Movie rating system uses the "MPAA" (Motion Picture Association of America) system, and its main application is for movies. When the rating control is on, the TV will automatically block any programs that are coded with objectionable ratings (either "MPAA Rating" or "TV Parental Guideline").

- ① Press the **MENU** button.
- ② Press the **▲ /▼ /◀/▶** buttons to move to <V-Chip> and press the **◀** button.
- ③ The message <Input PIN> will appear. Enter your 4 digit PIN number.
The <V-Chip> screen will appear.



- ④ You can independently lock the TV ratings. The blocked TV (FCC) ratings are indicated by a .
- ⑤ Press the **▲ /▼ /◀/▶** buttons and the **◀** button to activate the appropriate restrictions for TV (FCC) Rating system.
- ⑥ Press the **EXIT** button to return to the normal screen.

Movie Rating	Description
G	General audience. No restriction
PG	Children under 13 should be accompanied by an adult.
PG-13	Parental guidance suggested. Children under 13 should be accompanied by an adult.
R	Restricted. Viewers should be 17 or older.
NC-17	Not classified. Viewers should be 17 or older.
X	Adults only.
NR	Not rated.

► TV (FCC) ratings: The particular rating that you have selected will be blocked (and indicated as). Also, all of the age-based ratings will be blocked within the particular group (i.e., <group 1> or <group2>). Suppose that the TV-G rating and all of its contents (V, S, L, and D) are blocked. In that case, more restrictive ratings (TV-PG, TV-14, and TV-MA) and all of their contents (V, S, L, and D) are automatically blocked as well.

NOTE

► MPAA ratings: The particular rating that you have selected will be blocked. In addition, more restrictive ratings will be blocked as well.

► Neither TV (FCC) ratings nor MPAA ratings apply to news programs.

4-3. Closed Caption


Closed Caption function allows you to view conversations, narration and sound effects as subtitles on your TV. It is available on some TV programs and some VHS home video tapes at the discretion of the program provider. Digital Closed Caption service is a new caption service available only on digital TV programs (also at the discretion of the service provider). It is more flexible system than the original Closed Caption system, because it allows a variety of caption sizes and font style.

Not all programs and VHS videotapes offer closed captions. Please look for the <CC> symbol to ensure that captions will be shown.



1) Closed Caption Setup

- ① Press **TELETEXT** button on the remote control to select desired caption mode.
- ② Select caption mode as follows;
 - Analog : Off – CC1 – CC2 – CC3 – CC4 – Text1 – Text 2 – Text 3 – Text4
 - Digital : Off - Service1 - Service2 - Service3 - Service4 - Service5 - Service6

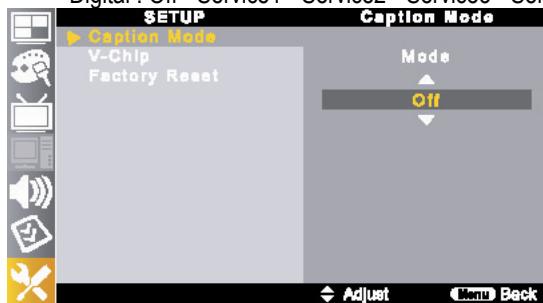

2) Font Setting (Digital Closed Caption only)

This function allows you to adjust the digital closed caption screen appearance to suit your preference.

- ① Press **[MENU]** button on the remote control and move to <SETUP – Caption Mode> and execute caption.
- ② Press **▲ /▼ /◀/▶** buttons to move <SETUP – Font Option> and press the **◀** button.



- ③ Press **▲ /▼ /◀/▶** buttons to select digital closed caption screen appearance.
- ④ Press **[EXIT]** button to return to the normal screen.

Menu	Description	Item
Size	Font size	Standard – Large – Small
Style	Font style	Style0 ~ Style 7
Background Color	Font background color	(White) – Black – Red – Green – Blue – Yellow – Magenta - Cyan
Foreground Color	Font color	White – (Black) – Red – Green – Blue – Yellow – Magenta - Cyan
Edge Color	Edge table color	White – Black – Red – Green – Blue – Yellow – Magenta - Cyan
Background Opacity	Font background opacity	Solid – Flashing – Translucent – Transparent
Foreground Opacity	Font color opacity	Solid – Flashing – Translucent – Transparent
Edge Style	Edge table style	Style0 ~ Style5


- ⑤ Select different color of "Background Color" and "Foreground Color".

4-4. Time Zone Setting

Time Zone setting function allows you to select your area for displaying correct time of OSD.

- ① Press **MENU** button on the remote control.
- ② Press **▲ /▼ /◀/▶** buttons to move <SETUP – Time Zone>.
- ③ Press **▲ /▼** buttons to select your desired time zone.

Toggle : Eastern – Central – Mountain – Pacific – Alaska – Hawaii – Atlantic - Newfoundland

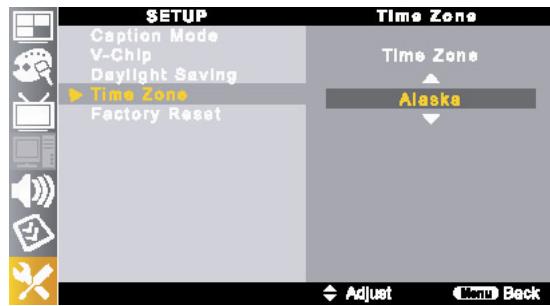

- ④ Press **EXIT** button to return to the normal screen.

CHAPTER 5. Picture Mode 37

5-1. Picture Mode Setting 37

5-2. Picture Mode – <User> Setting 37

5-3. Image Scale Setting 38

CHAPTER 5. Picture Mode

5-1. Picture Mode Setting

Adjust the picture to your preference with the following picture settings.

- ① Press **MENU** button on the remote control.
- ② Press **▲ /▼ /◀/▶** buttons to move <PICTURE – Picture Mode>.
- ③ Select your preference picture mode by pressing **▲ /▼** buttons.
Toggle : Standard – Soft – Dynamic – Movie1 – Movie2
- ④ Also, it can be set by pressing **PM** button on the remote control.



Mode	Description
Standard	This mode is standard picture mode to watch the TV.
Soft	This mode is soft picture mode to watch the TV a film in dark room or you feel too bright.
Dynamic	This is sharp picture mode to watch the TV in bright room.
Movie1	This mode is better to watch bright screen picture.
Movie2	This mode is better to watch dark screen picture.
User	This mode allows you to set to your preference status.


5-2. Picture Mode – <User> Setting

This function allows you to set the picture to your desired status by controlling each items.

Press **MENU** button on the remote control and move to <PICTURE – Picture Mode>.

Select <User> by pressing **▲ /▼** buttons.

Item	Description
Brightness	Adjust screen brightness.
Contrast	Adjust screen contrast.
Color	Adjust screen color.
Tint	Adjust screen tint. If its level is close to red 50, skin tones become reddish. If its level is close to green 50, skin tones become greenish.
Sharpness	Adjust screen sharpness. If its level is close to 100, the sharpness becomes sharper.
Color Temp	Adjust screen color temperature to be natural.
R / G / B	Adjust color temperature to the desired level.
Room Light	Adjust screen brightness depends on the room brightness.
NR	If the broadcast signal received by your TV is weak, you can activate the Digital Noise Reduction feature to help reduce any static and ghosting that may appear on the screen.

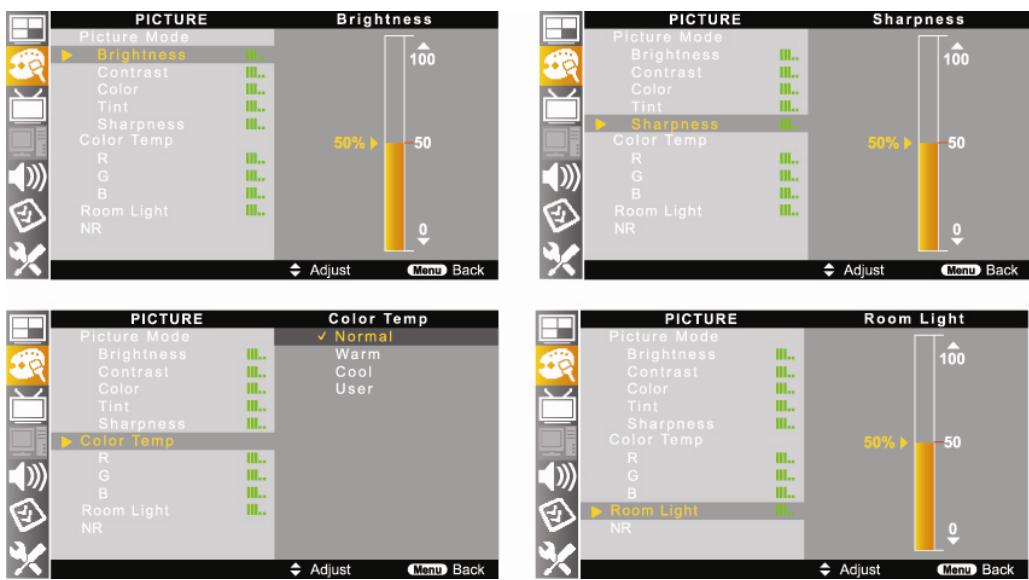

5-3. Image Scale Setting

Image Scale setting allows you to select your desired screen scale size.



- ① Press **SCALE** button on the remote control.
- ② Press **▲ /▼ /◀/▶** buttons to move <SCREEN – Image Scale>.
- ③ Press **EXIT** button to return to the normal screen.
- ④ Also, it can be set by JOG button on the TV or **MENU** button on the remote control.

Item	Description
Auto	Automatically set the screen as broadcasting signal scale.
Full	Set the scale to full size of screen.
16:9	Set the scale to 16:9 of screen.
Zoom1	Set the scale to zoom in horizontally and vertically for 16:9 of screen.
Zoom2	Set the scale to zoom in vertically for 16:9 of screen.



- ⑤ On PC mode, the Image Scale toggles <Fill All – 1:1 – A. Ratio>.

CHAPTER 6. Sound Mode 40

6-1. Sound Mode Setting 40

6-2. Sound Mode – <User> Setting 40

6-3. Surround Sound Mode Setting 40

CHAPTER 6. Sound Mode

6-1. Sound Mode Setting

Sound Mode setting allows you to select your desired sound mode.



- ① Press **SM** button on the remote control.
- ② Each press of this button, sound mode toggles <Standard → Music → Movie → News → User>.
- ③ Also, it can be selected by pressing **MENU** button on the remote control.




Item	Description
Standard	This mode is standard sound mode to watch the TV generally.
Music	This mode is better to watch a music program.
Movie	This mode is better to watch a movie program.
News	This mode is better to watch a news program.
User	This mode allows you to set to your preference status.

6-2. Sound Mode – <User> Setting

This function allows you to set the sound to your desired status by controlling each items.

- ① Press **MENU** button on the remote control and move to <SOUND – Sound Mode>.
- ② Select <User> by pressing **▲ / ▼** buttons.
- ③ Change each item (Balance, 300Hz, 600Hz, 3KHz, 12KHz and 16KHz) to your desired level.

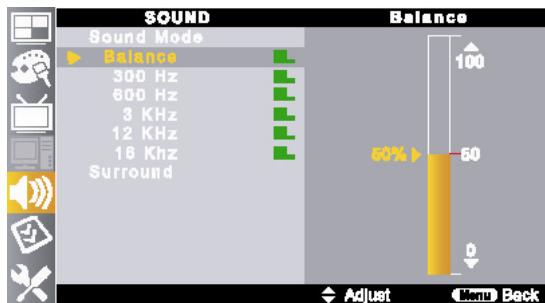


6-3. Surround Sound Mode Setting

The surround sound feature expands the audio listening field wider and deeper to create exception sound quality from the TV's speakers.

- ① Press **MENU** button on the remote control and move to <SOUND – Surround>.

② Press **▲ / ▼** buttons to select surround “On” or “Off”.

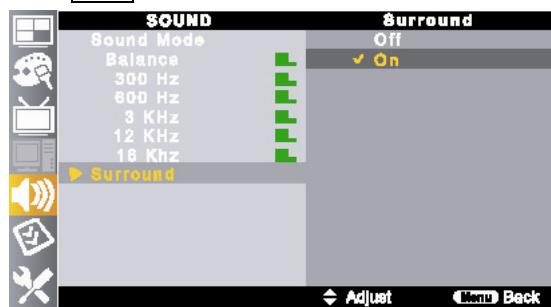

③ Press **EXIT** button to return to the normal screen.

CHAPTER 7. Timer Setting 43

7-1. Sleep timer 43

7-2. Menu Timeout43

CHAPTER 7. Timer Setting

7-1. Sleep timer

This function allows you to have the TV automatically turn off at a predetermined time.



- ① Press **SLEEP** button on the remote control.
- ② Press **◀/▶** buttons to set to your desired predetermined turn off time.
Toggle : Off ~ 180minutes
- ③ Also, it can be set by JOG OSD button on the TV or **[MENU]** button on the remote control.



- ④ This function is automatically erased the remaining time if you turn off the TV before turning off on sleep timer set.

7-2. Menu Timeout

This function allows you to have the TV OSD menu automatically turn off at a predetermined time.

- ① Press **[MENU]** button on the remote control and move to <OPTION – Menu Timeout>.
- ② Press **▲ / ▼** buttons to select your desired predetermined timeout.
Toggle : Off ~ 60seconds
- ③ Press **EXIT** button to return to the normal screen.



CHAPTER 8. PC Functions 45

- 8-1. Preparation 45**
- 8-2. Auto Adjustment 45**
- 8-3. Phase 45**
- 8-4. H/V Position 46**
- 8-5. Image Scale Setting 46**

CHAPTER 8. PC Functions

8-1. Preparation

Please check following steps before connecting a PC.

- ① Refer to the Standard Signal Modes for PC Monitor.
- ② Make sure to select the same signal values for the output signal of a PC and the input of the TV before connecting with the PC.
Depending on the PC being used, images may not be shown without converting the output signals into external output.
- ③ Please refer to your PC's manuals regarding converting to external output.
- ④ To protect equipment, always turn off the TV before connecting the PC.
- ⑤ Connect the RGB cable making sure that it fits correctly into the PC terminal.
- ⑥ Then, firmly secure the connectors by tightening the hexagonal nuts on both sides of the plug.
- ⑦ Make sure its connection mode is <PC – RGB> on the menu.


< The Standard Signal Modes for PC Monitor >

Resolution (H x V)	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (V/H)
640x480	31.46	59.94	-/-
800 x 600	35.15	56.25	+/+
800 x 600	37.89	60.31	+/+
1024 x 768	48.36	60.00	-/-

OPTIMAL RESOLUTION : 1024 x 768 @ 60Hz

8-2. Auto Adjustment

This function allows you to adjust to the PC signal timing automatically.

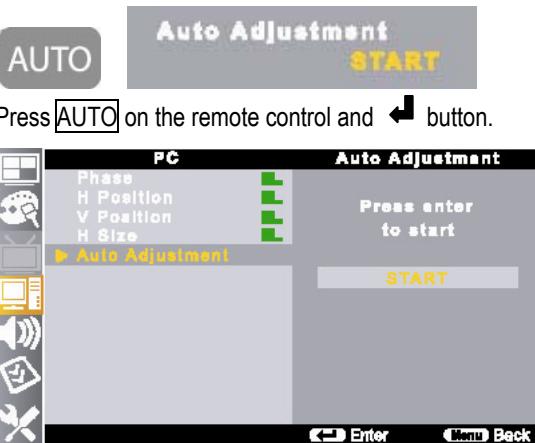

8-3. Phase


This function allows you to control to adjust the PC signal timing by manual.

- ① Press **MENU** button on the remote control and move to <PC – Phase>.
- ② Press **▲ /▼** buttons to set its level.
- ③ Press **EXIT** button to return to the normal screen.




8-4. H/V Position

- ① Press **MENU** button on the remote control and move to <PC – H Position> or <PC – V Position>.
- ② Press **▲/▼** buttons to set the position.
- ③ Press **EXIT** button to return to the normal screen.

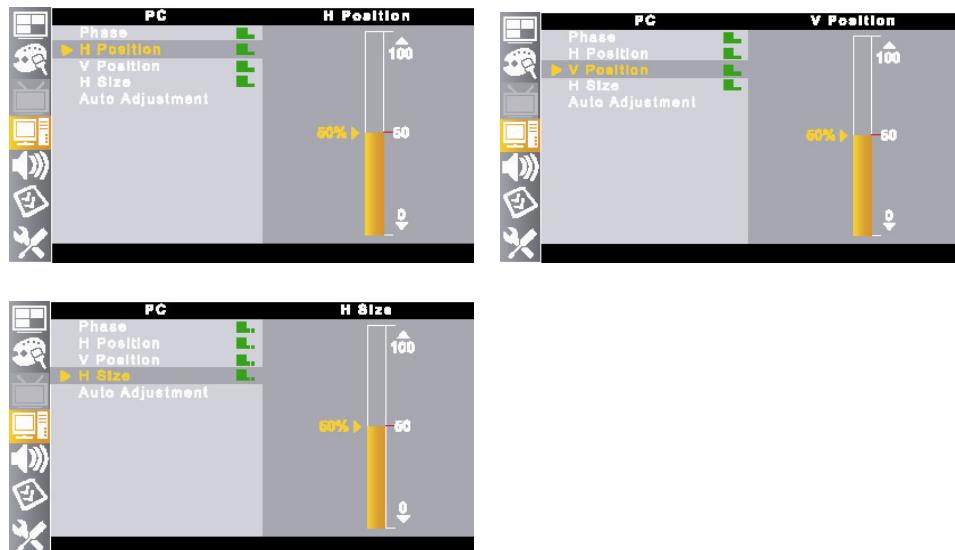

8-5. Image Scale Setting

- ① Press **SCALE** button on the remote control.
- ② Press **◀/▶** buttons to select your preference image scale.
Toggle : Fill All – 1:1 – A. Ratio

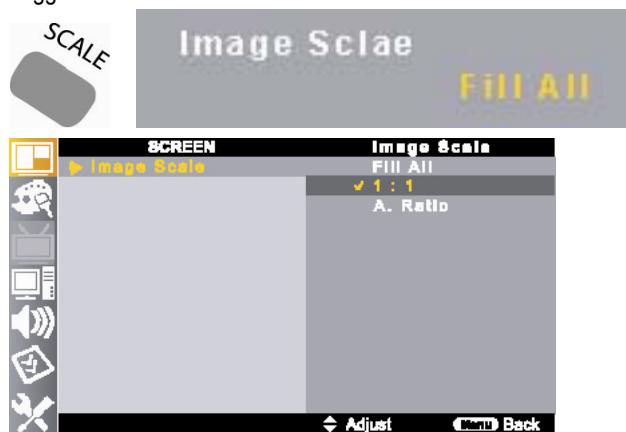


<u>CHAPTER 9. Option Setup</u>	<u>48</u>
<u>9-1. Menu Language</u>	<u>48</u>
<u>9-2. Factory Reset</u>	<u>48</u>
<u>9-3. Version Check</u>	<u>48</u>

CHAPTER 9. Option Setup

9-1. Menu Language

You can select OSD (On Screen Display) language from among English, Spanish and French.

- ① Press **Menu** button on the remote control and move to <OPTION-Menu Language>.
- ② Press **▲ / ▼** buttons to select your desired language.

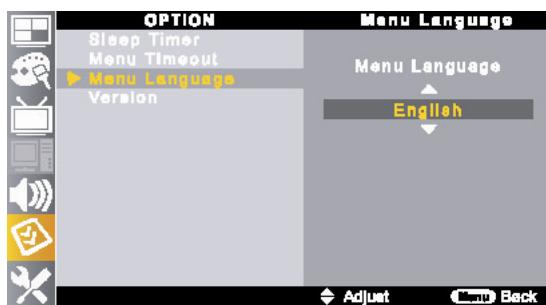

9-2. Factory Reset

Reset all the OSD control settings back to the factory setting status.

- ① Press **Menu** button on the remote control and move to <SETUP-Factory Reset>.
- ② Press enter (⬅) button to start.




9-3. Version Check

It shows the TV production version.

<u>CHAPTER 10. Specifications</u>	<u>50</u>
<u>10-1. Dimensions</u>	<u>50</u>
<u>10-2. Specification</u>	<u>51</u>

CHAPTER 10. Specifications

10-1. Dimensions

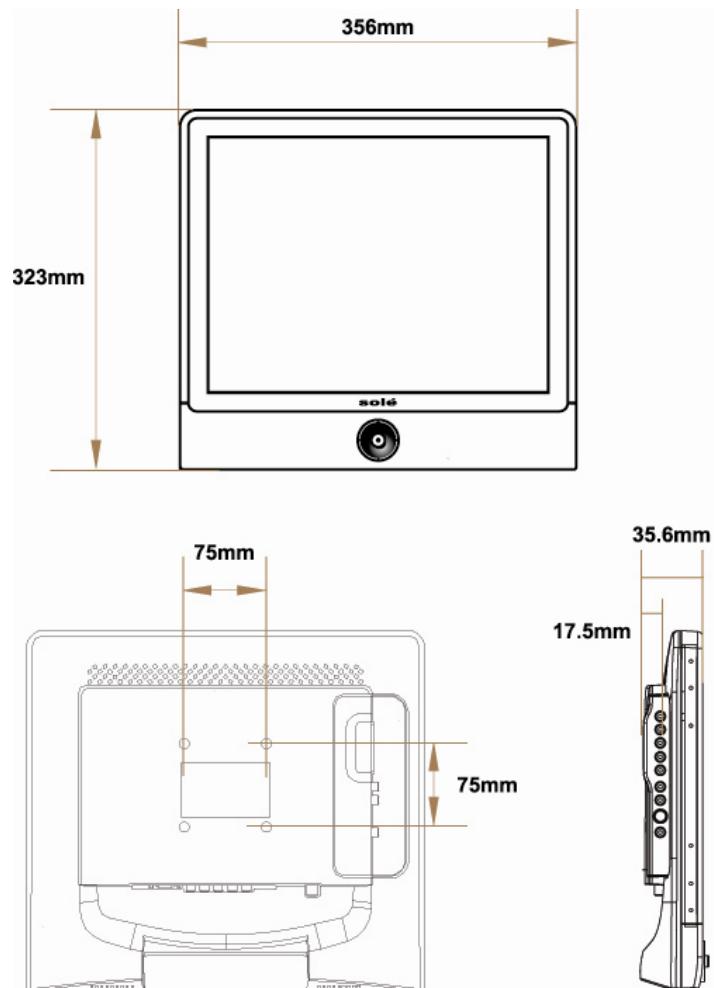

Weight : approx. 4.5kg (before packing) / approx. 5.9kg (after packing)

10-2. Specification

Product Name		15inch TFT-LCD TV
LCD Panel	Type	Amorphous Silicon TFT-LCD
	Size	15inch (diagonal length)
	Resolution	1024 (H) x 768 (V)
	Pixel Pitch	0.297mm x 0.297mm
	Contrast Ratio	500 : 1
	Brightness	450cd/m ²
	Active Area	304.1mm x 228.1mm
	Viewing Angle	L/R : 120° / U/D : 100°
TV Broadcasting System		VHF: 2~13 UHF: 14~69 Cable : 1, 14~135 ATSC/QAM Digital Channel
Audio Output		3W x 2 / Stereo & MTS
PC Monitor	Horizontal Frequency	30 ~ 61KHz
	Vertical Frequency	60 ~ 75Hz
	Colors	16M colors (6bit with FRC)
	Optimal Resolution	XGA : 1024 (H) x 768 (V)
Power	Adaptor Input	100V ~ 240V (Free Voltage)
	Adaptor Output	DC 12V
Power Consumption	In-Operation	< 50W
	Power-Saving Mode / OFF	< 3W
Energy Saving Mode		VESA DPMS

CHAPTER 11 Troubleshooting 53
11-1. Troubleshooting 53

CHAPTER 11 Troubleshooting

11-1. Troubleshooting

Before contacting service to service personnel, please check the followings first.

If you still have the same symptoms even after taking the following actions, contact your local dealer or qualified service personnel.

1) TV-related Troubles

Unclear display or noisy sound

- Check whether TV antenna is correctly connected.
- Broadcasting may not be good in an area with bad reception or far away from a station/network.

No image

- Check whether you connect the power cord properly. And press the **POWER** button.

Black background only

- Check whether the mode is set as PC monitor or Video/S-Video input, not TV mode.

Strips and shaking display

- It may be interrupted by neighboring radio waves (please check any wireless phone, hair drier, electric drilling machine and etc).
- Execute fine tuning for manual adjustment.

Can't catch a specific channel

- Check whether channel setting is normally set.
- Try to rotate an antenna's direction.

Picture plays without sound

- Try to press **MUTE** button.
- Volume up by using **VOL** button.

2) PC Monitor-related Troubles

No image on the monitor

- Check whether the D-Sub cable is firmly connected to the TV and a PC.
- Check whether a graphic card is correctly inserted into the slot.
- Check whether the power of a PC and the TV is on.
- Check whether a graphic card or mode is set appropriately on a PC.
- Referring to the Standard Signal Mode for PC monitor in the previous chapter, change graphic mode.
- Check whether the D-Sub cable pins are not inserted or bent.

No Power

- Check whether the power cord is normally inserted and reconnect it.
- Pull out the power cord from wall outlet and reconnect it in 10~20 minutes.

LED lamp turns off in red and it shows no image

- Check whether the graphic cable is connected to the TV and a PC.
- Check whether a computer is in power-saving mode and attempt to operated keyboard and mouse.

Unstable or unfocused image or trembling

- Check whether the D-Sub cable is connected to the TV and a PC.
- If a PC display mode is changed, the screen needs readjusting, so you need to use Auto Adjustment.
- Check whether the TV and your graphic card are compatible each other and whether it is set as an appropriate refresh rate. If letters look distorted, change the refresh rate to 60Hz.

Abnormal image scale

- By using vertical/horizontal position in Picture Adjustment Menus, adjust the position.
- Try to execute Auto Adjustment function.